

# Service Manual

**COMPACT**  
**disc**  
DIGITAL AUDIO


**DIGITAL**

Multi Compact Disc Player

## SL-PC14

Color

(K)... Black Type

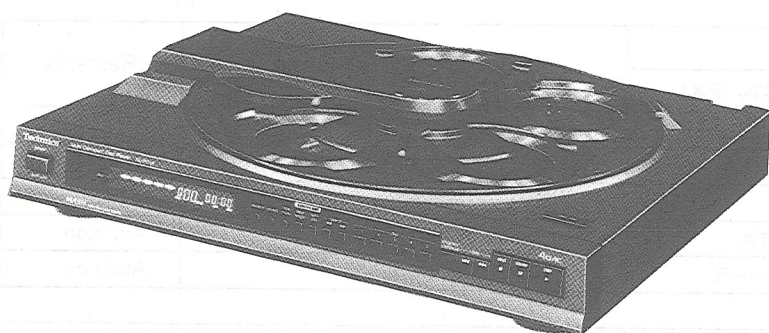

Area

| Country Code | Area         | Color |
|--------------|--------------|-------|
| (PX)         | Far East-PX. | (K)   |

Please file use this service manual together with the service manual for Model No. SL-PC25, Order No. AD9006180C9.

**Notes:** ★ Mentioned in this service manual are the differences from Model No. SL-PC25 for the destination (PX) area.

★ Please note the following major difference when servicing.

- This product is deleted with the remote sensor P.C.B. and remote control transmitter.

## ■ SPECIFICATIONS

(SL-PC25)

|                    |                                                                                                                           |
|--------------------|---------------------------------------------------------------------------------------------------------------------------|
| ■ General          |                                                                                                                           |
| Power supply       | AC 50/60Hz, 110V/127V/220V/240V                                                                                           |
| Power consumption  | 13 W                                                                                                                      |
| Dimensions (W×H×D) | 430×109.5×362 mm<br>(16 <sup>15</sup> / <sub>16</sub> "×4 <sup>5</sup> / <sub>16</sub> "×14 <sup>1</sup> / <sub>4</sub> " |
| Weight             | 4.1 kg<br>(9 lbs)                                                                                                         |



(SL-PC14)

|                    |                                                                                                                          |
|--------------------|--------------------------------------------------------------------------------------------------------------------------|
| ■ General          |                                                                                                                          |
| Power supply       | AC 50/60Hz, 110V/127V/220V/240V                                                                                          |
| Power consumption  | 13 W                                                                                                                     |
| Dimensions (W×H×D) | 430×85.5×362 mm<br>(16 <sup>15</sup> / <sub>16</sub> "×3 <sup>9</sup> / <sub>16</sub> "×14 <sup>1</sup> / <sub>4</sub> " |
| Weight             | 3.3 kg<br>(7.3 lbs)                                                                                                      |

# Technics

Matsushita Electric Industrial Co., Ltd.  
Central P.O. Box 288, Osaka 530-91, Japan

Panasonic Tokyo Sales Department  
Matsushita Electric Industrial Co., Ltd.  
World Trade Center Bldg., 4-1, Hamamatsu-cho,  
2-chome, Minato-ku, Tokyo 105, Japan

# CHANGES


## CHANGE IN REPLACEMENT PARTS LIST

- Notes:**
1. Mentioned in this parts list are only those different from Model No. SL-PC25 (PX) all other parts are the same as for SL-PC25 (PX).
  2. Important safety notice:  
Components identified by  $\Delta$  mark have special characteristics important for safety.  
When replacing any of these components use only manufacturer's specified parts.

| Ref. No.              | Change of Parts No. |                | Part Name & Description      | Remarks  |
|-----------------------|---------------------|----------------|------------------------------|----------|
|                       | SL-PC25 (PX)        | ➔ SL-PC14 (PX) |                              |          |
| INTEGRATED CIRCUIT(S) |                     |                |                              |          |
| IC601                 | HC-MD10E            |                | I.C. REMOTE CONTROL RECEIVER | Deletion |
| TRANSISTOR(S)         |                     |                |                              |          |
| Q472                  |                     | UN4212TA       | TRANSISTOR                   | Addition |
| Q473                  |                     | 2SA1309A—R     | TRANSISTOR                   | Addition |
| DIODE(S)              |                     |                |                              |          |
| D473                  |                     | MA4091—M       | DIODE                        | Addition |
| D474                  |                     | 1SS254TA       | DIODE                        | Addition |
| COIL(S)               |                     |                |                              |          |
| L473                  |                     | RLQZP3R3KT—Y   | COIL                         | Addition |
| CONNECTOR(S)          |                     |                |                              |          |
| CN401                 | SJSD0305            |                | CONNECTOR (3P)               | Deletion |
| CABLE(S)              |                     |                |                              |          |
| FC401                 | REZ0222             |                | FLAT CABLE                   | Deletion |
| JACK(S)               |                     |                |                              |          |
| JK401                 |                     | RJJ33TR01      | REMOTE CONTROL               | Addition |
| RESISTORS             |                     |                |                              |          |
| R474                  |                     | ERDS2TJ103     | RESISTOR, 1/4W 10K           | Addition |
| R475                  |                     | ERDS2TJ562     | RESISTOR, 1/4W 5.6K          | Addition |
| R476                  |                     | ERDS2TJ272T    | RESISTOR, 1/4W 2.7K          | Addition |
| R477                  |                     | ERDS2TJ100     | RESISTOR, 1/4W 10            | Addition |
| CABINET AND CHASSIS   |                     |                |                              |          |
| 1                     | RKC0002             |                | HINGE                        | Deletion |
| 3                     | RGK0060             |                | FOOT                         | Deletion |
| 4                     | RFKKLPC25PXK        | RFKKLPC14PXK   | CABINET ASS'Y                | Change   |
| 29                    | SHRD170             |                | COVER, REMOTE CONTROL SENSOR | Deletion |
| 30                    | RYF0082             |                | DUST COVER                   | Deletion |
| 31                    | RMG0146             |                | RUBBER CUSHION               | Deletion |
| PACKING MATERIAL      |                     |                |                              |          |
| P1                    | RPG0491             | RPG0743        | PACKING CASE                 | Change   |
| P2                    | RPN0338A            | RPN0146A       | PAD (FRONT)                  | Change   |
| P3                    | RPN0338B            | RPN0146B       | PAD (BACK)                   | Change   |
| P7                    | RPF0024             |                | PROTECTION BAG (DUST COVER)  | Deletion |
| ACCESSORIES           |                     |                |                              |          |
| A1                    | RQT0502—P           | RQT0498—P      | INSTRUCTION MANUAL           | Change   |
| A2                    | SQX7071—1           |                | WARRANTY CARD                | Deletion |
| A5                    | EUR64789B           |                | REMOTE CONTROL TRANSMITTER   | Deletion |
| A6                    | UR64EC804           |                | BATTERY COVER                | Deletion |
| A8                    | RYF0082             |                | DUST COVER                   | Deletion |
| A10                   |                     | SJP2257T       | L-TYPE CABLE                 | Addition |





## ■ PRINTED CIRCUIT BOARDS

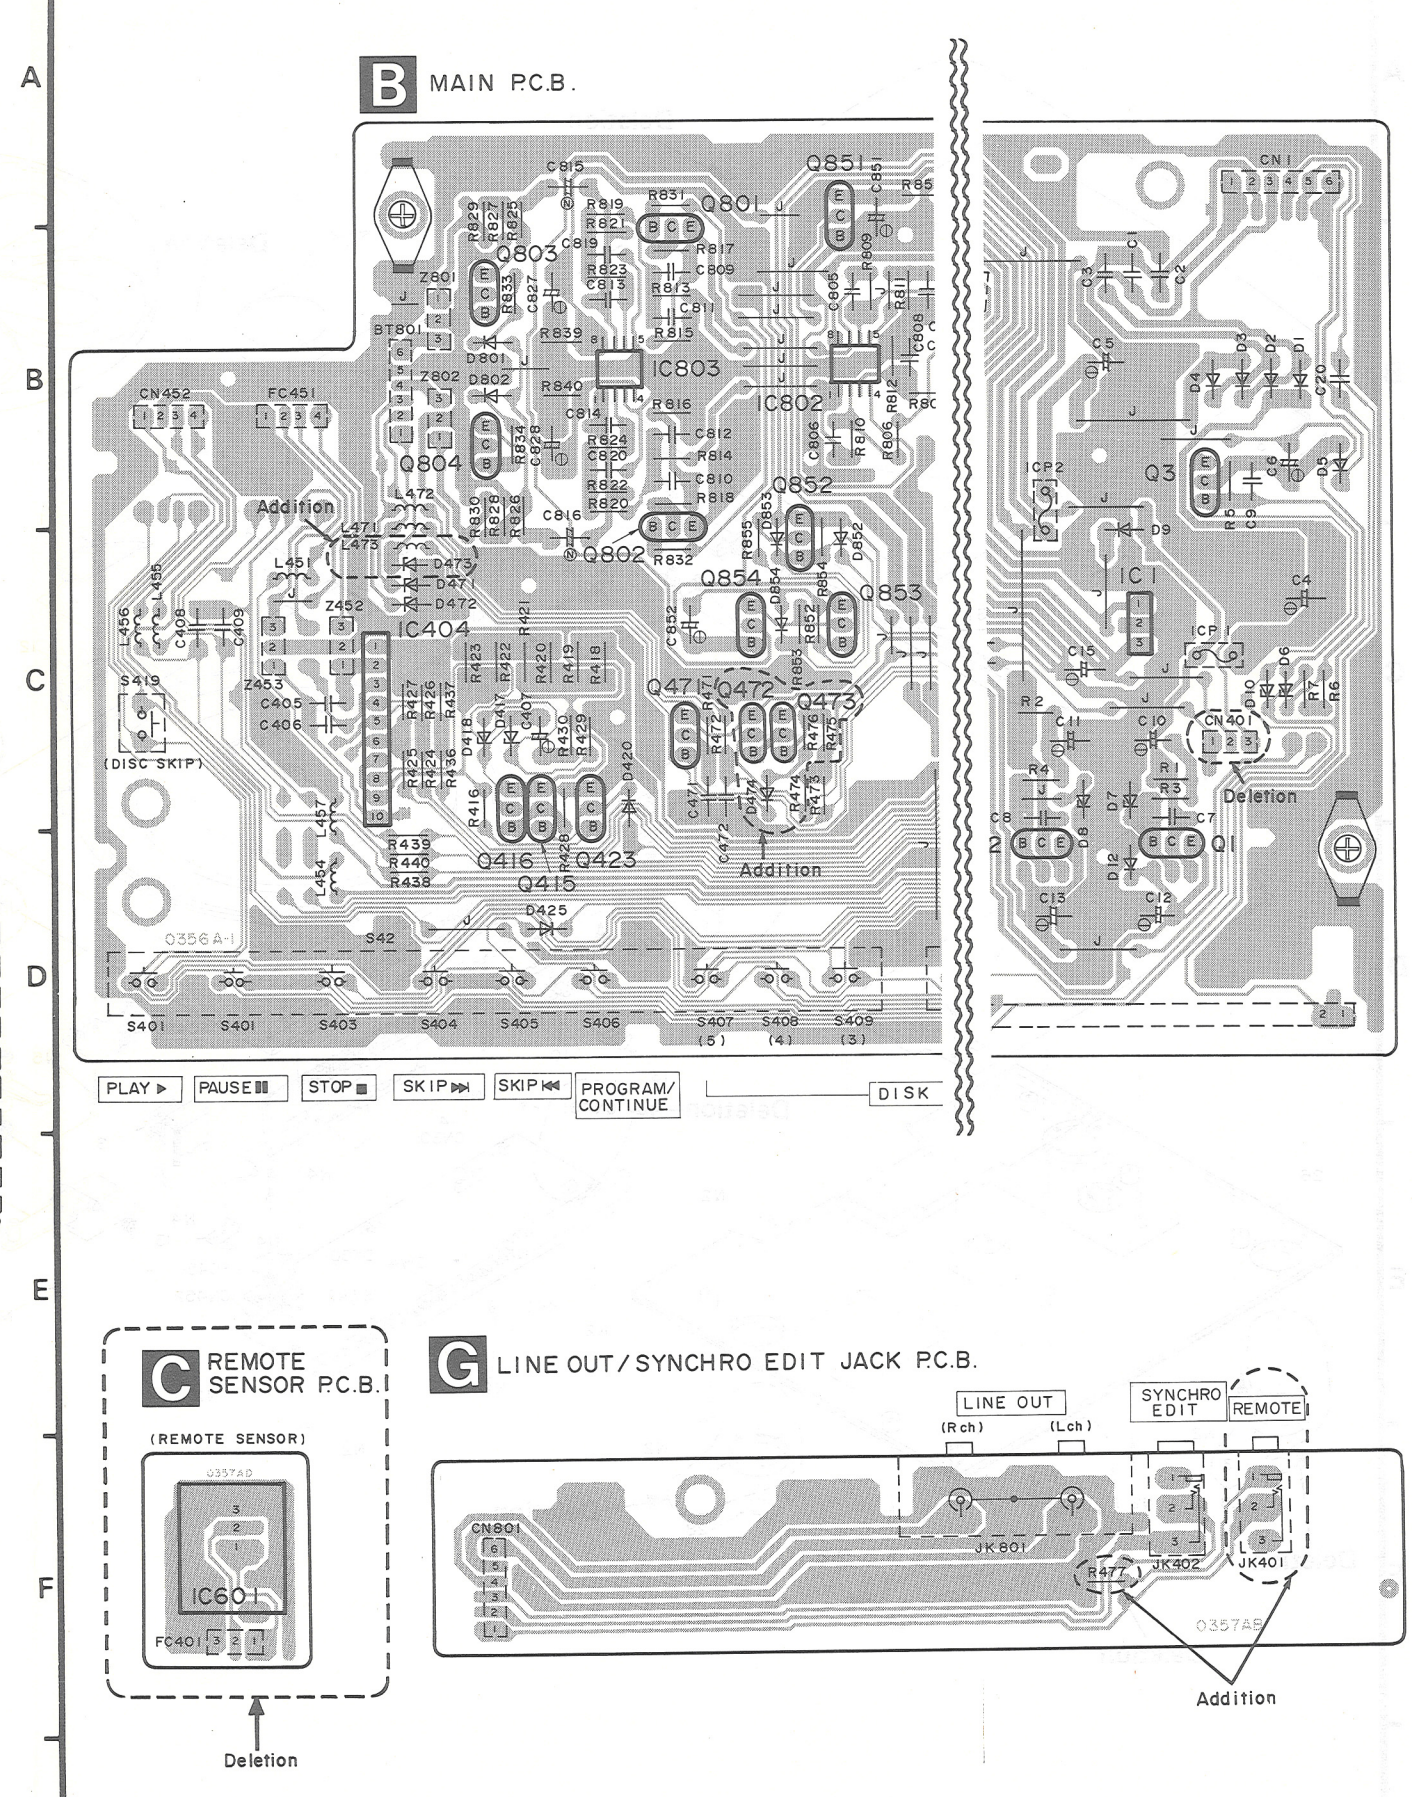



# EXPLODED VIEW

# PACKING

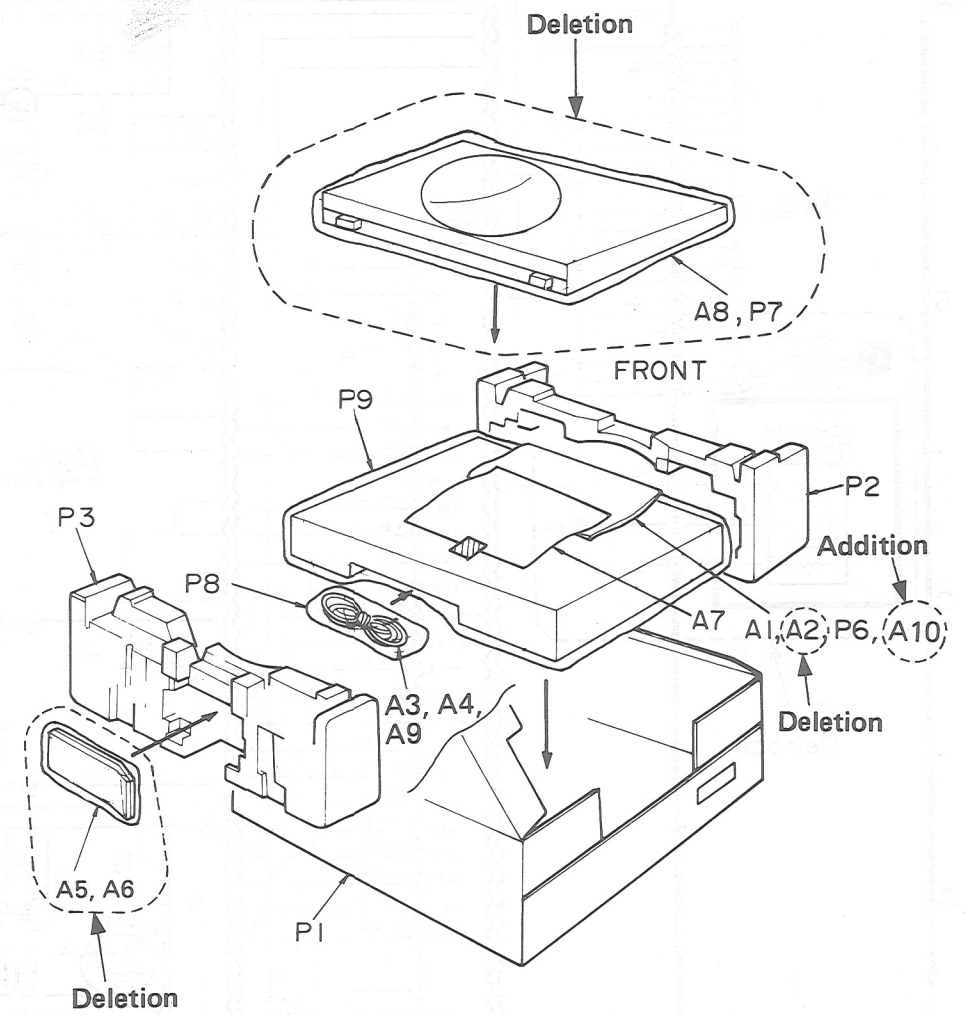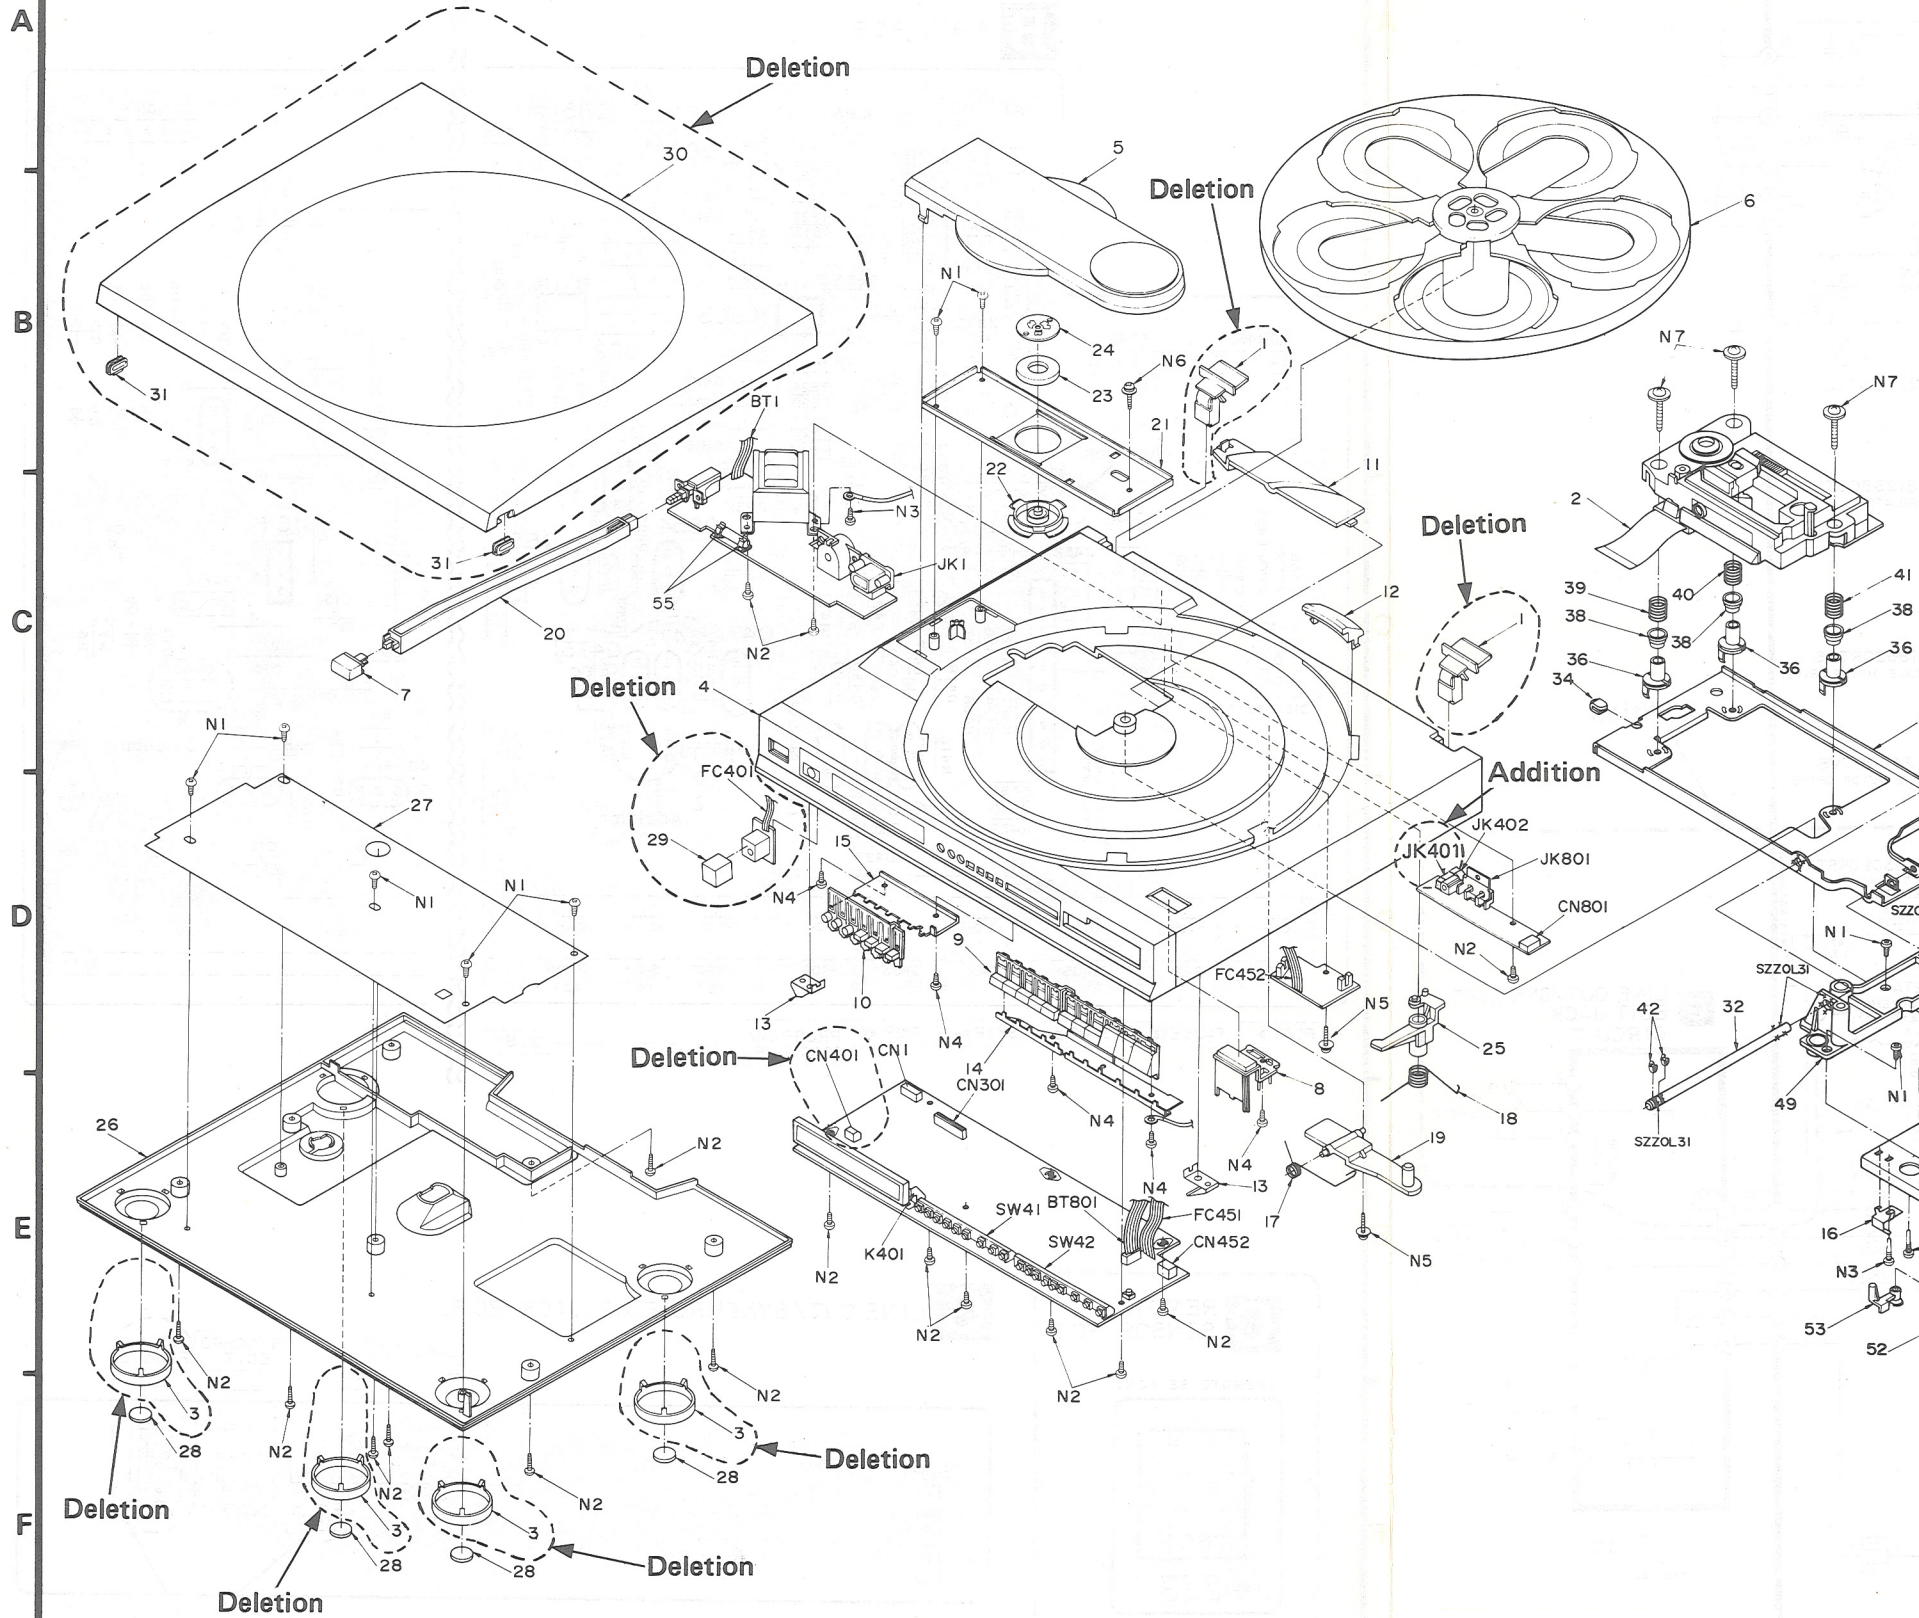



# Service Manual

**COMPACT**  
**disc**  
**DIGITAL AUDIO**

**DIGITAL**

Multi Compact Disc Player


## SL-PC25

**Color**

(K)... Black Type

**Area**

| Country Code | Area                                              | Color |
|--------------|---------------------------------------------------|-------|
| (E)          | Continental Europe.                               | (K)   |
| (EB)         | Great Britain.                                    |       |
| (GC)         | Asia, Latin America, Middle Near East and Africa. |       |
| (GN)         | Oceania.                                          |       |
| (PX)         | Far East-PX.                                      |       |

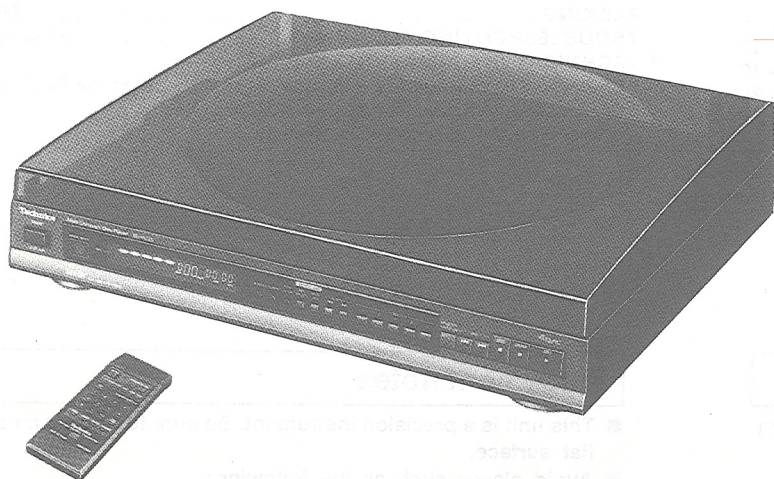

SL-PC10 MECHANISM SERIES (RXK0087)

## SPECIFICATIONS

### ■ Audio

|                           |                            |
|---------------------------|----------------------------|
| No. of channels           | 2 (left and right, stereo) |
| Frequency response        | 2-20,000 Hz $\pm$ 1 dB     |
| Output voltage            | 2 V (at 0 dB)              |
| Dynamic range             | 96 dB                      |
| S/N ratio                 | 96 dB                      |
| Total harmonic distortion | 0.005% (1 kHz, 0 dB)       |
| Wow and flutter           | Below measurable limit     |
| DA converter              | MASH* (4 DAC)              |
| Output impedance          | 1 k $\Omega$               |
| Load impedance            | More than 10 k $\Omega$    |

### \*MASH

- MASH (Multi-Stage Noise Shaping) is an effective over-sampling D/A conversion technique which realizes a high S/N ratio and needs no highly complex manufacturing processes such as a laser trimming.
- MASH is trademark of NTT (Nippon Telegraph and Telephone Corporation).

### ■ Pickup

|            |        |
|------------|--------|
| Wavelength | 780 nm |
|------------|--------|

### ■ General

|                                |                                      |
|--------------------------------|--------------------------------------|
| Power supply                   |                                      |
| For Continental Europe:        | AC 50/60 Hz, 220 V                   |
| For Great Britain and Oceania: | AC 50/60 Hz, 240 V                   |
| For others:                    | AC 50/60 Hz, 110 V/127 V/220 V/240 V |
| Power consumption              | 13 W                                 |
| Dimensions (W×H×D)             | 430×109.5×362 mm                     |
| Weight                         | 4.1 kg                               |

Specifications are subject to change without notice.  
Weight and dimensions shown are approximate.

# Technics

Matsushita Electric Industrial Co., Ltd.  
Central P.O. Box 288, Osaka 530-91, Japan

Panasonic Tokyo Sales Department  
Matsushita Electric Industrial Co., Ltd.  
World Trade Center Bldg., 4-1, Hamamatsu-cho,  
2-chome, Minato-ku, Tokyo 105, Japan



## CONTENTS

|                                                           | Page    |
|-----------------------------------------------------------|---------|
| INSTALLATION .....                                        | 2       |
| ACCESSORIES .....                                         | 2       |
| PRECAUTION OF LASER DIODE .....                           | 3       |
| CONNECTIONS .....                                         | 4       |
| FRONT PANEL CONTROLS AND FUNCTIONS .....                  | 5       |
| PLAYING A DISC .....                                      | 6, 7    |
| REMOTE CONTROL TRANSMITTER .....                          | 7       |
| HANDLING PRECAUTIONS FOR OPTICAL PICKUP .....             | 8       |
| INSTRUCTIONS FOR TRAVERSE OIL<br>(Part No. SZZ0L31) ..... | 8       |
| DISASSEMBLY INSTRUCTIONS .....                            | 9 ~ 13  |
| MEASUREMENTS AND ADJUSTMENTS .....                        | 13 ~ 19 |
| TERMINAL FUNCTION OF IC'S .....                           | 20 ~ 24 |
| BLOCK DIAGRAM .....                                       | 25 ~ 27 |

|                                  | Page    |
|----------------------------------|---------|
| INTERNAL CONNECTION OF FL .....  | 28      |
| SCHEMATIC DIAGRAM .....          | 29 ~ 35 |
| TERMINAL GUIDE OF IC'S .....     |         |
| TRANSISTORS AND DIODES .....     | 36      |
| PRINTED CIRCUIT BOARDS .....     | 37 ~ 40 |
| WIRING CONNECTION DIAGRAM .....  | 41      |
| REPLACEMENT PARTS LIST .....     | 42 ~ 45 |
| EXPLODED VIEWS .....             | 46 ~ 48 |
| RESISTORS & CAPACITORS .....     | 49, 50  |
| PACKING .....                    | 50      |
| TROUBLESHOOTING FLOW CHART ..... | 51 ~ 54 |
| * TECHNICAL INFORMATION          |         |


\* This technical information is located on pp 45 ~ 56 of the SL-PC10 Service Manual (Order No. AD8904091C1).

Therefore, refer to that Service Manual.

## INSTALLATION

### Transport lock

The optical pickup is secured to prevent damage during transport. Be sure to release it before use.

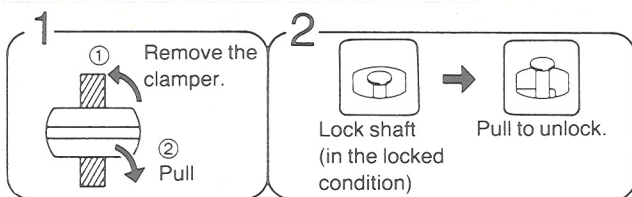

#### NOTE:

**IF THE UNIT IS TRANSPORTED AGAIN, PERFORM THE FOLLOWING STEPS:**

1. Turn the power on and remove all discs from the trays.
2. PRESS THE DISC SKIP BUTTON on the top panel and turn the power off.
3. Insert the clasper into the slot on the bottom of the unit and turn it clockwise.
4. Place the unit with the right panel facing downward. Press the lock shaft to the LOCK position (LOCK).

#### CAUTION:

Do not transport the unit without locking the lock shaft.

**SEVERE DAMAGE WILL RESULT.**

Soft cloth or similar material (to prevent scratches)

### Placement notes

■ This unit is a precision instrument. Be sure to place it on a flat surface.

■ Avoid places such as the following:

- Near any equipment or device that generates strong magnetism.
- On any heat-generating equipment or device, or in any place where the temperature is high (35°C or higher).
- Extremely cold places (5°C or below).
- Near a tuner or TV (It may cause noise in the broadcast, or disturbance of the TV picture.)
- For long periods of time in direct sunlight.
- In dusty or smoky locations.
- In locations prone to vibrations.
- In locations where the rear panel is less than 10 cm (about 4") away from the wall or back of an audio rack.
- Within reach of children.

■ When carrying or storing the unit, handle it with care so it is not subjected to any strong bumps.

Always remove the disc before storing the unit for any period of time.

■ To avoid problems due to vibration.

- Do not place a book or similar object under this unit.
- Do not route the connection cables (of this or other units) across the operation panel, across the top, or under the unit.

## ACCESSORIES

- AC power supply cord .... 1

|         |          |
|---------|----------|
| SJA187  | (E)      |
| SJA193  | (EB)     |
| SJA173  | (GN)     |
| RJA0004 | (GC, PX) |

- Remote control transmitter ..... 1  
(EUR64789B)

- Stereo connection cable .... 1

(SJP2249-3)

- Batteries ..... 2

(UM-4NE/2S)

- Dust cover ..... 1

(RYF0082)

- AC plug adaptor ..... 1

[SJP9215 (GC, PX)]



## ■ PRECAUTION OF LASER DIODE

**CAUTION:** This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pick up lens.  
 Wave length: 780nm  
 Maximum output radiation power from pick up: 100μW/VDE

Laser radiation from the pick up lens is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

**ACHTUNG:** Dieses produkt enthält eine laserdioden. Im eingeschalteten zustand wird unsichtbare laserstrahlung von der lasereinheit abgestrahlt.


Wellenlänge: 780nm

Maximale strahlungsleistung der lasereinheit: 100μW/VDE


Die strahlung an der lasereinheit ist ungefährlich, wenn folgende punkte beachtet werden:

1. Die lasereinheit nicht zerlegen, da die strahlung an der freigelegten laserdioden gefährlich ist.
2. Den werksseitig justierten einstellregler der lasereinheit nicht verstellen.
3. Nicht mit optischen instrumenten in die fokussierlinse blicken.
4. Nicht über längere zeit in die fokussierlinse blicken.

**ADVASEL:** I dette a apparat anvendes laser.

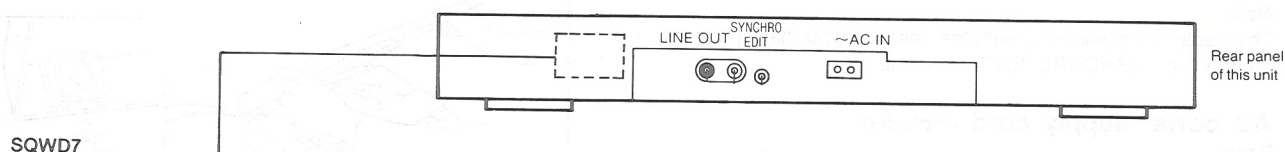

SQWD7

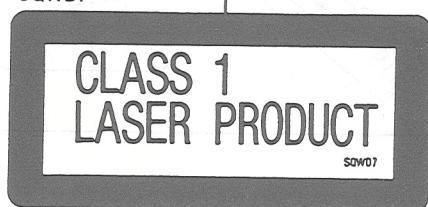



### • Use of caution labels

Note: ○ Mark is used, × Mark is not used.

| Areas  | SQWD7 | RQLS0021 |
|--------|-------|----------|
| (PX)   | ×     | ×        |
| Others | ○     | ○        |

Obs:  
 Apparaten innehåller laser  
 Komponent av höger laserklass  
 än klass 1.


RQLS0021

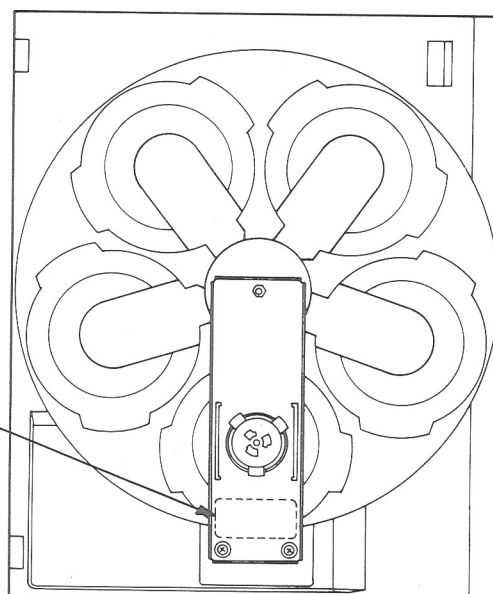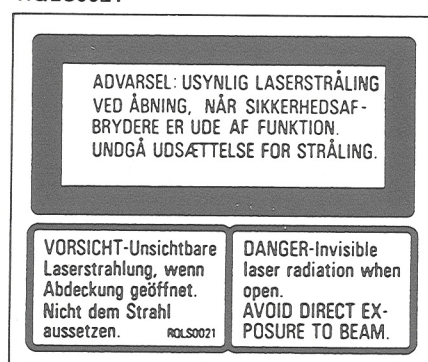



## CONNECTIONS

• Before making connections, be sure that the power to this unit and all other connected equipment is first turned off.

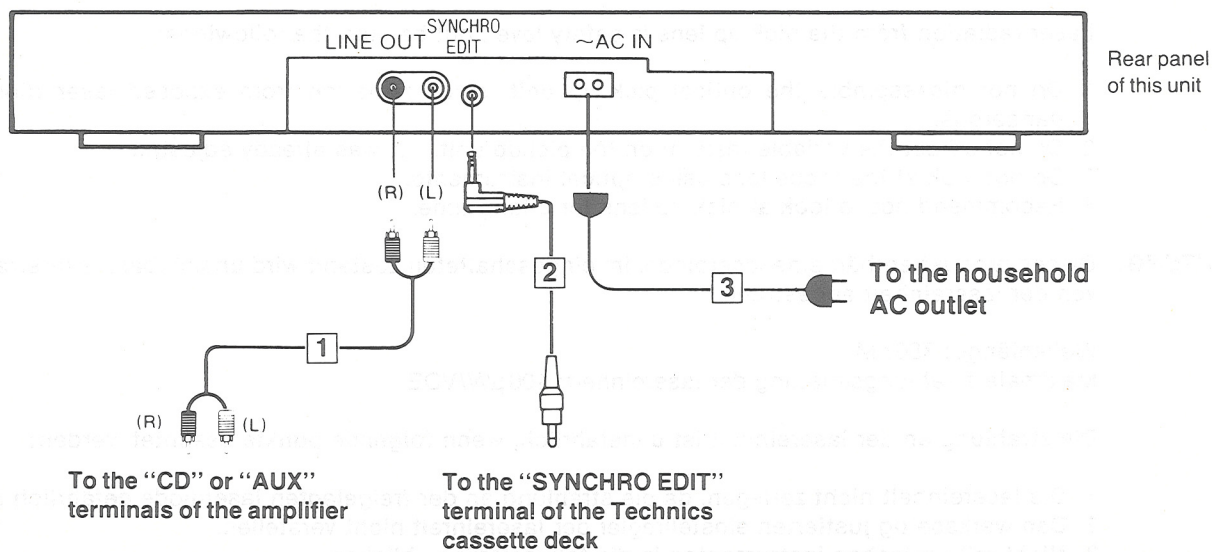

**1 Stereo connection cable (included)**

**2 L-type cable**

**Note:**


This cable is included only with the cassette deck having the appropriate "SYNCHRO EDIT" terminal.

**3 AC power supply cord (included)**

**Note:**

The configuration of the AC outlet and AC power supply cord differs according to area.

**How to install the dust cover.**

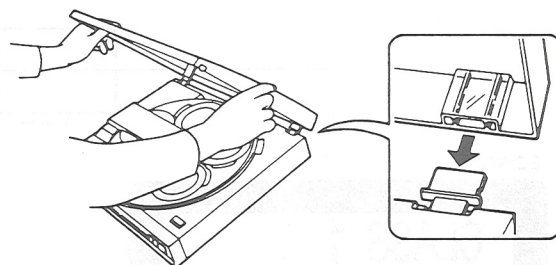




# FRONT PANEL CONTROLS AND FUNCTIONS

## Control section

The functions indicated by the numbers with black background (8) can also be activated from the remote control transmitter. (See page 7.)

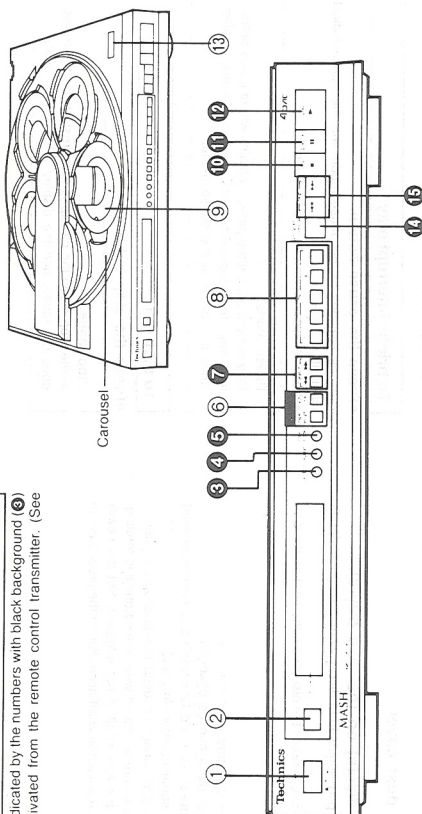

### 1 Power switch (power)

Press (I) to switch the power on.  
Press again (I) to switch the power off.

### 2 Remote control signal sensor (remote sensor)

### 3 Random button (random)

Press this button to let the microcomputer make a random selection of the sequence in which discs and tracks are played during continuous play or program play.  
Press the button again to cancel the random play mode.

### 4 Repeat button (repeat)


Press this button to activate the repeat mode. The repeat indicator illuminates.  
Press again to cancel the repeat mode. The repeat indicator will no longer illuminate.

### 5 Time mode button (time mode)

Use this button to select the desired time mode. The display information will change as follows each time the button is pressed.

- 1 Track number and its elapsed play time
- 2 Track number and remaining time of current track.
- 3 Total track numbers and playing time of the current disc.
- 4 Total elapsed play time of the current disc.

## Display section

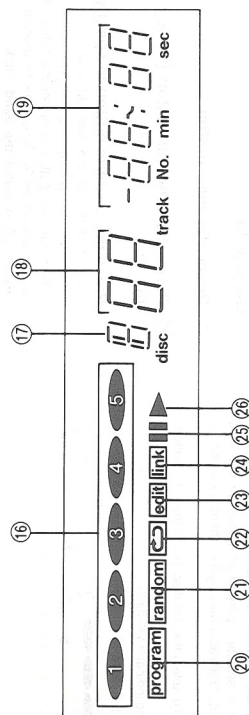

### 16 Program/continue button (program/continue)

This button is used to select either the continuous play or program play mode.  
The mode changes each time the button is pressed.  
The continuous play mode is automatically selected when the power is switched on.

### 19 Skip buttons (◀◀ skip ▶▶)

Press one of these buttons briefly to move the pickup (backward and forward) to the beginning of a specific track.

### Pickup:

The pickup is a laser device that reads the information on the disc surface. The pickup moves across the disc as the disc is played, but it is not visible from outside the cabinet.

### 17 Disc indicators (● ~ ●)

The indicator corresponding to the disc being played flashes during play.  
When the unit is in the program mode, these indicators show the programmed discs.

### 18 Disc number/tape side display (disc)

Shows the number (1-5) of the current disc, or shows the tape side (A or B) in the edit mode.

### 19 Track number display (track)

Shows the number (up to 99) of the current track.

### 20 Time/programmed number display (No., min, sec)

This display shows the elapsed playing time of the track being played. When the unit is in the program play mode, this display shows the program sequence.

### 21 Program play indicator (program)

Illuminates when the unit is in the programming or program play mode.

### 22 Random indicator (random)

Illuminates when the random play mode is selected.

### 23 Repeat indicator (repeat)

Illuminates when the repeat mode is activated.

### 24 Compact disc edit indicator (edit)

Illuminates when the edit mode is activated.

### 25 Auto link indicator (link)

Illuminates when the unit is in the condition that the automatic disc link is possible.

### 26 Pause indicator (II)

Illuminates when the pause mode is activated.


### 27 Play indicator (▶)

Illuminates when the play mode is activated.




## Continuous play (from the stop mode)

Continuous play refers to play of the first track of the first disc to the last track of the last disc.

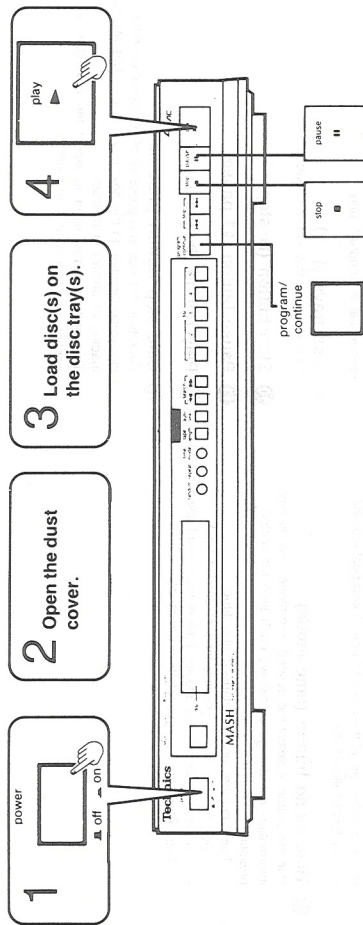

- 1 Press the power switch to turn on (I). The disc trays turn clockwise, and the disc 1 tray resets to the front position.
  - Continuous play is automatically selected when the power is switched on. If the program play indicator is illuminated, press the program/continue button.

Disc indicators



- 2 Open the dust cover.

- 3 Load the disc(s) on the disc tray(s).
  - Continuous play begins from disc 1 when the play button is pressed.
  - For loading disc 5, press the disc skip button or turn the disc trays manually.


**Notes:**

- Do not touch the disc tray while rotating.
- During play, other discs can be changed.
- Discs of the 8 cm (3 1/8") size and 12 cm (5") size cannot be used together on the same number disc tray.
- The disc skip button cannot be used during program play.
- If intermittent noises are produced while the carousel is rotating, this means that the lock shaft is not released. Set the power switch to off and release the shaft according to the procedure on page 2.

## Continuous play (continued)


To select the desired track (or disc) to be played (from the stop mode or during play)

By selecting the disc or track to be played first in the play sequence, all subsequent tracks will be played on that disc(s) in order from that track to last. (There is no need to press the play button.)

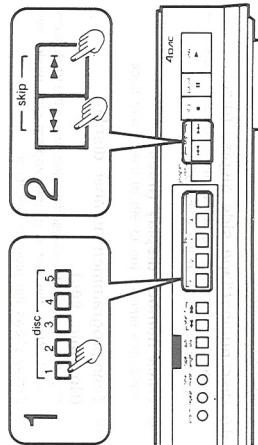


- 1 Press the disc select button.
  - If the disc only is selected, play of all tracks on that disc (beginning from its first track) will begin in about ten seconds.

**For example:** To select the 3rd disc, press the [3] button. The selected disc indicator will flash.

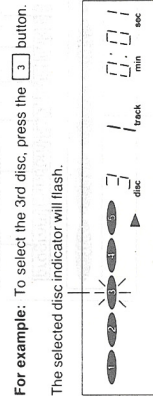

- 2 Press the skip ([+1]) button to select the track number.
  - Play will start from the selected track.

**For example:** To select the 9th track, press the [+1] button 8 times (or keep pressing the button until the display shows "9").



If you go past the desired track, press the [+1] button to return to the desired track.

- By the remote control transmitter (See page 7.)

- 1 Press the disc button.
- 2 Press the numeric button ([1-5]) to specify the disc.
- 3 Press the numeric button to specify the track.
  - Play will start from the selected track.
  - To select the 10th and subsequent tracks: Press the [+10] button to select the "tens" digit, and then press (one of) the [0-9] buttons to select the "units" digit. **Example: to select the 32nd track** Press the [+10] button three times to select 3, and then press the [2] button.
  - Steps 1 and 2 are not necessary if the track is specified on the 1st disc.

**Notes:**

- If a disc number not on the disc tray is specified, the next higher number disc will be played.
- When a track number not on the disc is specified, the selection cannot be entered.




# REMOTE CONTROL TRANSMITTER

SL-PC25

## Program play (from the stop mode)

As many as 32 selections from the five discs can be selected and programmed to play in any desired sequence.

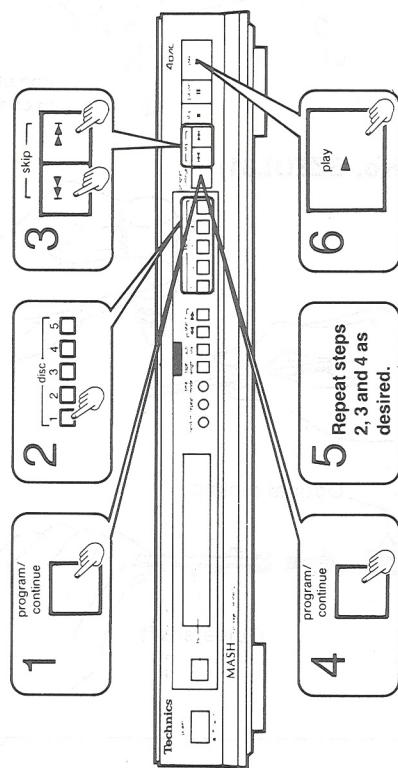

1 Press the program/continue button.

The play mode will then change from continuous play to program play.




Program play indicator

Note: The mode does not change if the program/continue button is pressed during play.

## 2 Press the disc select button.


For example: To select the 3rd disc, press the [3] button.




Note: If the disc only is selected, all tracks on that disc (beginning from its first track) will be programmed.

## 3 Select the track number.

For example: To select the 9th track, press the [9] button 9 times.



## 4 Press the program/continue button.



## 5 Repeat steps 2, 3 and 4 until the desired program is completed.


• Steps 3 and 4 are not necessary if selecting the disc only.  
• Step 2 is not necessary to select the disc number if the next track selected is on the same disc.

Note: If selections of non-existing disc(s) or track(s) are programmed, the corresponding indicator (disc or track) will illuminate and the selection will be included in the program count. However, during play the selection(s) will be cancelled and the subsequent program selection will be played.

## 6 Press the play button to start play.

## Insertion of remote control transmitter batteries

BATTERY LIFE: About 1 year.



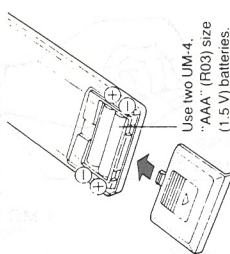


### Notes concerning use of dry batteries

- Do not use re-chargeable batteries (Ni-Cd type).
- Be sure the batteries are inserted so that the positive (+) and negative (-) polarities are correct. Batteries installed with incorrect polarities may leak and damage the remote control transmitter.
- Never subject the batteries to excessive heat or flame; do not attempt to disassemble them; and be sure they are not short-circuited.
- If the remote control transmitter is not to be used for a long time, remove the batteries and store them in a cool dark place.
- Always remove old, weak or worn-out batteries promptly and dispose of them.
- Never mix old and new batteries, nor batteries of different types (carbon or alkaline).
- Although battery life varies depending on how often the remote control transmitter is used, the batteries should be replaced about once every year on the average.
- The batteries should also be replaced if commands from the remote control transmitter are not received by this player even when the transmitter is held close to the player's front panel.
- If the batteries leak, clean the battery holder well before inserting new batteries.
- Do not use remote control transmitters for TV sets, VTRs or other components at the same time as this player's remote control transmitter since this could result in a mistaken operation.

## Remote control transmitter operation notes

Note that operation may not be correct if direct sunlight or other strong light strikes the remote control signal receptor part of this unit. If there is a problem, place the unit away from the direct sunlight or other strong light source.

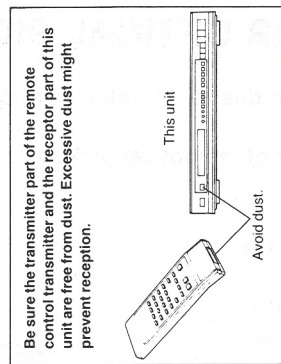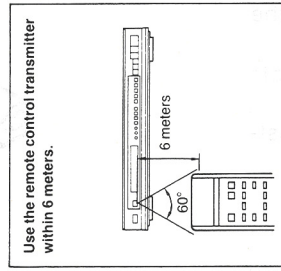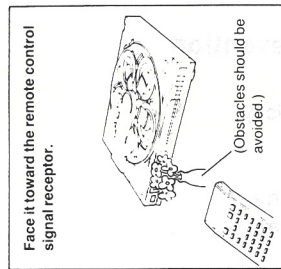


Note: The control panel of the remote control transmitter may be covered by a clear plastic protective sheet. This sheet may be removed if desired.

## Remote functions

On the remote control transmitter only.

Remote control signal transmission window

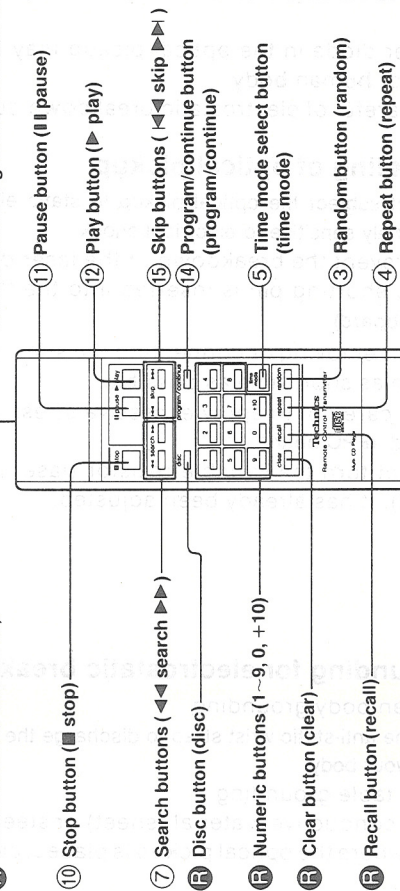




## HANDLING PRECAUTIONS FOR OPTICAL PICKUP

The laser diode in the optical pickup may break down due to potential difference caused by static electricity of clothes or human body.

So, be careful of electrostatic breakdown during repair of the optical pickup.

### • Handling of optical pickup

1. Do not subject the optical pickup to static electricity as it is extremely sensitive to electrical shock.
2. To prevent the breakdown of the laser diode, an anti-static shorting pin is inserted into the flexible board. (FPC board)  
When removing or connecting the short pin, finish the job in as short time as possible.
3. Take care not to apply excessive stress to the flexible board. (FPC board)
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

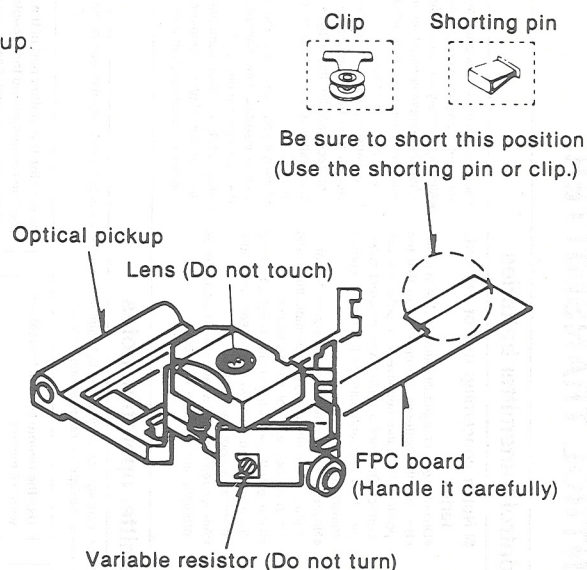


### • Grounding for electrostatic breakdown prevention

1. Human body grounding  
Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding  
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed, and ground the sheet.

#### Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the optical pickup.

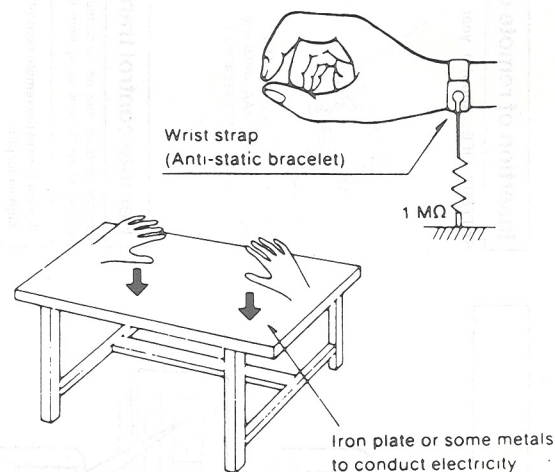


## INSTRUCTIONS FOR TRAVERSE OIL (Part No. SZZOL31)

The container contains 6g (approx. 3ml) of oil.

One application (one shaft) uses 0.05ml of oil.

#### How to Use

- (1) Remove the guide shaft in the traverse deck from the optical pickup and clean off any dust from the guide shaft.
- (2) Apply one drop of the SZZOL31 to the tip of the guide shaft.
- (3) Hold the guide shaft so that its oiled end touches the optical pickup and insert it into the bearing while rotating it slowly.
- (4) After securing the guide shaft, move the optical pickup by hand several times to the left and right to distribute the oil on the guide shaft.

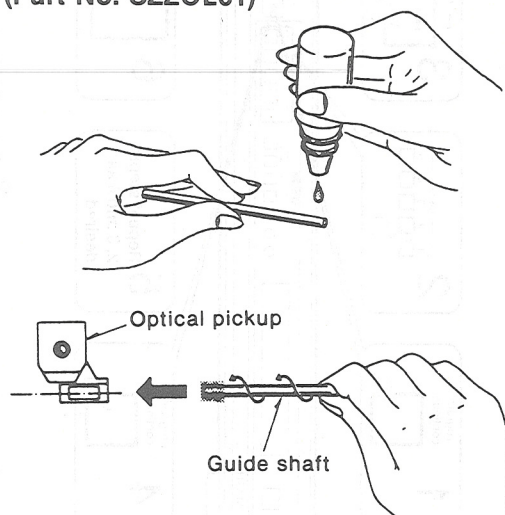

#### “ATTENTION SERVICER”

Some chassis components may have sharp edges. Be careful when disassembling and servicing.







## DISASSEMBLY INSTRUCTIONS

**Warning:** This product uses a laser diode. Refer to caution statements on page 3.








**ACHTUNG:** • Die lasereinheit nicht zerlegen.

• Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.





\* This CD player is equipped with FPC boards, so handle them with care during disassembly and reassembly.
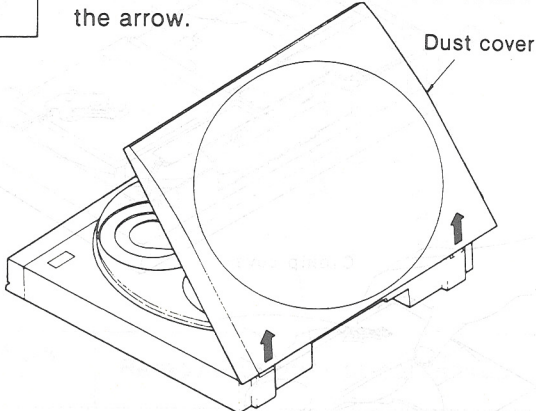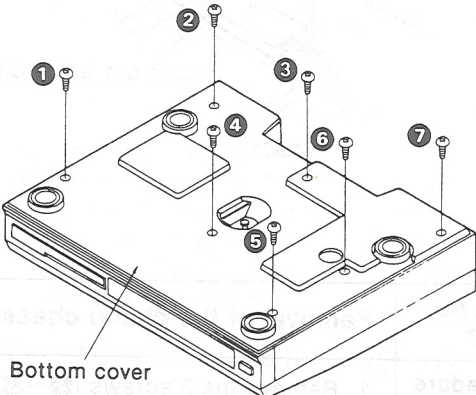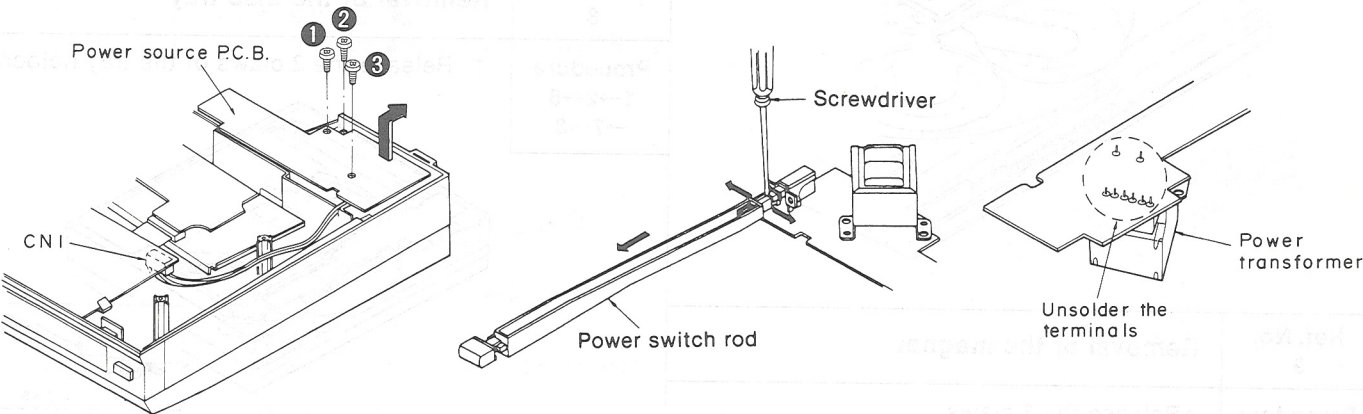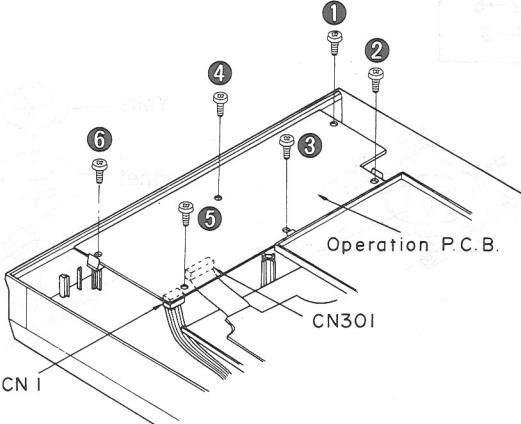
| Ref. No.<br>1                                                                     | Removal of the dust cover                                                                                                             | Ref. No.<br>2                                                                                                                                                             | Removal of the bottom cover                                                  |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| Procedure<br>1                                                                    | <ul style="list-style-type: none"> <li>Remove the dust cover in the direction of the arrow.</li> </ul>                                | Procedure<br>2                                                                                                                                                            | <ul style="list-style-type: none"> <li>Remove the 7 screws (①~⑦).</li> </ul> |
|  |                                                                                                                                       |                                                                                         |                                                                              |
| Ref. No.<br>3                                                                     | Removal of the power source P.C.B., power transformer and power switch rod                                                            | 4. Remove the power switch rod by using a screwdriver.<br>5. Unsolder the terminals of the power transformer.<br><b>Note:</b> Set the power switch to the "OFF" position. |                                                                              |
| Procedure<br>2→3                                                                  | 1. Remove the 3 screws (①~③).<br>2. Remove the 1 connector (CN1).<br>3. Remove the power source P.C.B. in the direction of the arrow. |                                                                                       |                                                                              |
| Ref. No.<br>4                                                                     | Removal of the operation P.C.B.                                                                                                       |                                                                                                                                                                           |                                                                              |
| Procedure<br>2→4                                                                  | <b>■ Removal of the operation P.C.B.</b><br>1. Remove the 6 screws (①~⑥).<br>2. Remove the 2 connectors (CN1, CN301).                 |                                                                                       |                                                                              |

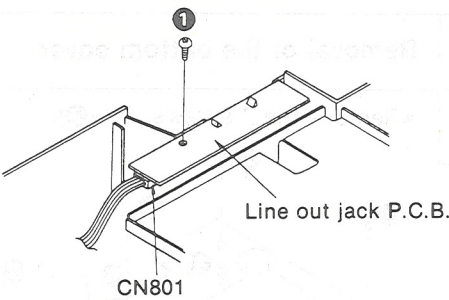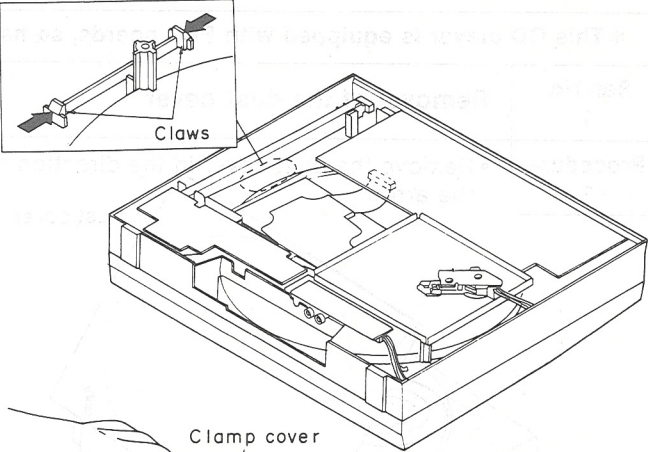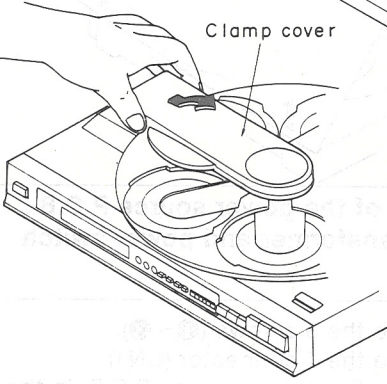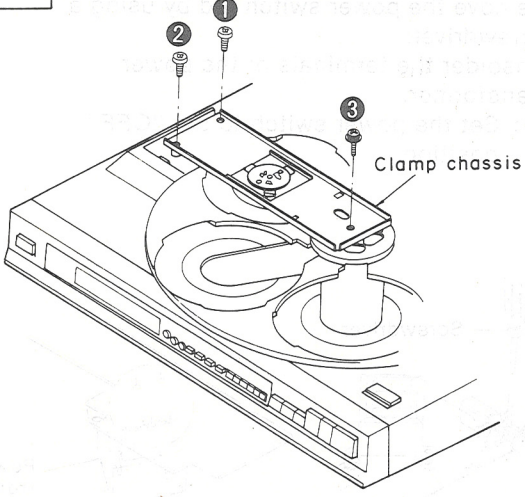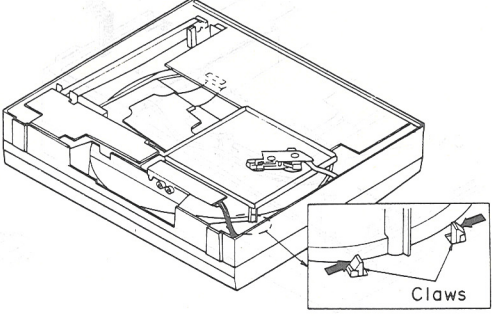
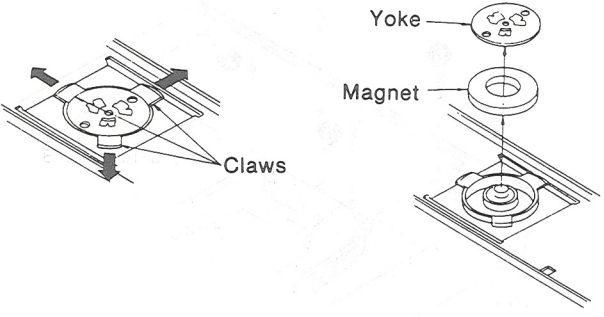
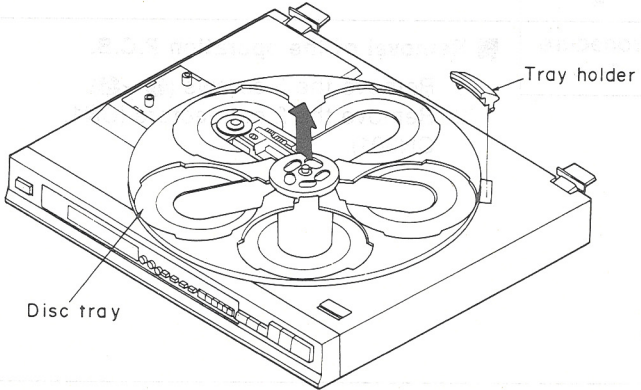


|                                                                                                                            |                                                                                                                            |                            |                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|----------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Ref. No.<br>5                                                                                                              | Removal of the line out jack P.C.B.                                                                                        | Ref. No.<br>6              | Removal of the clamp cover                                                                                               |
| Procedure<br>2→5                                                                                                           | 1. Remove the 1 screw (❶).<br>2. Remove the 1 connector (CN801).                                                           | Procedure<br>1→2→6         | 1. Release the 2 claws.<br>2. Remove the clamp cover in the direction of the arrow.                                      |
|                                                                                                                            |  <p>Line out jack P.C.B.</p> <p>CN801</p> |                            |  <p>Claws</p> <p>Clamp cover</p>       |
| Ref. No.<br>7                                                                                                              | Removal of the clamp chassis                                                                                               |                            |                                       |
| Procedure<br>1→2→6→7                                                                                                       | 1. Remove the 3 screws (❶~❸).                                                                                              | Ref. No.<br>8              | Removal of the disc tray                                                                                                 |
|                                                                                                                            |  <p>Clamp chassis</p>                    | Procedure<br>1→2→6<br>→7→8 | 1. Release the 2 claws of the tray holder.                                                                               |
| Ref. No.<br>9                                                                                                              | Removal of the magnet                                                                                                      |                            |  <p>Claws</p>                        |
| Procedure<br>1→2→6<br>→7→9                                                                                                 | • Release the 3 claws.                                                                                                     |                            | 2. Remove the disc tray in the direction of the arrow.                                                                   |
|  <p>Yoke</p> <p>Magnet</p> <p>Claws</p> |                                                                                                                            |                            |  <p>Tray holder</p> <p>Disc tray</p> |

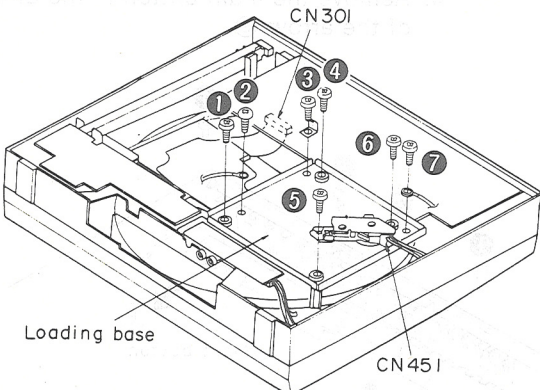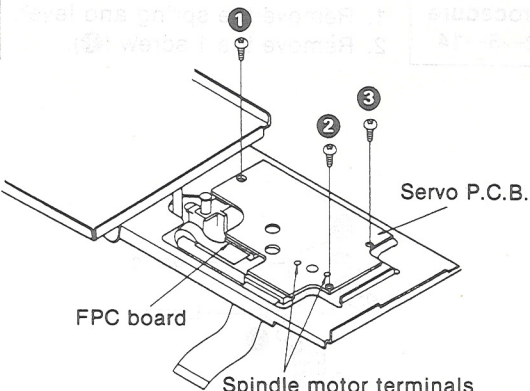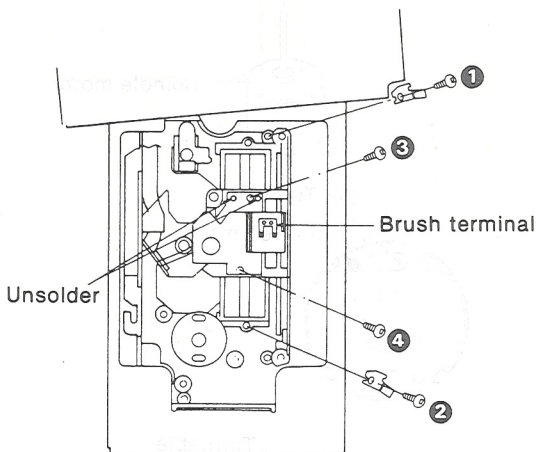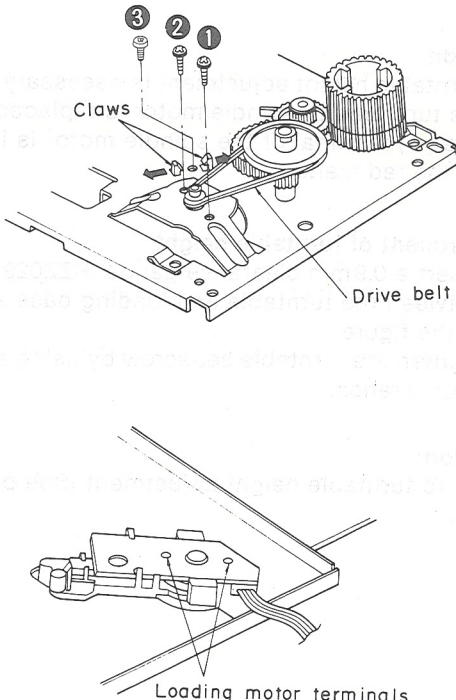


|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ref. No.<br>10       | Removal of the loading chassis                                                                                                                                                                                                                                                                                                                                                                                                                         | Ref. No.<br>11       | Removal of the servo P.C.B.                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Procedure<br>8→10    | <ol style="list-style-type: none"> <li>1. Remove the 7 screws (①~⑦).</li> <li>2. Remove the 2 connectors (CN301, CN451).</li> </ol>                                                                                                                                                                                                                                                                                                                    | Procedure<br>8→10→11 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                      |  <p>Loading base</p> <p>CN301</p> <p>CN451</p>                                                                                                                                                                                                                                                                                                                        |                      |  <p>Servo P.C.B.</p> <p>FPC board</p> <p>Spindle motor terminals</p> <ol style="list-style-type: none"> <li>1. Remove the 3 screws (①~③).</li> <li>2. Unsolder the 2 terminals of spindle motor.</li> <li>3. Remove the FPC board from the optical pickup.</li> </ol> <p><b>Caution:</b> To prevent the breakdown of the laser diode, antistatic shorting pin is inserted into the FPC board.</p> |
| Ref. No.<br>12       | Removal of the optical pickup                                                                                                                                                                                                                                                                                                                                                                                                                          | Ref. No.<br>13       | Removal of the loading motor                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Procedure<br>8→10→12 |                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Procedure<br>8→10→13 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                      | <p>Refer to the handling precautions for optical pickup and instructions for traverse oil (See page 8).</p> <ol style="list-style-type: none"> <li>1. Remove the 2 screws (①, ②).</li> <li>2. Unsolder the 2 terminals and the 2 screws (③, ④).</li> </ol>  <p>Brush terminal</p> <p>Unsolder</p> <p><b>Caution:</b> Take care not to touch the brush terminal.</p> |                      | <ol style="list-style-type: none"> <li>1. Remove the drive belt.</li> <li>2. Remove the 3 screws (①~③).</li> <li>3. Release the 2 claws.</li> <li>4. Unsolder the 2 terminals of the loading motor.</li> </ol>  <p>Claws</p> <p>Drive belt</p> <p>Loading motor terminals</p>                                                                                                                   |

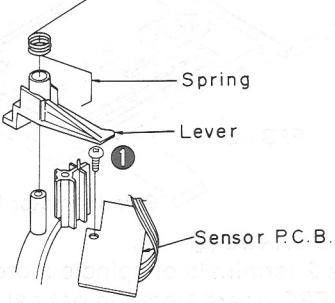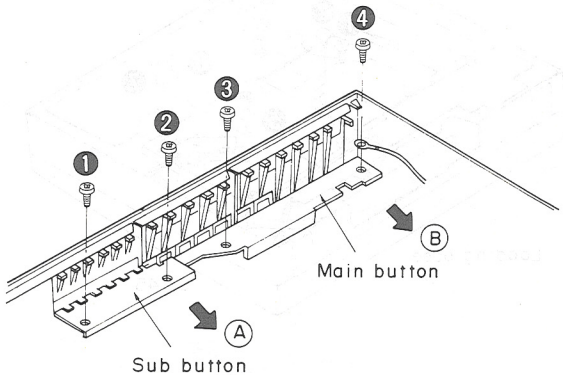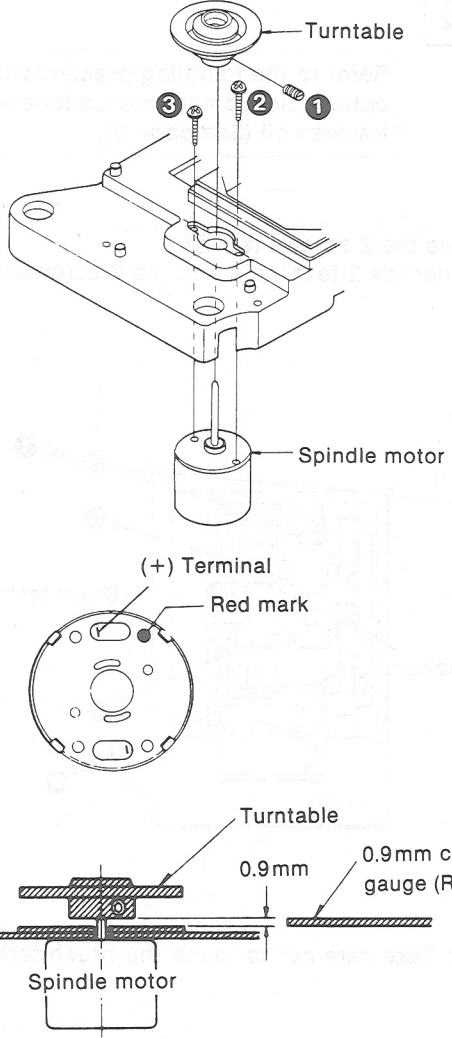

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                   |                            |                                                                                                                                                                                             |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Ref. No.</b><br>14                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>Removal of the sensor P.C.B.</b>                                               | <b>Ref. No.</b><br>15      | <b>Removal of the sub button and main button</b>                                                                                                                                            |
| <b>Procedure</b><br>2→5→14                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | 1. Remove the spring and lever.<br>2. Remove the 1 screw (①).                     | <b>Procedure</b><br>2→4→15 | 1. Remove the 2 screws (①, ②).<br>2. Remove the sub button in the direction of the arrow ④.<br>3. Remove the 2 screws (③, ④).<br>4. Remove the main button in the direction of the arrow ⑤. |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |  |                            |                                                                                                           |
| <b>Ref. No.</b><br>16                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>Removal of the spindle motor</b>                                               |                            |                                                                                                                                                                                             |
| <b>Procedure</b><br>8→10→12<br>→16                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                   |                            |                                                                                                                                                                                             |
| 1. Loosen the screw (①) by using a 1.27 mm allen wrench and remove the turntable.<br>2. Remove the 2 screws (②, ③).<br><br><b>Caution:</b><br>1. Turntable height adjustment is necessary any time the turntable or spindle motor is replaced.<br>2. The (+) terminal of the spindle motor is indicated by the red mark.<br><br><b>Adjustment of turntable height</b><br>1. Insert a 0.9mm clearance gauge (RZZ0297) between the turntable and loading base as shown in the figure.<br>2. Tighten the turntable set-screw by using a 1.27 mm allen wrench.<br><br><b>Caution:</b><br>Refer to turntable height adjustment (See page 16). |                                                                                   |                            |                                                                                                          |

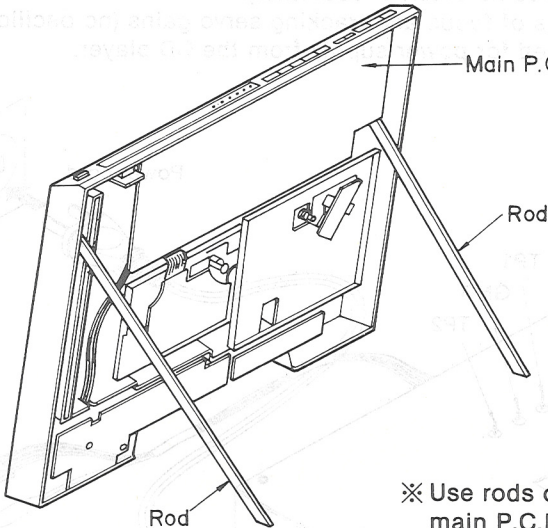

|                                 |                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ref. No.<br>17                  | How to check the main P.C.B.                                                                                                                                                                                                                                             |
| Procedure<br>1→2→6→7<br>→8→9→17 | <p>• When checking the foil side of the main P.C.B. and replacing the parts, do as shown here.</p>  <p>※ Use rods or similar object to hold the main P.C.B. in an upright position.</p> |


## MEASUREMENTS AND ADJUSTMENTS

**Warning:** This product uses a laser diode. Refer to caution statements on page 3.

**Caution:** During adjustment, never connect CH-2 probe's GND to any place for it may short Vref line. (Connect CH-1 probe's GND to specified TP. described in each section.)

### PREPARATION

1. Remove the dust cover (refer to disassembly instruction Ref. No. 1).
2. Remove the bottom cover (refer to disassembly instruction Ref. No. 2).
3. Remove the clamp cover (refer to disassembly instruction Ref. No. 6).
4. Remove the clamp chassis (refer to disassembly instruction Ref. No. 7).  
Set the power switch to ON.
5. (1) The carousel rotates clockwise and stops at the fifth tray.  
(2) Set the power switch to OFF and then to ON again, when the optical deck reaches its height position, set the power switch to OFF.
6. Remove the disc tray (refer to disassembly instruction Ref. No. 8).
7. Place the test disc and secure it by using the magnet (refer to disassembly instruction Ref. No. 9).
8. Set the unit in the test mode as follows:  
(hold the play, stop and disc 1 keys (3 keys) on and set the power switch to ON.
9. Follow the adjustment procedure.

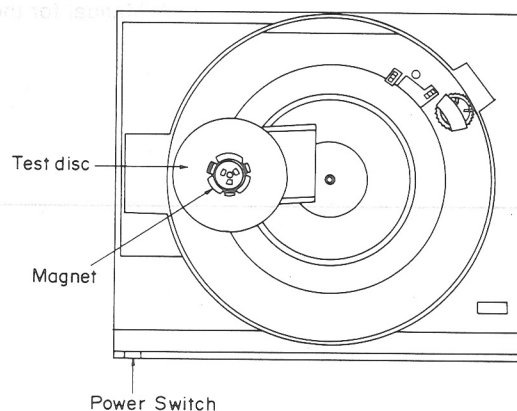




## NEW SERVO GAIN ADJUSTER (Servo Amp. Adjusting Fixture)

The following introduces the improved version of the current servo gain adjuster (SZZP1017F):

**Part number:** SZZP1094C-1



### Features:

- (1) Contains all oscillation frequencies and output adjustments needed for focus servo gain, tracking servo gain, and tracking balance adjustment (requires no external oscillator).
- (2) Panel indicators indicate the best points of focus and tracking servo gains (no oscilloscope needed).
- (3) Internal power supply eliminates the need for power supply from the CD player.

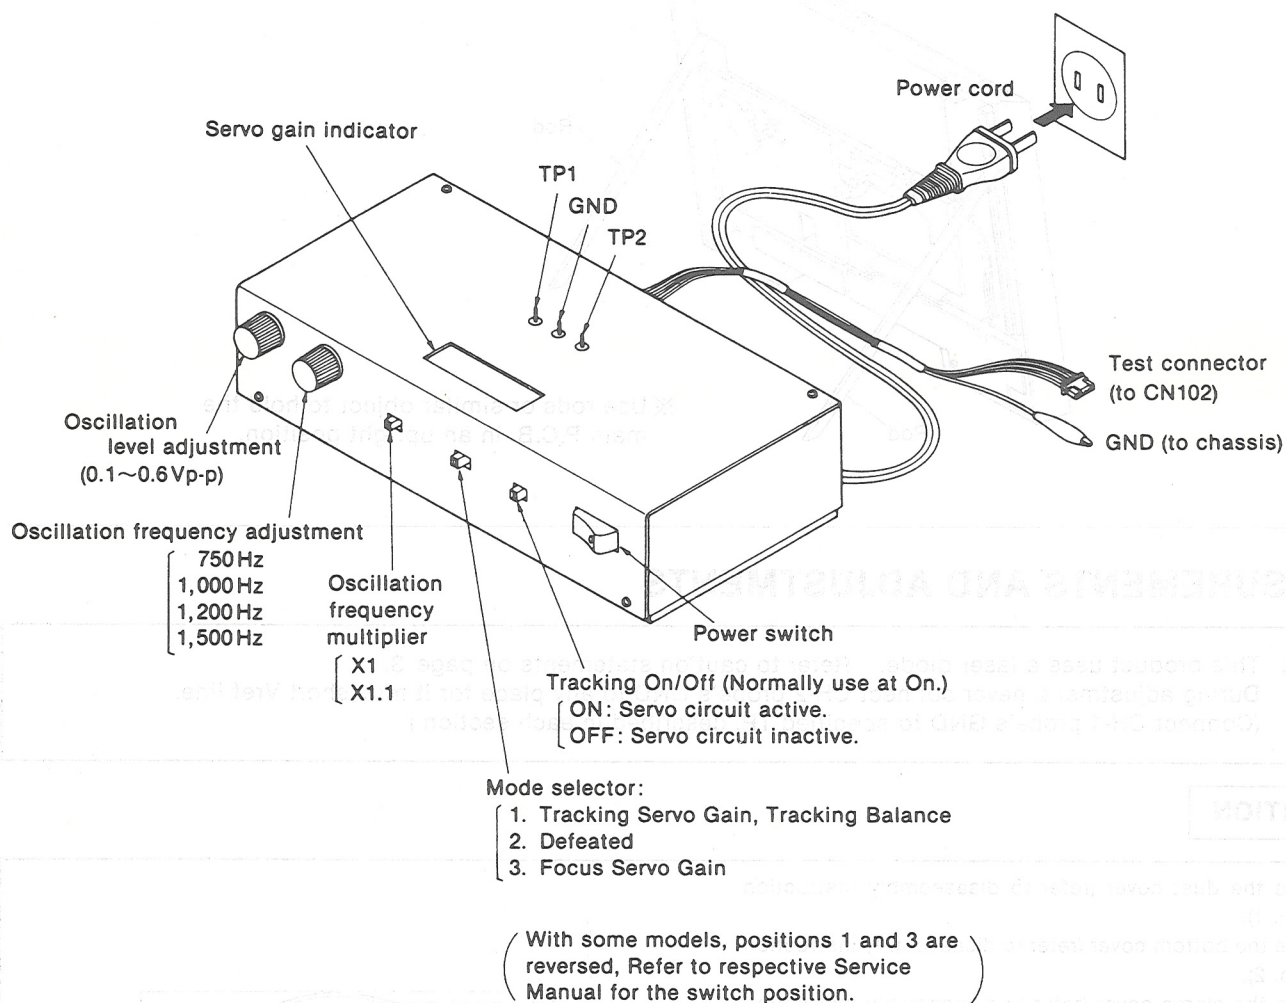

## ADJUSTMENT POINTS

## • Servo P.C.B.

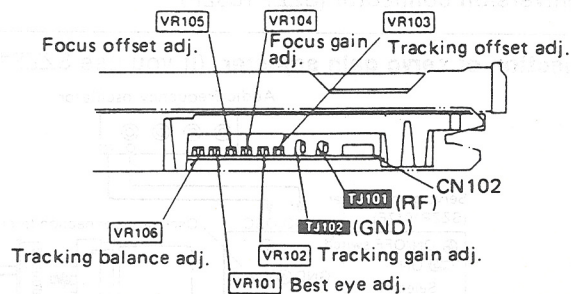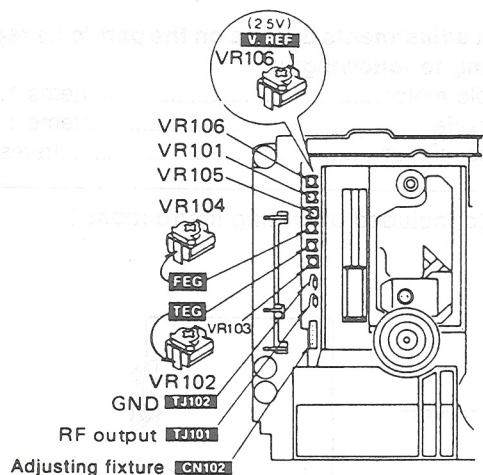

## • Main P.C.B. (Power supply for SZZP1017F only.)

CN1

B (-12.1V)


(Connect the blue read wire of servo gain adjuster.)

A (+11.2V)

(Connect the red lead wire of servo gain adjuster.)

## • Temporary setting of each VR

Temporary VR setting if any of the trimmer VRs are replaced or require readjustment, temporarily set them to the following positions:

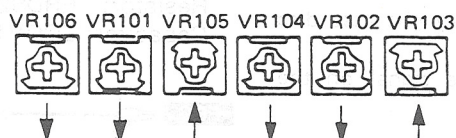



### Measuring Instruments and Special Tools


- \* Servo gain adjuster (SZZP1017F or SZZP1094C-1)
- \* Test discs
  1. Playability test disc (SZZP1054C or SZZP1014F)
  2. Uneven test disc (SZZP1056C)
  3. Black band test disc (SZZP1057C)
- \* Normal disc
- \* Dual-beam oscilloscope with bandwidth of 30 MHz or better (with EXT trigger and 1 : 1 probe).
- \* Audio frequency (AF) oscillator
- \* Conversion connector (SZZP1032F)

- \* Allen wrench (M2.0) (SZZP1101C)
- \* Allen wrench (M1.27)
- \* 0.9mm clearance gauge (RZZ0297)
- \* Filter

**Perform adjustments depend on the part to be replaced according to followings:**

- (1) Spindle motor .....Items 1, 3 to 8
- (2) Turntable .....Items 1, 3 to 8
- (3) Optical pickup.....Items 2 to 8

### Connection of servo gain adjuster (If you use SZZP1094C, refer to included operating instructions.)

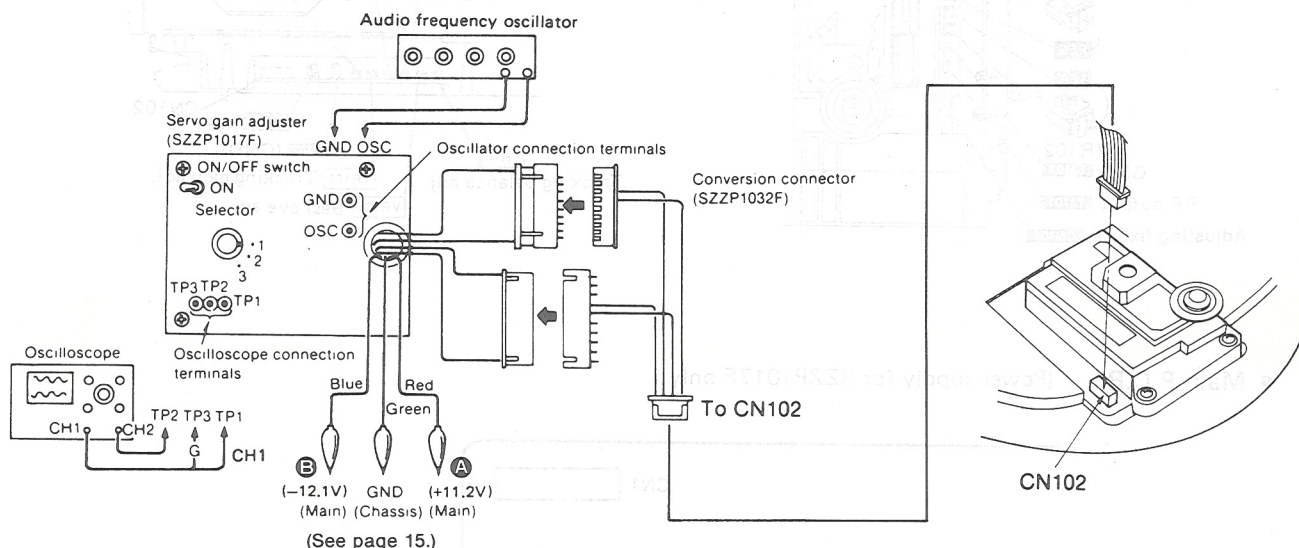

### Adjusting Procedure

- \* If you have replaced the optical pickup, spindle motor, or turntable, do the following adjustment:

#### (1) TURNTABLE HEIGHT ADJUSTMENT

1. Insert the 0.9 mm clearance gauge (RZZ0297) between the turntable and the loading base (see the figure at right).
2. Tighten the turntable retention screw with the 1.27 mm allen wrench.
3. Connect the oscilloscope's CH. 1 probe across VR104's **FEG** (+) and VR106's **V. REF** (-) terminals via a filter.

(Note: A voltage of 2.5V appears at the V. REF terminal. Take care not to short the player's chassis to the oscilloscope ground.)


**Oscilloscope setting:** VOLT ..... 50 mV  
 SWEEP ..... 1 ms.  
 Input coupling ... DC

4. Adjust oscilloscope's DC zero balance.
5. Switch the player power **ON**, and play the test disc (SZZP1014F or SZZP1054C).
6. Measure the voltage amplitude of the signal on the oscilloscope.


**Note 1.** If the measured amplitude is within a range of  $\pm 15$  mV, the turntable height is correct. If it is outside this range, adjust the turntable height by using the clearance gauge as a pry.

If the amplitude exceeds +15 mV, lower turntable.

If the amplitude is below -15 mV, elevate the turntable.



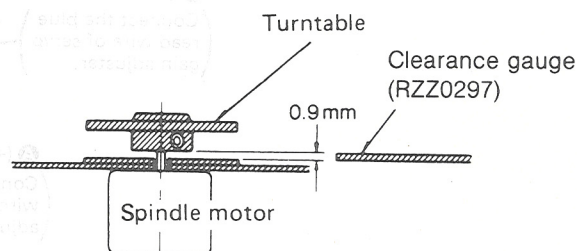


**Note 2.** If the measured amplitude greatly surpasses or falls short of the range above, set **VR105** at or around the center, then try to adjust the height again. (Then be sure to adjust the focus offset as well.)

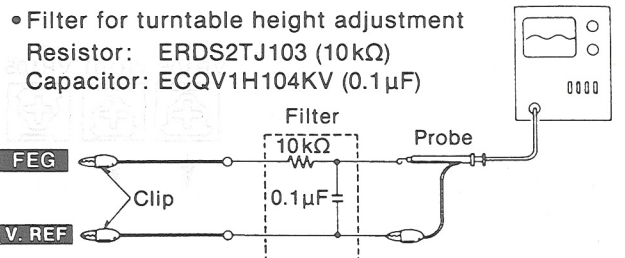

## (2) MECHANICAL ADJUSTMENT


1. Connect the oscilloscope's CH. 1 probe across **TJ101** (+) and **TJ102** (–) on the Servo P.C.B.  
**Oscilloscope setting:** VOLT ..... 100 mV  
 SWEEP ..... 0.5  $\mu$ s.  
 Input coupling ... AC
2. Switch the player power **ON**, and play track 9 on the test disc (SZZP1056C). (Playing any other track may yield a false adjustment.)
3. Leave the player in Play mode, and place it as shown in the figure on the right.
4. Alternately adjust the two mechanical adjusting screws with the 2.0mm allen wrench (SZZP1101C) until the vertical fluctuation of RF signal is minimized and the eye pattern is most stretched.
5. After completing the adjustment, lock the **mechanical adjustments** with lock paint (RZZOL01).

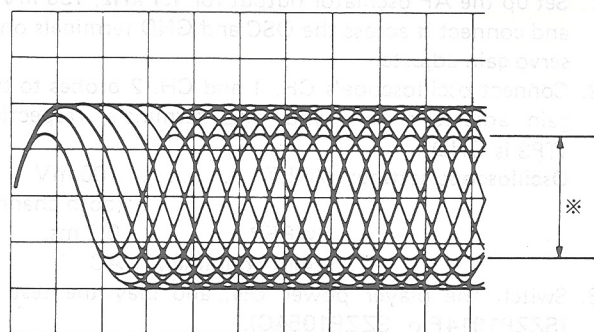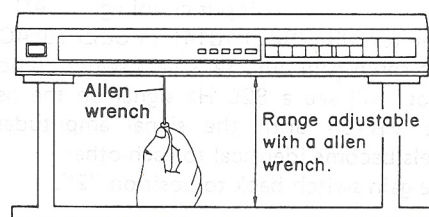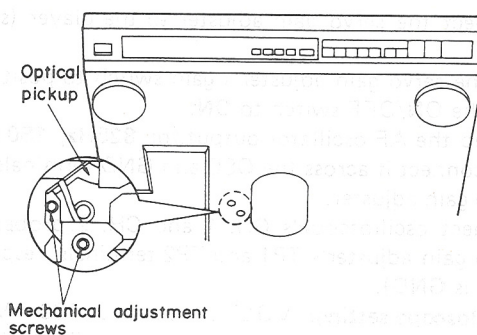

\* Most stretched eye pattern.

## (3) BEST EYE (PD BALANCE) ADJUSTMENT

1. Connect the oscilloscope's CH. 1 probe across **TJ101** (+) and **TJ102** (–) on the Servo P.C.B.  
**Oscilloscope setting:** VOLT ..... 100 mV  
 SWEEP ..... 0.5  $\mu$ s  
 Input coupling ... AC
2. Switch the player power **ON**, and play the 1kHz (track 1) on the test disc (SZZP1054C).
3. Adjust **VR101** until the vertical fluctuation of RF signal is minimized and the eye pattern is most stretched.

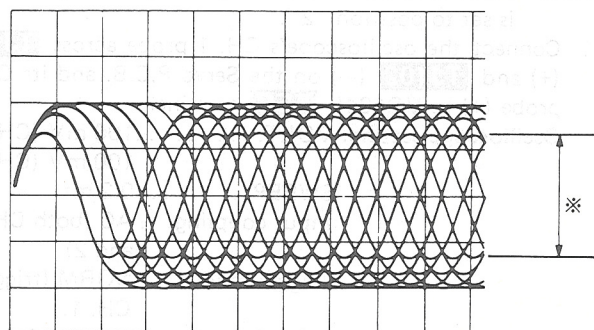

\* Most stretched eye pattern.




**(4) FOCUS GAIN ADJUSTMENT**

1. Connect the servo gain adjuster to the player (see page 15).
2. Set the servo gain adjuster's gain switch to position "2" and the ON/OFF switch to ON.
3. Set up the AF oscillator output for **825Hz, 150 mVp-p**, and connect it across the OSC and GND terminals on the servo gain adjuster.
4. Connect oscilloscope's CH. 1 and CH. 2 probes to the servo gain adjuster's TP1 and TP2 terminals, respectively (TP3 is GND).

**Oscilloscope setting:** VOLT ..... 100 mV  
(both channels)  
SWEEP ..... 0.2 ms.  
Input coupling ... AC

5. Play the test disc (SZZP1014F or SZZP1054C).
6. Set the servo gain adjuster's gain switch to position "3", and you will see a 825 Hz signal on the oscilloscope. Adjust **VR104** until the signal amplitudes on both channels become identical to each other.
7. Set the gain switch back to position "2".

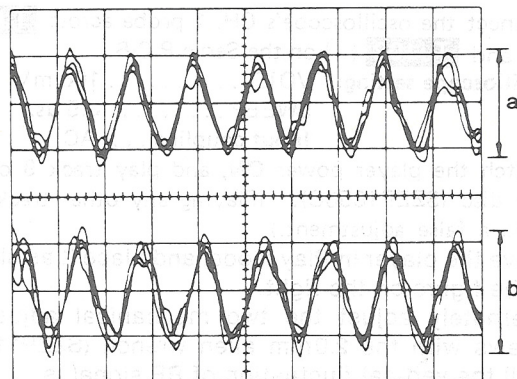


※ Adjust **VR104** until a equals b.

**(5) TRACKING GAIN ADJUSTMENT**

1. Set up the AF oscillator output for **1.1 kHz, 150 mVp-p**, and connect it across the OSC and GND terminals on the servo gain adjuster.
2. Connect oscilloscope's CH. 1 and CH. 2 probes to the servo gain adjuster's TP1 and TP2 terminals, respectively (TP3 is GND).

**Oscilloscope setting:** VOLT ..... 100 mV  
(both channels)  
SWEEP ..... 0.2 ms.  
Input coupling ... AC

3. Switch the player power ON, and play the test disc (SZZP1014F or SZZP1054C).
4. Set the servo gain adjuster's gain switch to position "1", and you will see a 1.1 kHz signal on the oscilloscope. Adjust **VR102** until the signal amplitudes on both channels become identical to each other.
5. Set the gain switch back to position "2".

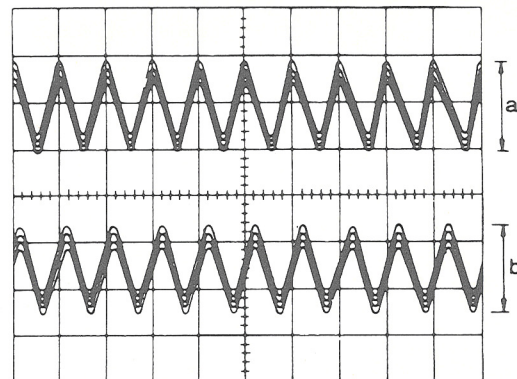

※ Adjust **VR102** until a equals b.


**(6) FOCUS OFFSET ADJUSTMENT**

Note: Make sure that the servo gain adjuster's gain switch is set to position "2".

1. Connect the oscilloscope's CH. 1 probe across **TJ101** (+) and **TJ102** (-) on the Servo P.C.B. and its CH. 2 probe (+) to VR104's **FEG** terminal.

**Oscilloscope setting:** VOLT ..... 100 mV (CH. 1)  
100 mV (CH. 2)  
SWEEP ..... 0.2 ms.  
Input coupling ... AC (both CH. 1 and 2)  
Trigger mode .... NORM (trigger CH. 1.)

2. Switch the player power ON, and play track 9 on the test disc (SZZP1057C).
3. Trigger the oscilloscope's CH. 1 so that the following waveforms are observed. Adjust **VR105** until the dip in the RF signal envelope on CH. 1 is smooth and the signal amplitude on CH. 2 is minimized, i.e. when amplitude A equals amplitude B.

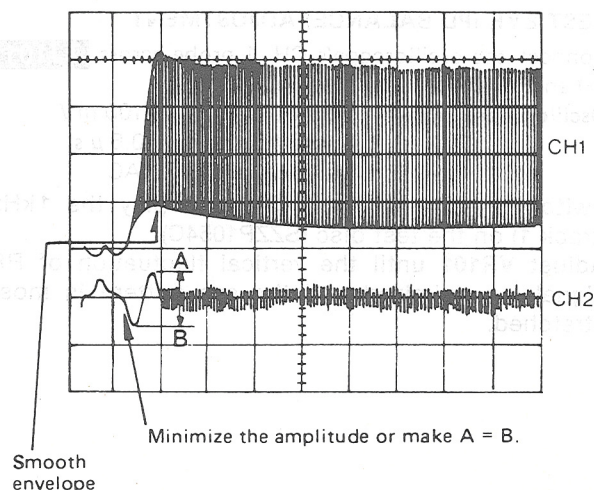

## (7) TRACKING OFFSET ADJUSTMENT

Note: Make sure that the servo gain adjuster's gain switch is set to position "2".

1. Connect the oscilloscope's CH. 1 probe across **TJ101** (+) and **TJ102** (–) on the Servo P.C.B., and its CH. 2 probe (+) to VR102's **TEG** terminal.

Oscilloscope setting: VOLT. . . . . 100 mV (CH. 1)

100 mV (CH. 2)


SWEEP.....0.2 ms.

Input coupling. . AC (both CH. 1  
and 2)

Trigger mode... NORM (trigger  
CH. 1.)

2. Switch the player power **ON**, and play track 9 on the test disc (SZZP1057C).

3. Trigger the oscilloscope's CH. 1 so that the following waveforms are observed. Adjust **VR103** until the dip in the RF signal envelope on CH. 1 is smooth and the signal amplitude on CH. 2 is minimized, i.e. when amplitude A equals amplitude B.

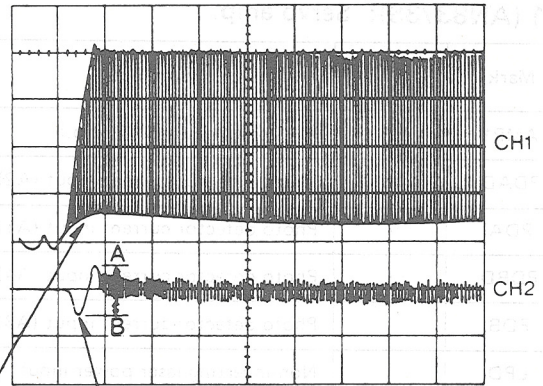

- Minimize the amplitude or make  $A = B$ .

Smooth  
envelope

### (8) TRACKING BALANCE ADJUSTMENT

1. Make sure that the servo gain adjuster's gain switch is set to position "2".
2. Set up the AF oscillator output for **1.1 kHz, 600 mVp-p**, and connect it across the OSC and GND terminals on the servo gain adjuster.

3. Connect the oscilloscope's CH. 1 probe across **TJ101** (+) and **TJ102** (-) on the Servo P.C.B. and CH. 2 probe (+) to the OSC terminal on the servo gain adjuster.

Oscilloscope setting: VOLT.....100 mV (CH. 1)

200 mV (CH. 2)

SWEEP.....0.1 ms.


Input coupling . .AC (both CH. 1  
and 2)

Trigger mode . . . NORM (trigger  
CH. 2)

4. Switch the player power **ON**, and play the test disc (SZZP1014F or SZZP1054C).

5. Set the servo gain adjuster's gain switch to position "1", and adjust **VR106** so that the waveform of the output section marked with ※ is balanced.

6. Disconnect the servo gain adjuster's leads from the player.

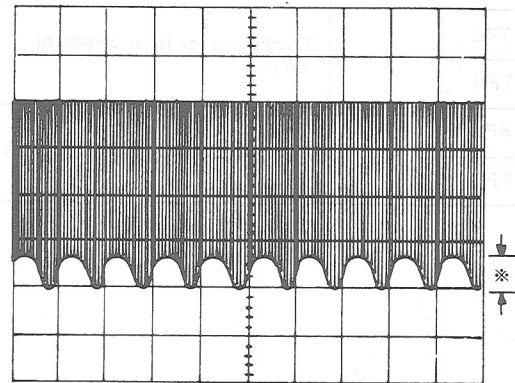

✖ This section of the waveform must be balanced.

### (9) CHECK OF PLAY OPERATION AFTER ADJUSTMENT

### \* Checking Skip Search

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and reverse directions).

### \* Checking Manual Search

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

### \* Checking Using Defect Disc

1. Play the 0.7 mm black dot and the 0.7 mm wedge on the defect test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc and verify that no sound skip or noise occurs.



## ■ TERMINAL FUNCTION OF IC'S

### ● IC101 (AN8373S): Servo amp.

| Pin No. | Mark   | I/O Division | Function                              |
|---------|--------|--------------|---------------------------------------|
| 1       | AMP1   | I            | RF signal input (X30 amp.)            |
| 2       | PDAD   | I            | Photo detector current input (A2)     |
| 3       | PDA    | I            | Photo detector current input (A1)     |
| 4       | PDBD   | I            | Photo detector current input (A4)     |
| 5       | PDB    | I            | Photo detector current input (A3)     |
| 6       | LPD    | I            | Non-inverting laser power input       |
| 7       | LD     | O            | Laser power auto control output       |
| 8       | FBL1   | I            | PD balance adjustment                 |
| 9       | FBL2   | I            |                                       |
| 10      | TBL1   | I            | Tracking balance adjustment           |
| 11      | TBL2   | I            |                                       |
| 12      | FOOFS  | I            | Focus offset adjustment               |
| 13      | IVA    | O            | Current/voltage conversion output (A) |
| 14      | IVB    | O            | Current/voltage conversion output (B) |
| 15      | FE     | O            | Focus gain adjustment output          |
| 16      | FPI    | I            | Focus error signal input              |
| 17      | TPI    | I            | Tracking error signal input           |
| 18      | C. TPL | I            | Tracking error filter capacitor input |
| 19      | C. TPH |              |                                       |
| 20      | C. FPL | I            | Focus error filter capacitor input    |
| 21      | C. FPH |              |                                       |

| Pin No. | Mark    | I/O Division | Function                                                      |
|---------|---------|--------------|---------------------------------------------------------------|
| 22      | TPO     | O            | Tracking error signal output                                  |
| 23      | FPO     | O            | Focus error signal output                                     |
| 24      | FGC     | I            | Focus gain up signal input (Not used, connected to GND)       |
| 25      | TGC     | I            | Tracking gain up signal input (Not used, connected to GND)    |
| 26      | GD      | I            | Focus/Tracking down signal input (Not used, connected to GND) |
| 27      | PTO     | O            | Position detecting amp. output                                |
| 28      | PTI     | I            | Position detecting amp. input                                 |
| 29      | PBO     | O            | Position detecting buffer output                              |
| 30      | POT     | I            | Position detecting buffer input                               |
| 31      | BDO     | O            | Dropout detection output                                      |
| 32      | RFDET   | O            | RF detection signal output                                    |
| 33      | SDO     | O            | Dropout detection pulse output                                |
| 34      | C. SBDO | I            | Dropout detecting capacitor input                             |
| 35      | ARF     | O            | RF signal output                                              |
| 36      | C. AGC  | I            | AGC detecting capacitor input                                 |
| 37      | VCC     | I            | Power supply (+5 V input)                                     |
| 38      | LDON    | I            | Laser power control input                                     |
| 39      | RF IN   | I            | RF signal input                                               |
| 40      | AMPO    | O            | RF signal output                                              |
| 41      | VREF    | O            | Reference voltage output                                      |
| 42      | GND     | I            | Ground terminal                                               |

● IC102 (AN8374S): Servo processor

| Pin No. | Mark   | I/O Division | Function                                              |
|---------|--------|--------------|-------------------------------------------------------|
| 1       | LSA    | I            | Phase difference input (A)                            |
| 2       | LSB    | I            | Phase difference input (B)                            |
| 3       | TEOFS  | O            | Tracking offset adjustment                            |
| 4       | TE     | O            | Tracking gain adjustment                              |
| 5       | TEG    | I            |                                                       |
| 6       | TE OUT | O            | Tracking error signal output                          |
| 7       | TE BPF | I            | Tracking error gain detecting filter (Not used, open) |
| 8       | FEG    | I            | Focus gain adjustment                                 |
| 9       | FE OUT | O            | Focus error signal output                             |
| 10      | CLW    | O            | Triangular wave oscillator capacitor output           |
| 11      | VREF   | I            | Reference voltage input                               |
| 12      | ARF    | I            | RF signal input                                       |
| 13      | CDSL   | I            | Data slice filter capacitor input                     |
| 14      | FPC    | I            | Frequency difference signal input                     |
| 15      | GND    | I            | Ground terminal                                       |
| 16      | C. PLL | I            | PLL loop filter constant                              |
| 17      | VSS    | I            | Ground terminal                                       |
| 18      | CLK    | I            | Frequency pull-in clock signal (88.2 kHz) input       |
| 19      | SRF    | O            | Sliced and digitized RF signal output                 |
| 20      | PCK    | O            | Clock output extracted from SRF                       |
| 21      | EFM    | O            | EFM signal output synchronous with PCK                |

| Pin No. | Mark  | I/O Division | Function                                                 |
|---------|-------|--------------|----------------------------------------------------------|
| 22      | VDD   | I            | Power supply (+5 V input)                                |
| 23      | SPCNT | O            | Track crossing speed control output (Not used, open)     |
| 24      | SENSE | O            | Selector output (track crossing state)                   |
| 25      | TRV   | O            | Traverse servo control output                            |
| 26      | FLOCK | O            | Focus lock signal output                                 |
| 27      | KICK  | O            | Track kick signal output                                 |
| 28      | LDON  | O            | Laser power control output                               |
| 29      | VDET  | O            | Focus/tracking gain up output (Not used, open)           |
| 30      | CNT1  | I            | Control input (FOON: Focus Servo On signal)              |
| 31      | CNT2  | I            | Control input (TRON: Tracking Servo On signal)           |
| 32      | CNT3  | I            | Control input (KICKF: Kick Direction (Forward) command)  |
| 33      | CNT4  | I            | Control input (KICKR: KICK Direction (Backward) command) |
| 34      | TRVF  | I            | Traverse forward command signal                          |
| 35      | TRVR  | I            | Traverse backward command signal                         |
| 36      | RFDET | I            | RF detection signal input                                |
| 37      | BDO   | I            | Dropout detection input                                  |
| 38      | VCC   | I            | Power supply (+5 V input)                                |
| 39      | TVPO  | O            | Traverse position detecting resistor/capacitor inputs    |
| 40      | TVPI  | I            |                                                          |
| 41      | BROUT | O            | Tracking drive control output                            |
| 42      | BRIN  | I            | Tracking error signal input                              |

● IC103 (AN3877N): BTL drive

| Pin No. | Mark | I/O Division | Function                                |
|---------|------|--------------|-----------------------------------------|
| 1       | PVCC | I            | Driver power supply (+7.7V input)       |
| 2       | VCC  | I            | Power supply (+7.7V input)              |
| 3       | TB   | O            | External transistor base driving output |
| 4       | VMON | O            | Voltage (+4.9V) output                  |
| 5       | TVDI | I            | Traverse error signal input             |
| 6       | FDI  | I            | Focus error signal input                |
| 7       | TDI  | I            | Tracking error signal input             |
| 8       | VREF | I            | Reference voltage input                 |

| Pin No. | Mark  | I/O Division | Function                                |
|---------|-------|--------------|-----------------------------------------|
| 9       | TD-   | O            | Inverting output of tracking driver     |
| 10      | TD+   | O            | Non-inverting output of tracking driver |
| 11      | FD-   | O            | Inverting output of focus driver        |
| 12      | FD+   | O            | Non-inverting output of focus driver    |
| 13      | TVD-  | O            | Inverting output of traverse driver     |
| 14      | TVD+  | O            | Non-inverting output of traverse driver |
| 15      | RESET | O            | Reset signal output                     |
| 16      | PC    | I            | PC input (connect to GND.)              |



## • IC301 (MN6625): Digital signal processor

| Pin No. | Mark   | I/O Division | Function                                                                        |
|---------|--------|--------------|---------------------------------------------------------------------------------|
| 1       | BYTCK  | O            | Serial data byte clock<br>(Not used, open)                                      |
| 2       | FCLK   | O            | Crystal frame clock<br>(Not used, open)                                         |
| 3       | DEMPH  | O            | De-emphasis ON signal<br>(de-emphasis ON at "H")                                |
| 4       | SRDATA | O            | Serial data output (MSB first)                                                  |
| 5       | SRCK   | O            | Serial bit clock output                                                         |
| 6       | LRCK   | O            | LR discrimination signal output                                                 |
| 7       | WDCK   | O            | Serial data output word clock                                                   |
| 8       | LDG    | O            | L channel deglitch signal<br>(Not used, open)                                   |
| 9       | RDG    | O            | R channel deglitch signal<br>(Not used, open)                                   |
| 10      | IPFLAG | O            | Interpolation flag<br>(interpolation at "H")                                    |
| 11      | FLAG   | O            | Error flag terminal                                                             |
| 12      | XCK    | O            | Clock (16.9344MHz) output<br>(Not used, open)                                   |
| 13      | TEST   | I            | Test mode selection<br>(Not used, connected to +5V)                             |
| 14      | TX     | O            | Digital signal output<br>(Not used, open)                                       |
| 15      | SLEEP  | I            | Mode selector<br>("L": normal, "H": SLEEP mode)<br>(Not used, connected to GND) |
| 16      | CSEL   | I            | Test terminal ("L": normal)<br>(Not used, connected to GND)                     |
| 17      | X1     | I            | Clock input (16.9344MHz)                                                        |
| 18      | X2     | O            | Clock output (16.9344MHz)<br>(Not used, open)                                   |
| 19      | VSS    | I            | GND terminal                                                                    |
| 20      | BLKCK  | O            | Sub-code block (Q data)<br>clock (75Hz)                                         |
| 21      | CLDCK  | O            | Sub-code frame (Q data)<br>clock (7.35kHz)                                      |
| 22      | SUBQ   | O            | Sub-code (Q data) output                                                        |
| 23      | RST    | I            | Reset signal input (reset at "L")                                               |
| 24      | MLD    | I            | Command load signal input                                                       |

| Pin No.  | Mark              | I/O Division | Function                                                |
|----------|-------------------|--------------|---------------------------------------------------------|
| 25       | MCLK              | I            | Command clock signal input                              |
| 26       | MDATA             | I            | Command data input                                      |
| 27       | DMUTE             | I            | Muting control                                          |
| 28       | TRON              | I            | Tracking servo ON signal<br>(tracking servo ON at "L")  |
| 29       | STAT              | O            | Processing condition<br>(CRC, CUE, CLVS, TT STOP, FCLV) |
| 30       | SUBC              | O            | Sub-code serial output data<br>(Not used, open)         |
| 31       | SBCK              | I            | Clock for sub-code serial output<br>(Not used, open)    |
| 32       | SMCK              | O            | Clock output (4.2336MHz)                                |
| 33       | VDD               | I            | Power supply (connected to +5V)                         |
| 34       | MEMP              | I            | Emphasis signal input<br>(Not used, open)               |
| 35       | FG                | I            | Spindle motor FG signal input<br>(Not used, open)       |
| 36       | PC                | O            | Spindle motor ON signal<br>(ON at "L")                  |
| 37       | EC                | O            | Spindle motor drive signal                              |
| 38       | RESY              | O            | Resynchronizing signal<br>(Not used, open)              |
| 39       | DO                | I            | Drop-out signal (Drop-out at "H")                       |
| 40       | SRF               | I            | EFM signal input (DSL)                                  |
| 41       | EFM               | I            | EFM signal input (PLL)                                  |
| 42       | PCK               | I            | PLL extract clock input<br>(4.3218MHz)                  |
| 43       | FPC               | O            | PLL frequency comparison signal                         |
| 44<br>51 | D7<br>D0          | I/O          | 16K RAM data input/output                               |
| 52       | RAM/OE            | O            | 16K RAM $\overline{OE}$ signal                          |
| 53       | RAM/WE            | O            | 16K RAM $\overline{WE}$ signal                          |
| 54<br>64 | RAM/A0<br>RAM/A10 | O            | 16K RAM address signal<br>(RAMA0: LSB, RAMA10: MSB)     |

● IC401 (MN187124PKD4): System control

| Pin No. | Mark    | I/O Division | Function                                                                                          |
|---------|---------|--------------|---------------------------------------------------------------------------------------------------|
| 1       | VDD     | I            | Power supply terminal                                                                             |
| 2       | OSC2    | I            | Clock terminal (Not used, open)                                                                   |
| 3       | OSC1    | I            | Clock input                                                                                       |
| 4       | Vss     | —            | GND terminal                                                                                      |
| 5       | XI      | I            | Optical servo condition input (Not used, connected to GND)                                        |
| 6       | XO      | O            | Not used, open                                                                                    |
| 7       | STAT    | I            | Key input strobe and processing status input from signal processor LSI traverse position detector |
| 8       | FLOCK   | I            | Optical servo condition (Focus) input                                                             |
| 9       | CNT1    | O            | Optical servo IC control signal (FOON: Focus servo)                                               |
| 10      | CNT2    | O            | Optical servo IC control signal (TR ON: Tracking servo)                                           |
| 11      | CNT3    | O            | Optical servo IC control signal (KICK F: Kick direction [Forward] command)                        |
| 12      | CNT4    | O            | Optical servo IC control signal (KICK R: Kick direction [Reverse] command)                        |
| 13      | FWD     | O            | Traverse forward command signal                                                                   |
| 14      | REV     | O            | Traverse reverse command signal                                                                   |
| 15      | REMOCON | I            | Remote control signal                                                                             |
| 16      | BLKCK   | I            | Sub-code block (Q-data) clock (75 kHz)                                                            |
| 17      | MUTE    | I            | Muting signal                                                                                     |
| 18      | REC. EN | I            | Synchro rec control signal                                                                        |
| 19      | SYNCHRO | O            | Synchro rec control signal                                                                        |
| 20      | SENSE   | I            | Optical servo condition (Track cross)                                                             |
| 21      | RESET   | I            | Reset signal (Treset at "L")                                                                      |
| 22      | CLDCK   | I            | Sub-code frame clock (7.35 kHz)                                                                   |

| Pin No.    | Mark         | I/O Division | Function                              |
|------------|--------------|--------------|---------------------------------------|
| 23         | SUBQ         | I            | Sub-code "Q" data signal              |
| 24         | NC           | —            | Not connected                         |
| 25         | MCLK         | O            | Command clock signal                  |
| 26         | MLD          | O            | Command load signal                   |
| 27         | MDATA        | O            | Command data signal                   |
| 28         | NC           | —            | Not connected                         |
| 29         | NC           | —            | Not used connected to GND             |
| 30<br>} 37 | P47<br>} P40 | I            | Key scan signal                       |
| 38<br>} 46 | D0<br>} D8   | O            | FL glide signal                       |
| 47         | D9           | —            | Not used, open                        |
| 48         | DRAW         | O            | Motor drive control                   |
| 49         | TURN         | O            | Motor drive control                   |
| 50         | F/R          | O            | Motor drive control                   |
| 51         | SLOW         | O            | Motor drive control                   |
| 52<br>53   | NC           | —            | Not connected                         |
| 54<br>} 63 | S9<br>} S0   | O            | FL segment signal and key Scan signal |
| 64         | Vpp          | I            | FL drive power supply terminal        |




## • IC801 (MN6474): Digital filter &amp; D/A converter


| Pin No. | Mark  | I/O Division | Function                           |
|---------|-------|--------------|------------------------------------|
| 1       | MLD   | I            | Command load input (load: L)       |
| 2       | RSTB  | I            | Reset command                      |
| 3       | IE    | I            | Not used, connected to GND         |
| 4       | TP1   | O            | TEST terminal                      |
| 5       | TP2   |              |                                    |
| 6       | TEST1 | I            | TEST terminal 1 (connected to GND) |
| 7       | TEST2 | I            | TEST terminal 2 (connected to GND) |
| 8       | NC    | —            | Not connected                      |
| 9       |       |              |                                    |
| 10      | AVDD4 | I            | Power supply                       |
| 11      | L (—) | O            | Lch data output, (—) terminal      |
| 12      | AVSS4 | —            | GND terminal                       |
| 13      | AVSS3 |              |                                    |
| 14      | L (+) | O            | Lch data output, (+) terminal      |
| 15      | AVDD3 | I            | Power supply                       |
| 16      | NC    | —            | Not connected                      |
| 17      | AVDD2 | I            | Power supply                       |
| 18      | R (+) | O            | Rch data output, (+) terminal      |
| 19      | AVSS2 | —            | GND terminal (analog system)       |
| 20      | AVSS1 | —            |                                    |
| 21      | R (—) | O            | Rch data output, (—) terminal      |
| 22      | AVDD1 | I            | Power supply                       |

| Pin No. | Mark   | I/O Division | Function                                                  |
|---------|--------|--------------|-----------------------------------------------------------|
| 23      | DVDD1  | I            | Power supply                                              |
| 24      | DVSS1  | —            | GND terminal (digital system)                             |
| 25      | X2     | O            | Clock output                                              |
| 26      | X1     | I            | Clock input                                               |
| 27      | NC     | —            | Not used, open                                            |
| 28      | DVDD2  | I            | Power supply                                              |
| 29      | DVSS2  | —            | GND terminal (digital system)                             |
| 30      | NSUB   | I            | Sub-strate terminal (Not used, connected to power supply) |
| 31      | 768fs  | O            | 768fs (33.8688MHz) (Not used, open)                       |
| 32      | 192fs  | O            | 192fs (8.4672MHz) (Not used, open)                        |
| 33      | LRPOL  | —            | LR clock selector (Not used, connected to power supply)   |
| 34      | L/R    | I            | LR discrimination signal input                            |
| 35      | SRCK   | I            | Serial bit clock input                                    |
| 36      | SRDATA | I            | Serial data input (MSB first)                             |
| 37      | DVSS3  | —            | GND terminal (digital system)                             |
| 38      | DVDD   | I            | Power supply                                              |
| 39      | 384fs  | O            | 384fs (16.9344MHz) output                                 |
| 40      | PD     | I            | Power down terminal (Not used, connected to GND)          |
| 41      | MDATA  | I            | Mode control data                                         |
| 42      | MLCK   | I            | Data clock for MDATA                                      |

# BLOCK DIAGRAM

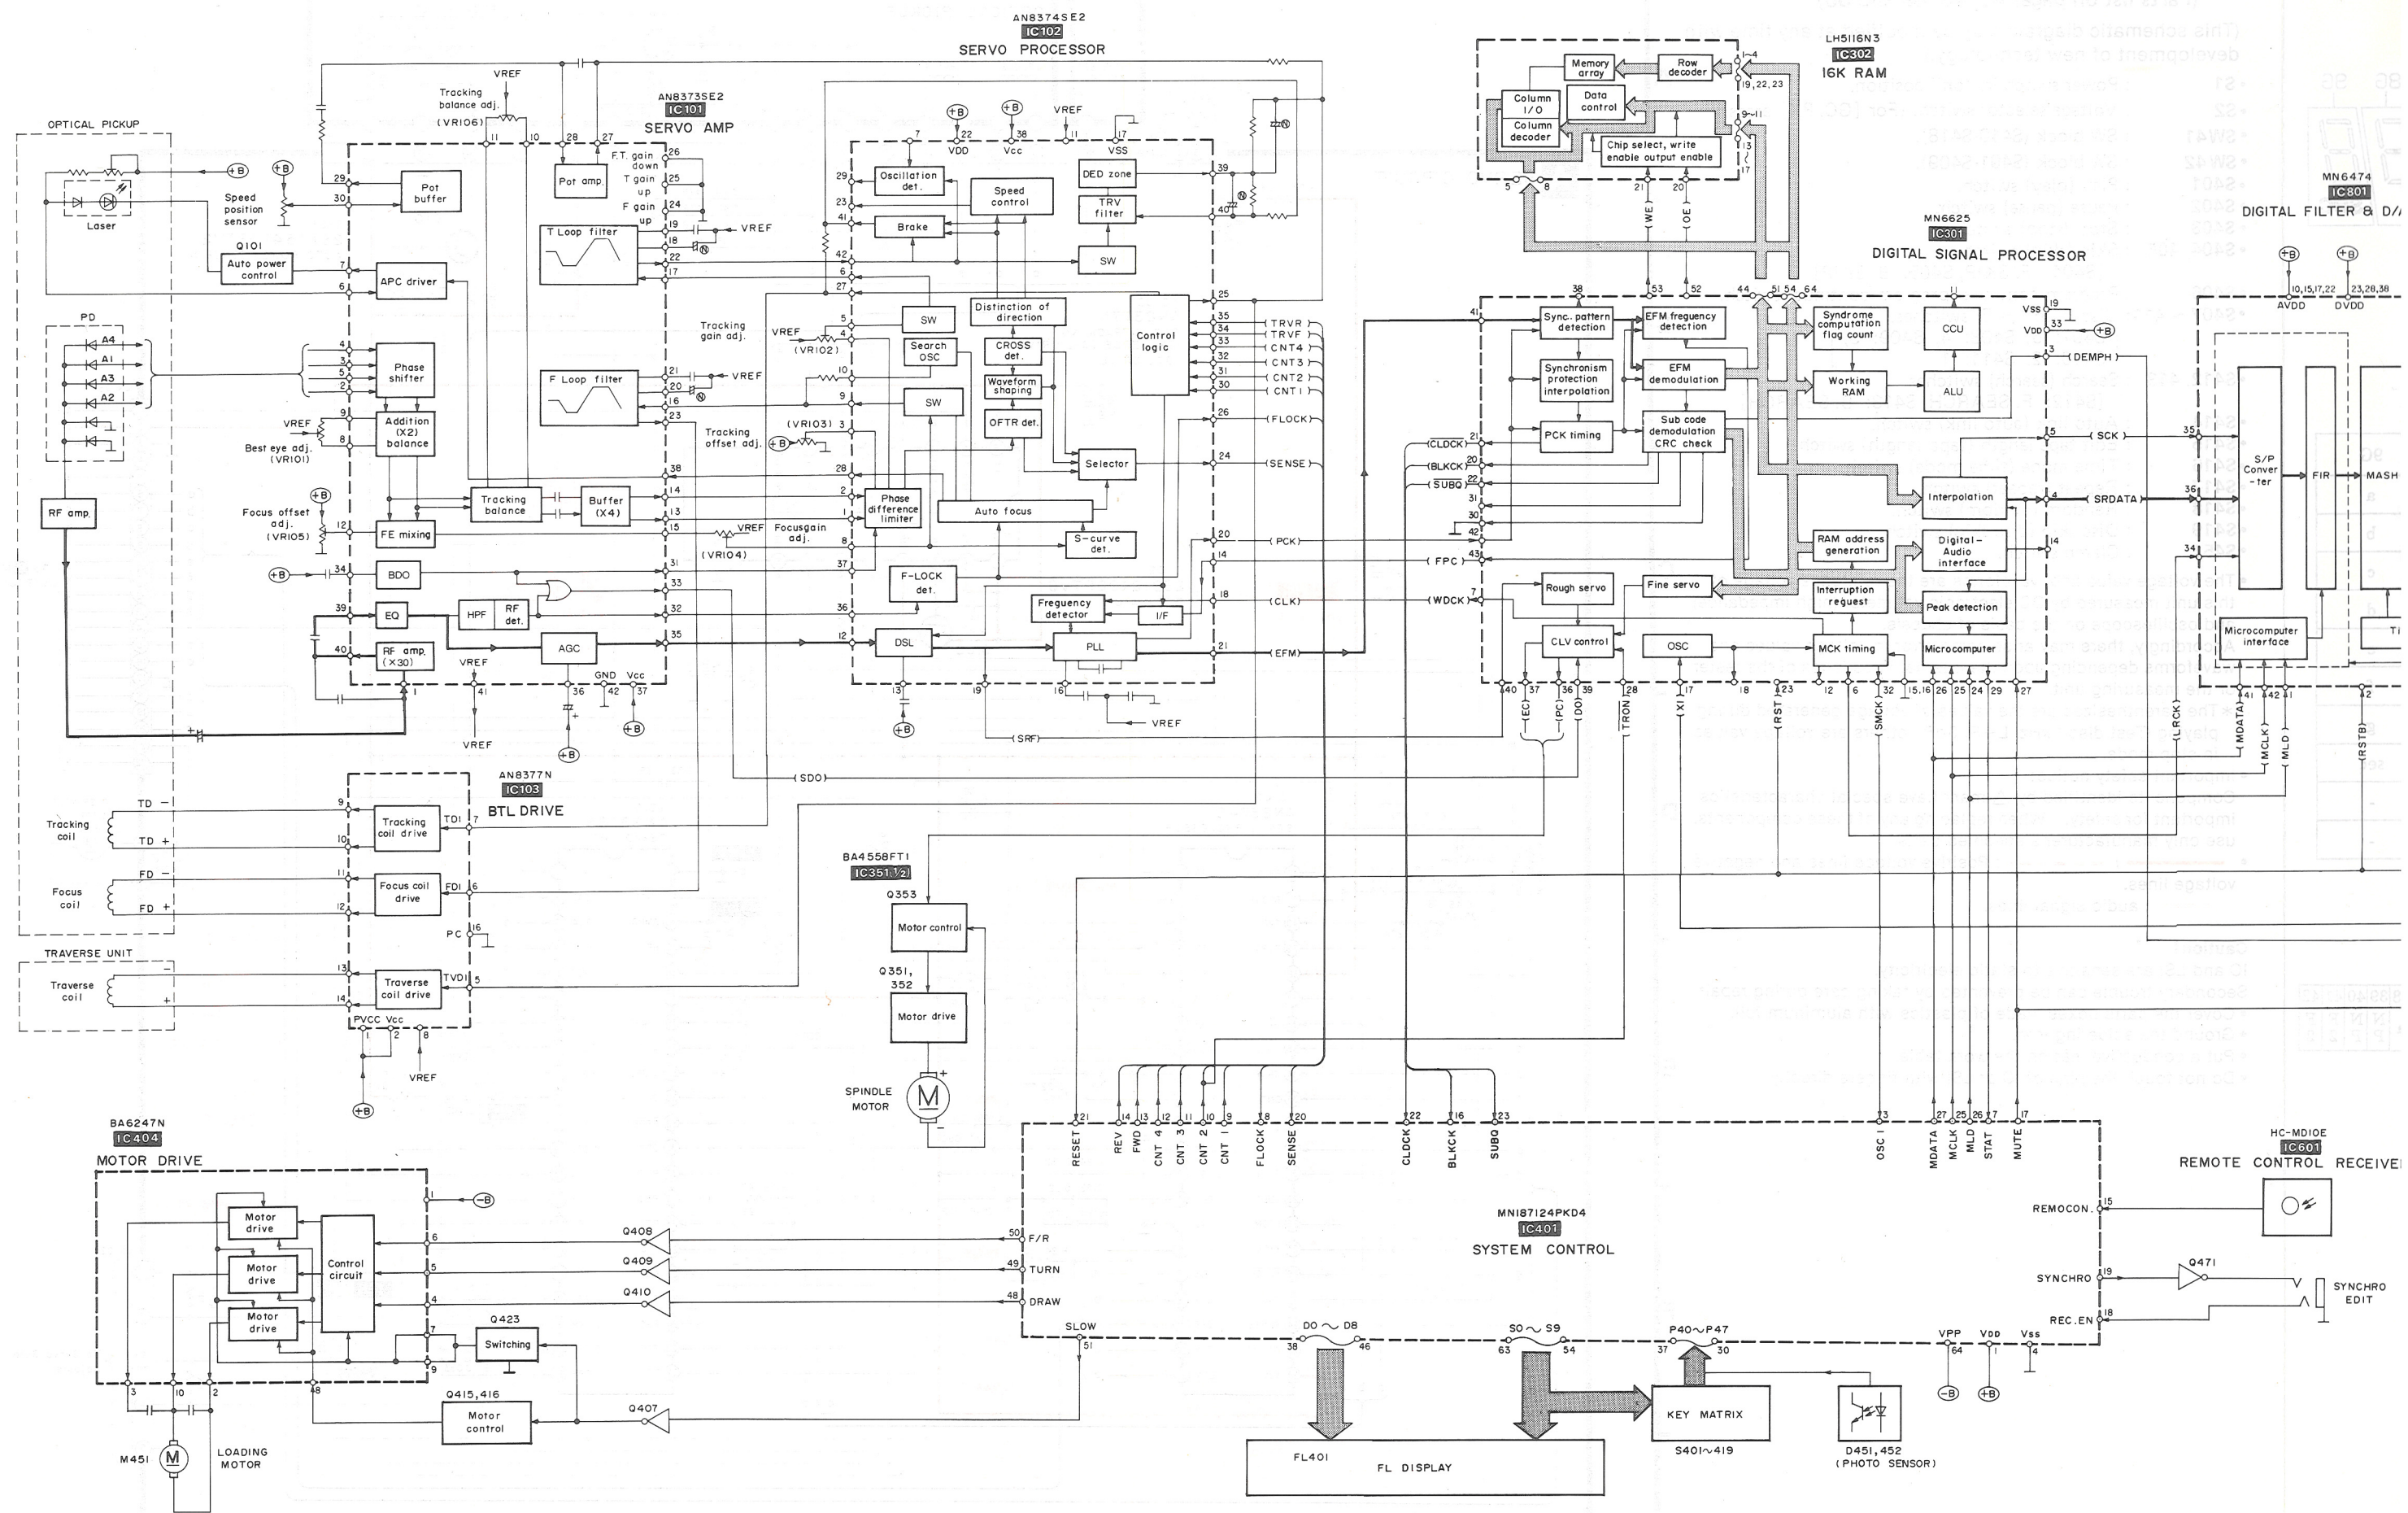



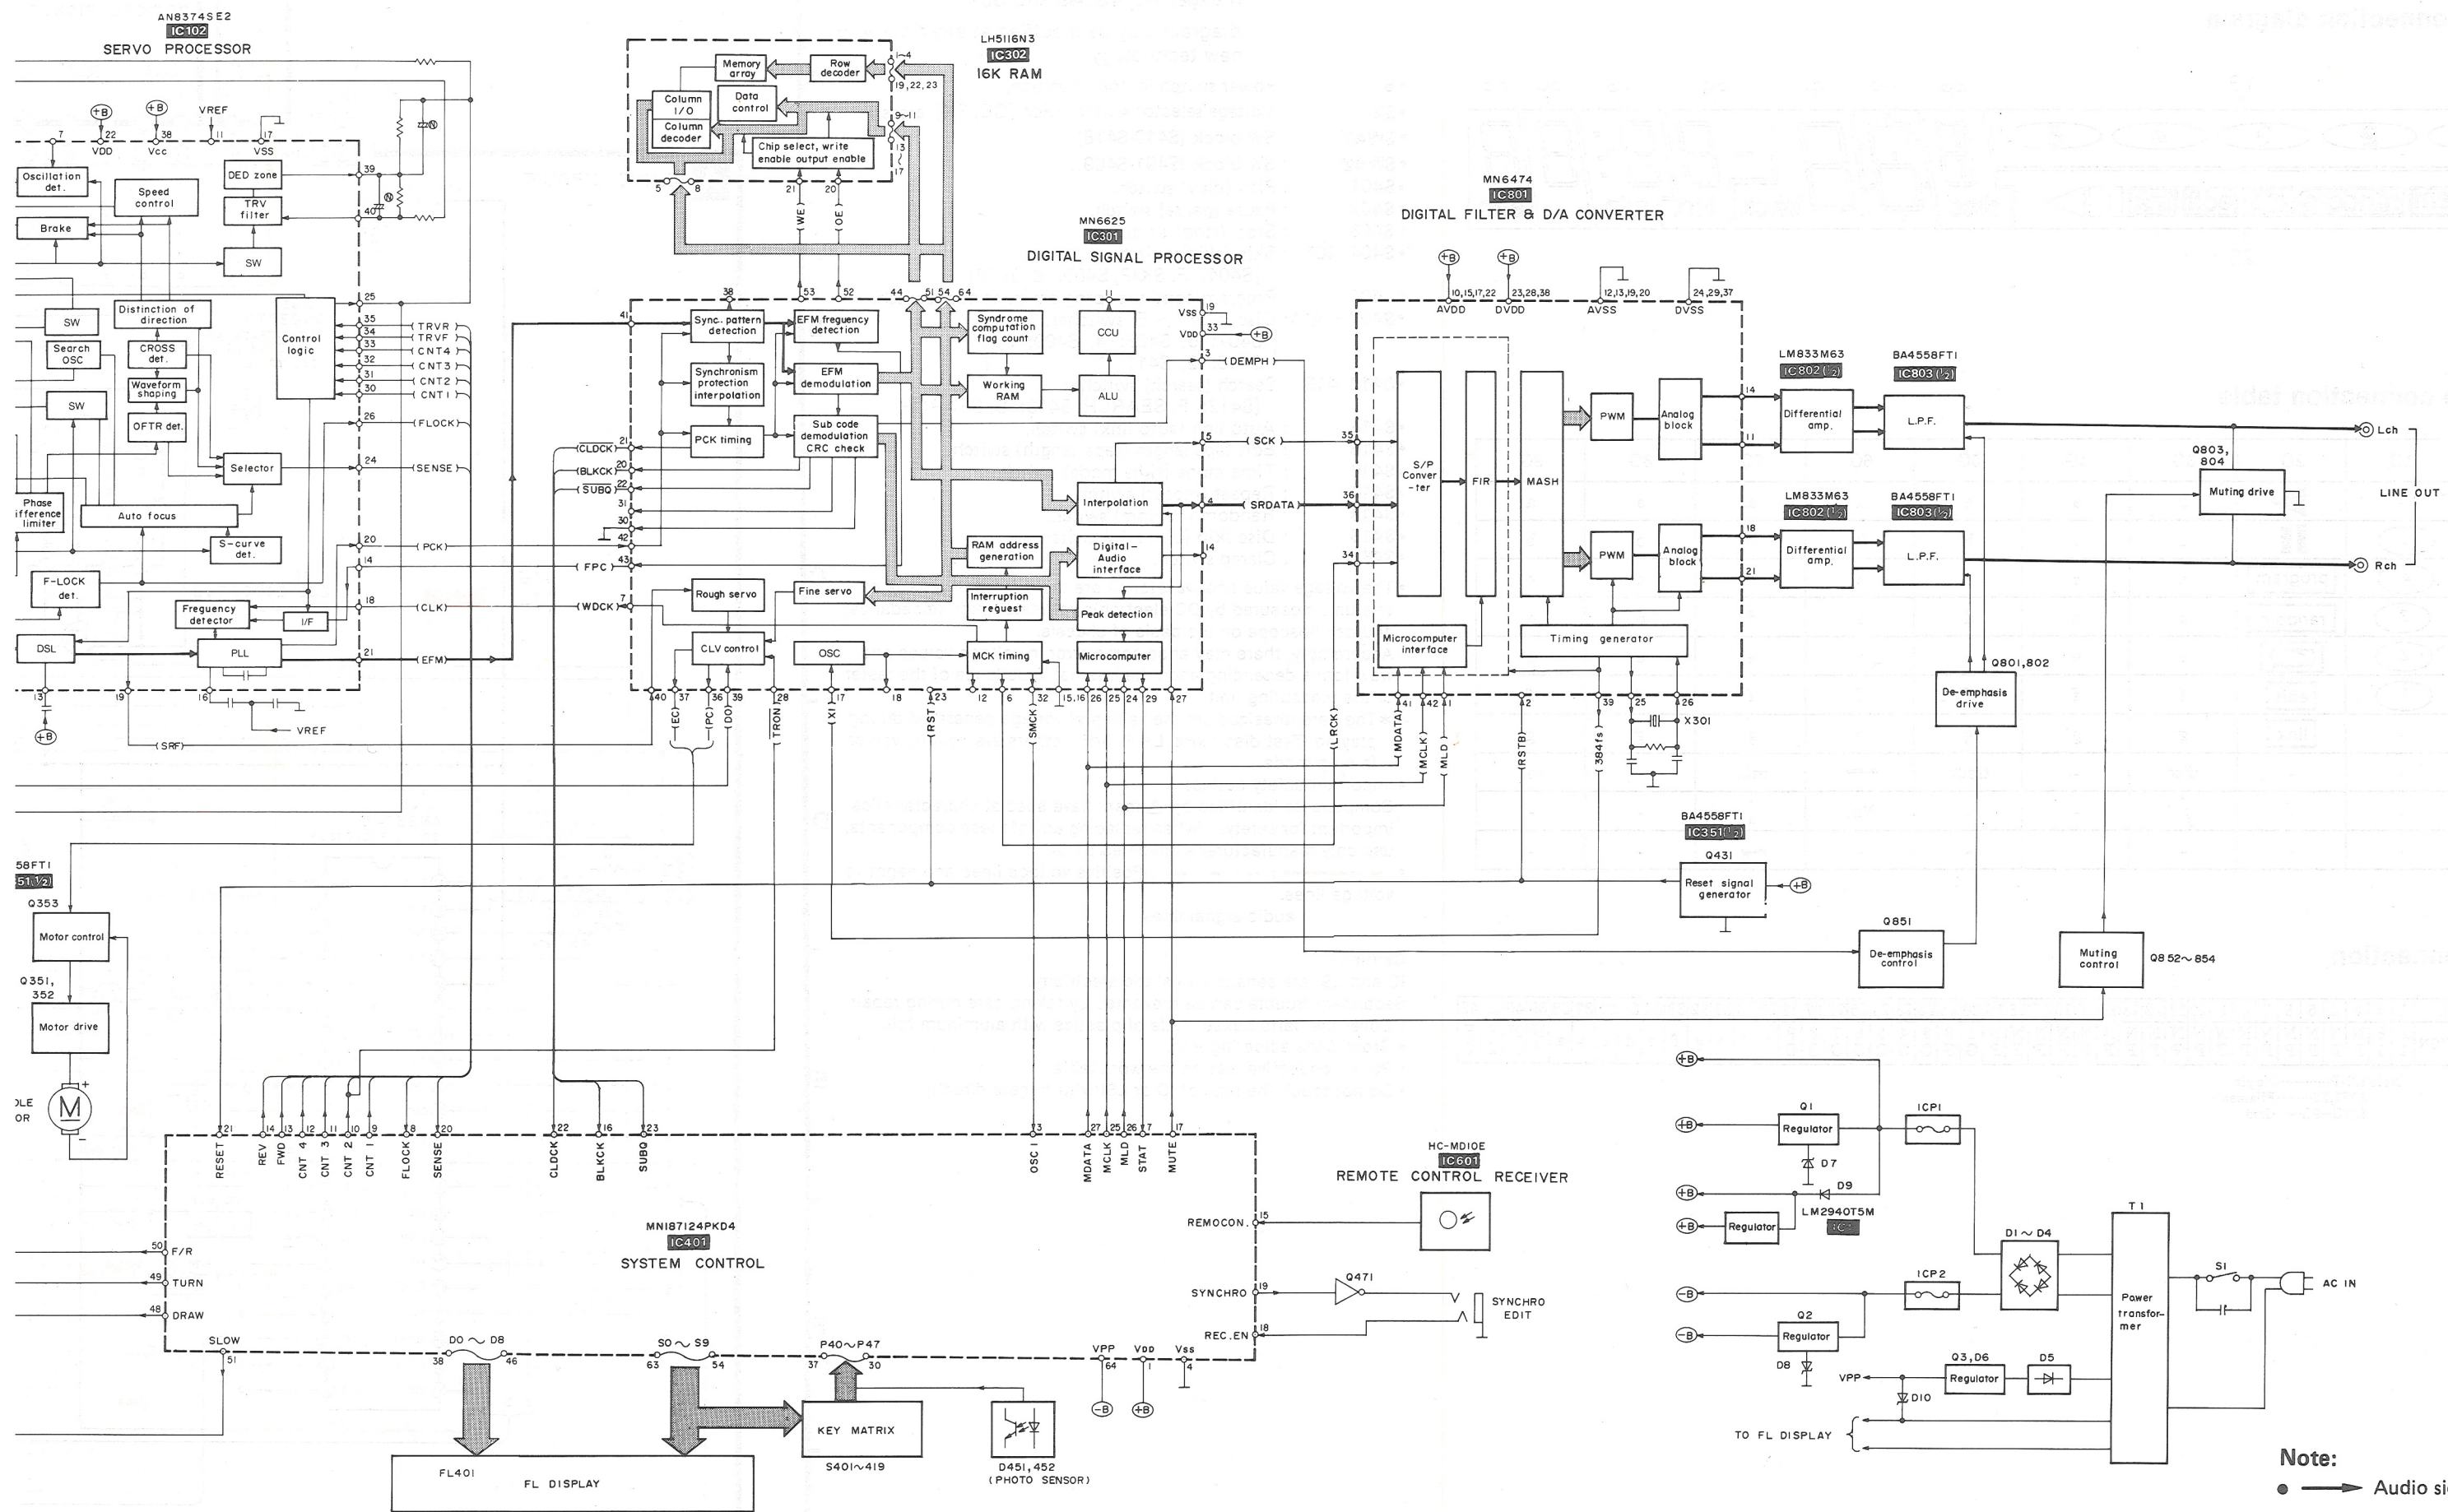


Note:  
● → Audio signal



## INTERNAL CONNECTION OF FL

### Grid connection diagram

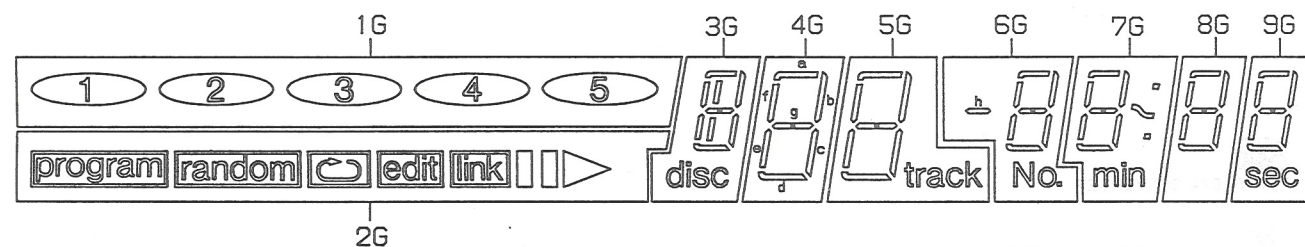

### Anode connection table

|   | 1G | 2G      | 3G   | 4G | 5G    | 6G  | 7G  | 8G | 9G  |
|---|----|---------|------|----|-------|-----|-----|----|-----|
| a | -  | ▶       | a    | a  | a     | a   | a   | a  | a   |
| b | 5  | ⏸       | b    | b  | b     | b   | b   | b  | b   |
| c | 4  | program | c    | c  | c     | c   | c   | c  | c   |
| d | 3  | random  | d    | d  | d     | d   | d   | d  | d   |
| e | 2  | ↺       | e    | e  | e     | e   | e   | e  | e   |
| f | 1  | edit    | f    | f  | f     | f   | f   | f  | f   |
| g | -  | link    | g    | g  | g     | g   | g   | g  | g   |
| h | -  | -       | disc | -  | track | —   | min | -  | sec |
| i | -  | -       | /    | -  | -     | No. | ■   | -  | -   |
| j | -  | -       | -    | -  | -     | ~   | -   | -  | -   |

### Pin connection

| PIN NO.    | 1      | 2      | 3      | 4      | 5      | 6      | 7      | 8      | 9      | 10     | 11     | 12     | 13     | 14     | 15     | 16     | 17     | 18     | 19     | 20     | 21     | 22     | 23     | 24     | 25     | 26     | 27     | 28     | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39     | 40     | 41     | 42     |
|------------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|----|----|----|----|----|----|----|----|----|----|--------|--------|--------|--------|
| CONNECTION | F<br>1 | F<br>1 | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | N<br>P | 1<br>G | 2<br>G | 3<br>G | 4<br>G | 5<br>G | 6<br>G | 7<br>G | 8<br>G | 9<br>G | j  | i  | h  | g  | f  | e  | d  | c  | b  | a  | N<br>P | N<br>P | F<br>2 | F<br>2 |

Note 1.)NP..... No pin.  
2.)F1,F2..... Filament  
3.)1G~9G..... Grid

## SCHEMATIC DIAGRAM

(Parts list on pages 42, 43, 49 and 50)

(This schematic diagram may be modified at any time with development of new technology.)

- S1 : Power switch in "on" position.
- S2 : Voltage selector switch. (For [GC, PX] areas.)
- SW41 : SW block (S410-S418).
- SW42 : SW block (S401-S409).
- S401 : Play (play) switch.
- S402 : Pause (pause) switch.
- S403 : Stop (stop) switch.
- S404, 405 : Skip (skip) switch.  
[S404: F. SKIP, S405: B. SKIP]
- S406 : Program/continue (program/continue) switch.
- S407 ~ 411 : Disc (disc 1 ~ 5) switches.  
[S407: 5, S408: 4, S409: 3,  
S410: 2, S411: 1]
- S412, 413 : Search (search) switches.  
[S412: F. SEARCH, S413: B. SEARCH]
- S414 : Auto link (auto link) switch.
- S415 : Edit tape length (tape length) switch.
- S416 : Time mode (time mode) switch.
- S417 : Repeat (repeat) switch.
- S418 : Random (random) switch.
- S419 : Disc skip (disc skip) switch.
- S451 : Clamp switch.

• The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis.

Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

\*The parenthesized are the values of voltage generated during playing (Test disc 1 kHz, L+R, 0dB), others are voltage values in stop mode.

• Important safety notice:

Components identified by  $\Delta$  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

• — / — : Positive voltage lines and negative voltage lines.


• ..... : audio signal lines.

### Caution!

IC and LSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.

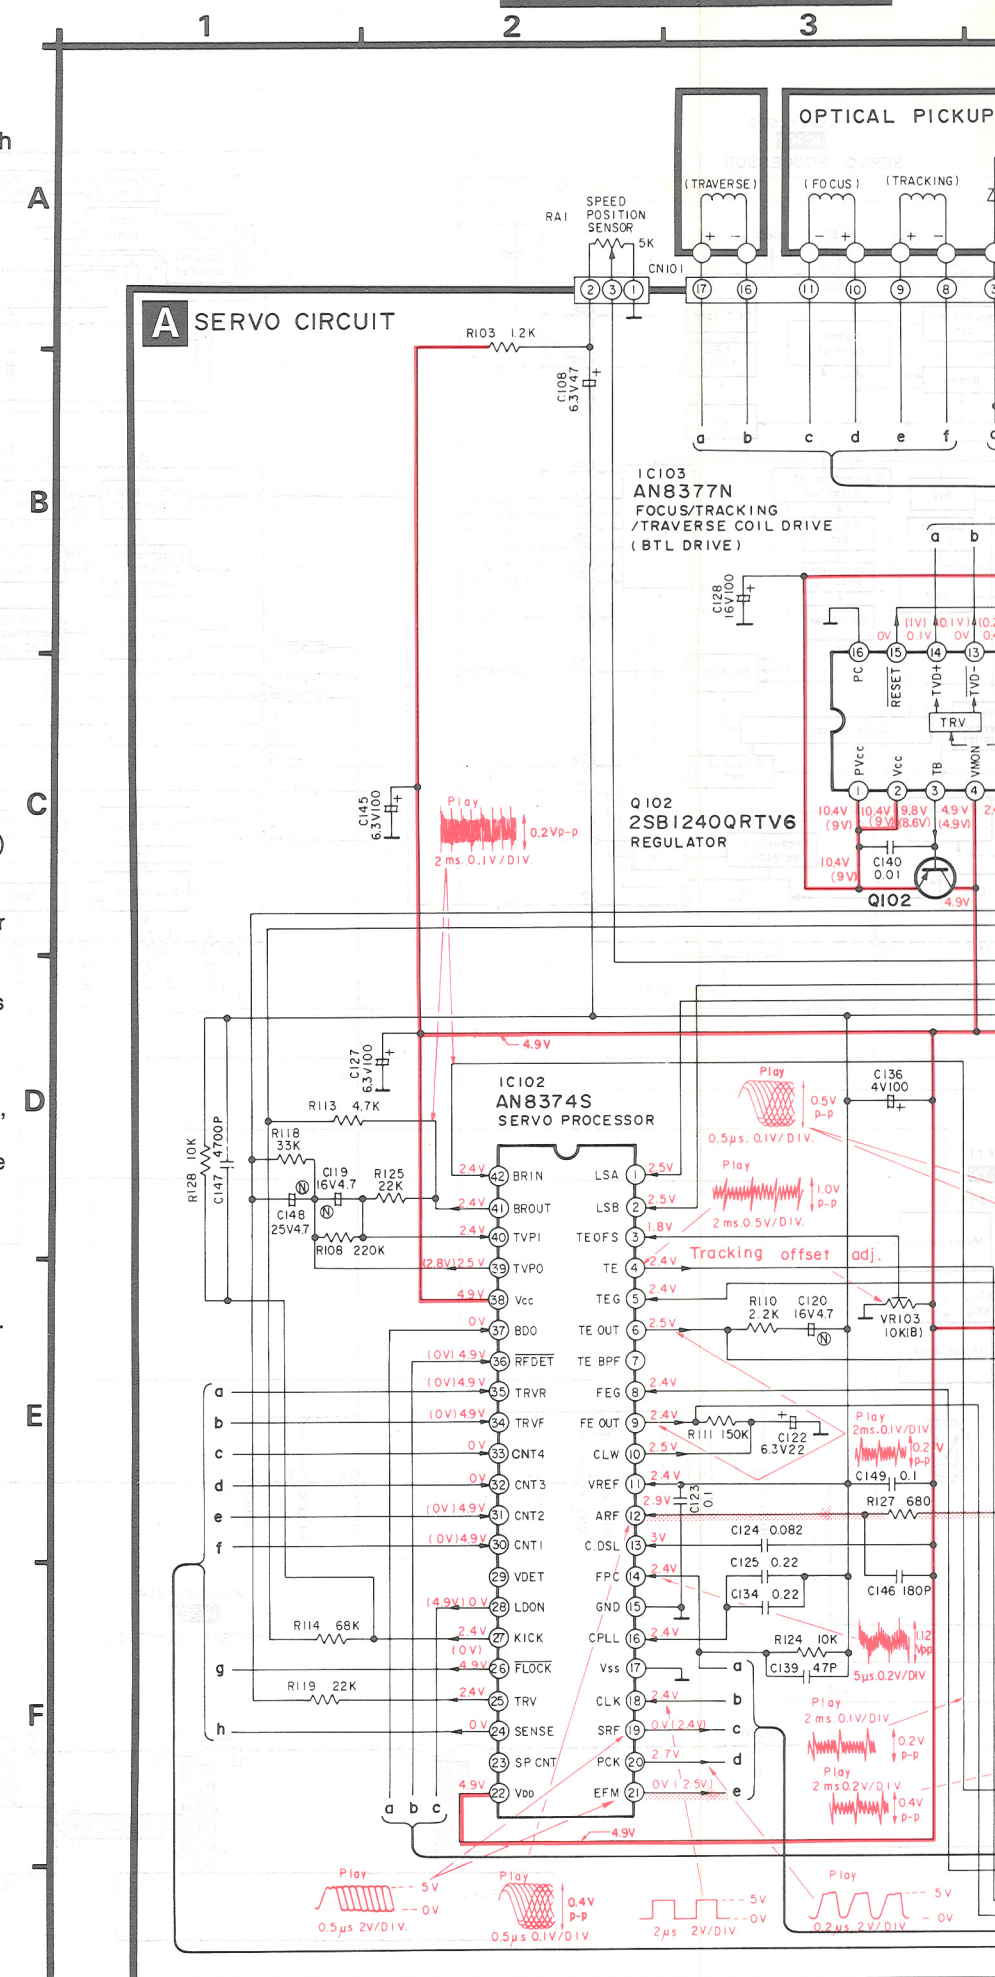



(Parts list on pages 42, 43, 49 and 50)

- **S1** : Power switch in “on” position.
- **S2** : Voltage selector switch. (For [GC, PX] areas.)
- **SW41** : SW block (S410-S418).
- **SW42** : SW block (S401-S409).
- **S401** : Play (play) switch.
- **S402** : Pause (pause) switch.
- **S403** : Stop (stop) switch.
- **S404, 405** : Skip (skip) switch.  
[S404: F. SKIP, S405: B. SKIP]
- **S406** : Program/continue (program/continue) switch.
- **S407 ~ 411** : Disc (disc 1 ~ 5) switches.  
[S407: 5, S408: 4, S409: 3,  
S410: 2, S411: 1]
- **S412, 413** : Search (search) switches.  
[S412: F. SEARCH, S413: B. SEARCH]
- **S414** : Auto link (auto link) switch.
- **S415** : Edit tape length (tape length) switch.
- **S416** : Time mode (time mode) switch.
- **S417** : Repeat (repeat) switch.
- **S418** : Random (random) switch.
- **S419** : Disc skip (disc skip) switch.
- **S451** : Clamp switch.

\*The parenthesized are the values of voltage generated during playing (Test disc 1kHz, L+R, 0dB), others are voltage values in stop mode.

Components identified by  $\Delta$  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

 : audio signal lines.

IC and LSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.
































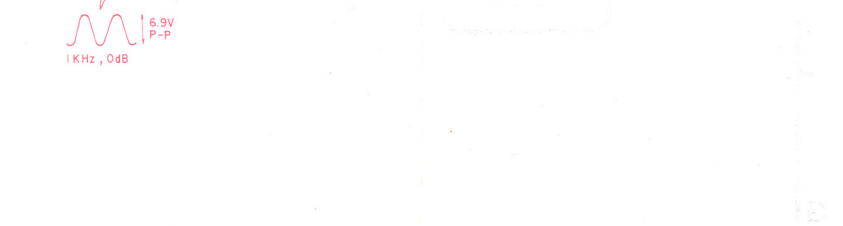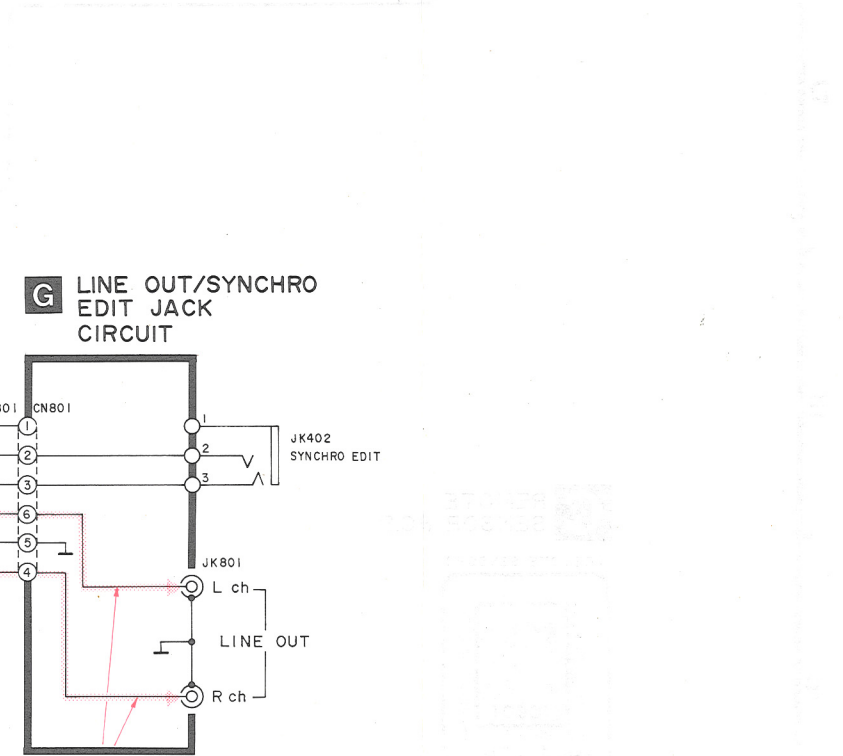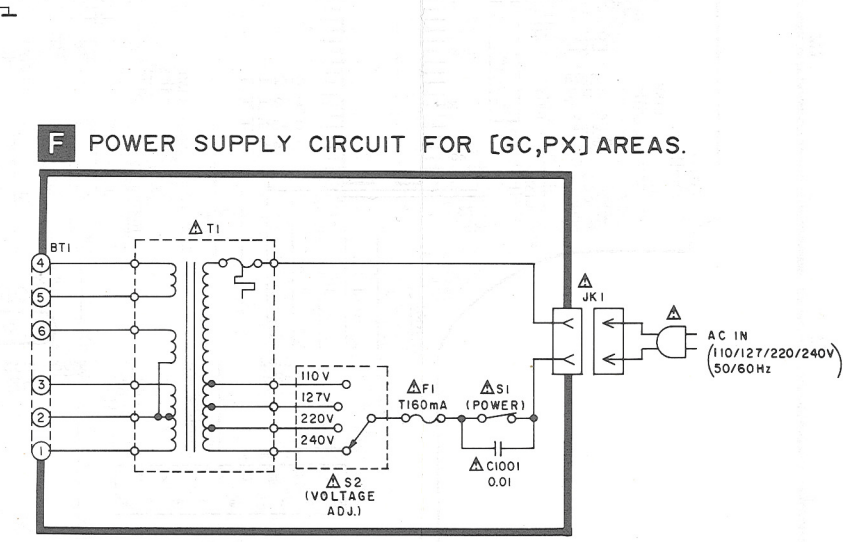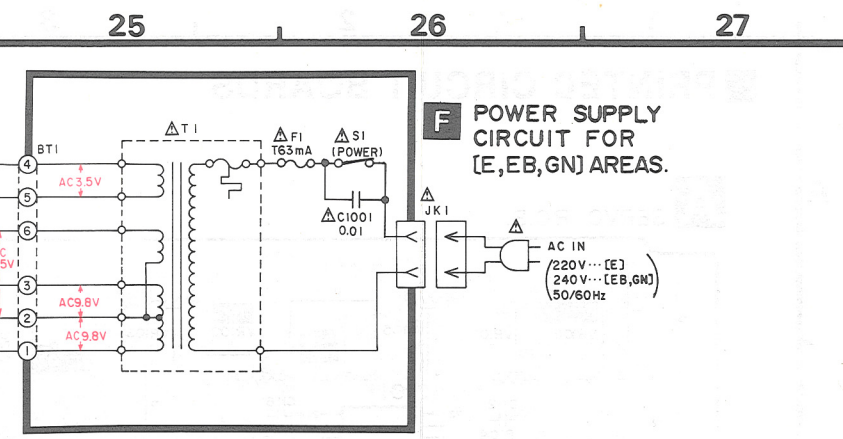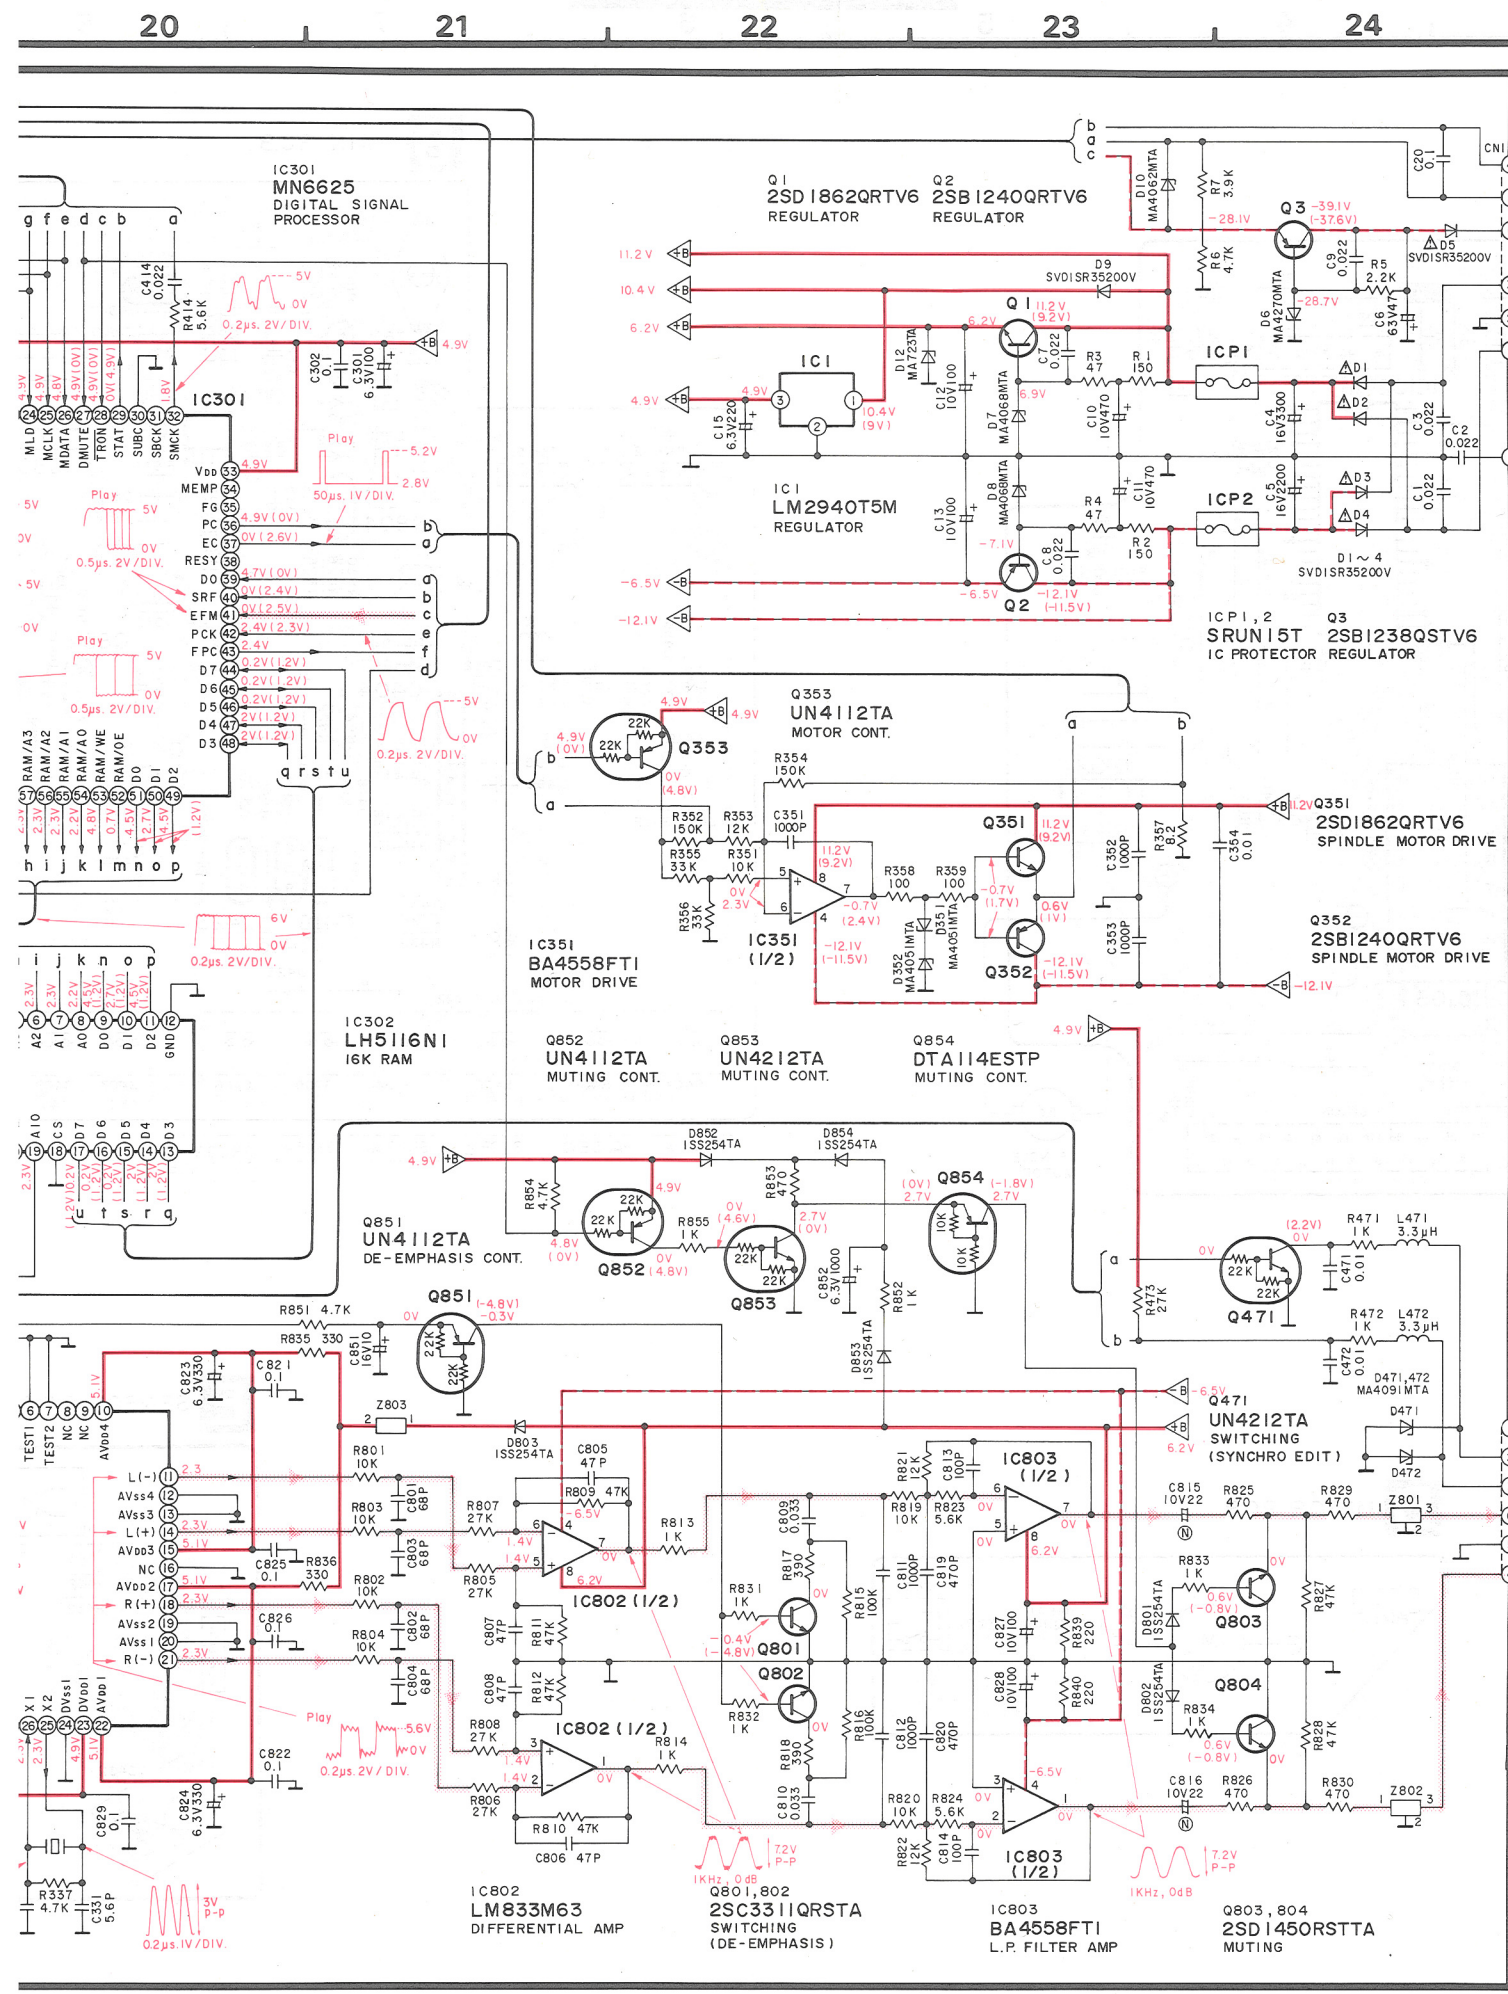




■ TERMINAL GUIDE OF IC'S,  
TRANSISTORS AND DIODES
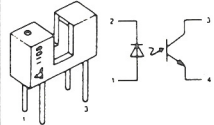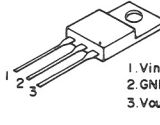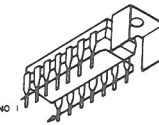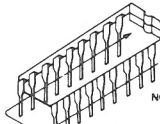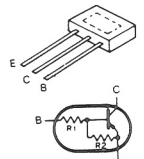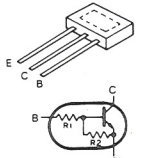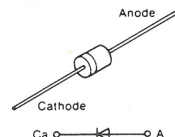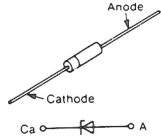
|                                                                                                                                                                              |                                                                                                                                            |                                                                                                                                                                                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>BA6247N</b> 10 Pin<br><br>NO. 1                                                          | <b>SVDGP1S53</b><br><br>1. Vin<br>2. GND<br>3. Vout       | <b>LM2940T5M</b><br><br>1. Vin<br>2. GND<br>3. Vout                                                           |
| <br><b>LM833M63</b><br><b>BA4558FTI</b><br><b>LH5116N3</b> 24 Pin                            | <b>8 Pin</b><br><b>AN8373S</b><br><b>AN8374S</b><br><b>42 Pin</b>                                                                          |                                                                                                                                                                                                |
| <b>AN8377N</b> 16 Pin<br><br>NO. 1                                                           | <b>MN6625</b> 64 Pin<br><b>MN6474</b> 42 Pin<br><br>NO. 1 | <b>MN187124PKD4</b> 64 Pin<br><br>NO. 1                                                                       |
| <b>SRUN15T</b><br><br>1. Input<br>2. Output                                                  | <br><b>UN4112TA</b><br><b>DTA114ESTP</b>                 |                                                                                                                                                                                                |
| <b>2SD1450RSTTA</b><br><b>2SC3311QRSTA</b><br><b>2SA1309QRSTA</b><br><br>E<br>C<br>B       | <b>UN4212TA</b><br><br>E<br>C<br>B                      | <b>2SB1238QSTV6</b><br><b>2SD1862QRTV6</b><br><b>2SB1240QRTV6</b><br><b>2SA1547QSTV2</b><br><br>B<br>C<br>E |
| <b>SVD1SR35200V</b><br><b>MA723TA</b><br><b>1SS254TA</b><br><br>Anode<br>Cathode<br>Ca C A | <br>Anode<br>Cathode<br>Ca C A                          | <b>MA4091MTA</b><br><b>MA4030MTA</b><br><b>MA4062MTA</b><br><b>MA4033MTA</b><br><b>MA4051MTA</b><br><b>MA4068MTA</b><br><b>MA4270MTA</b>                                                       |

■ PRINTED CIRCUIT BOARDS

A


**A** SERVO P.C.B.

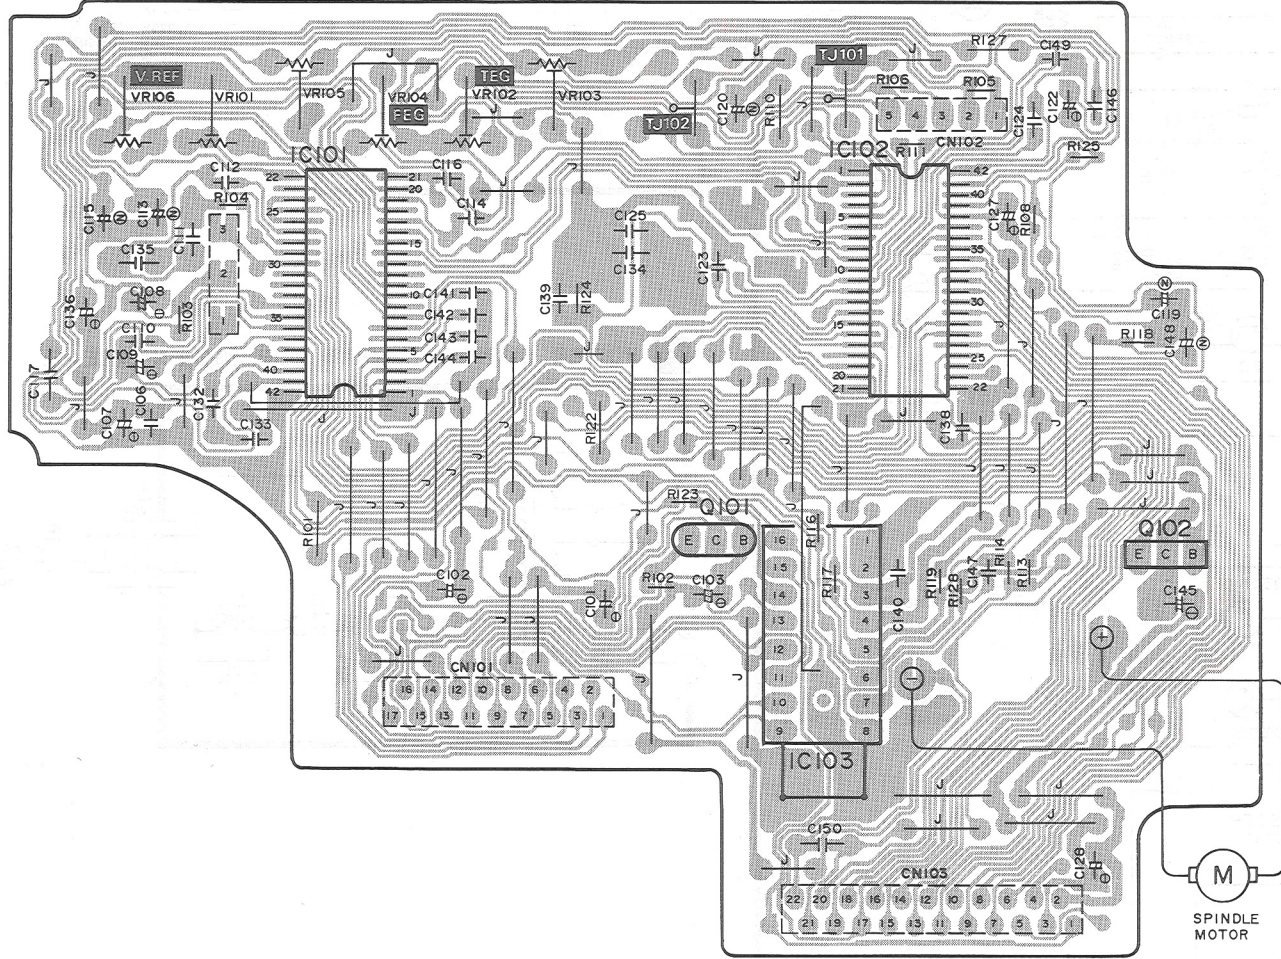

B


B

MAIN P.C.B.

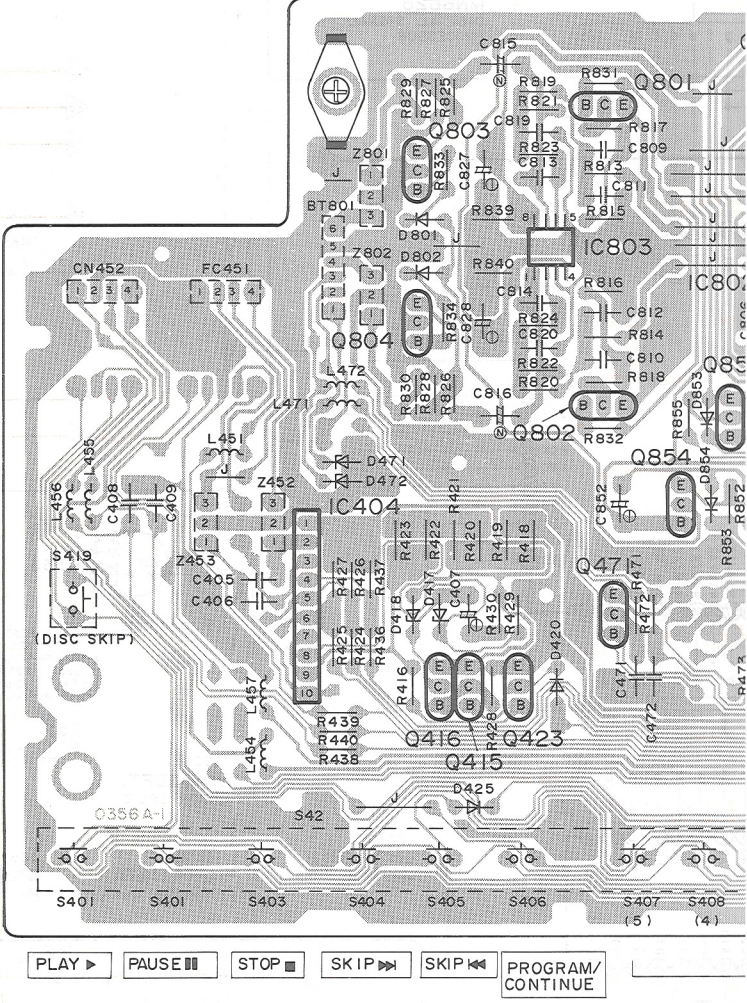


C

**C** REMOTE  
SENSOR P.C.B.

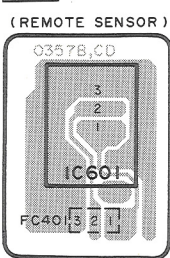


D

**D** MOTOR P.C.B.

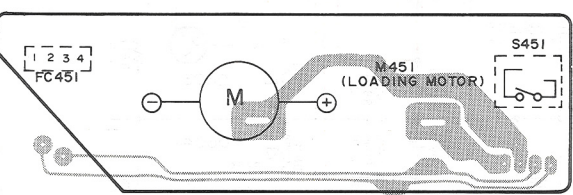


E



**E** SENSOR P.C.B.

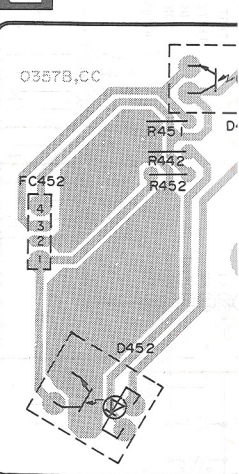

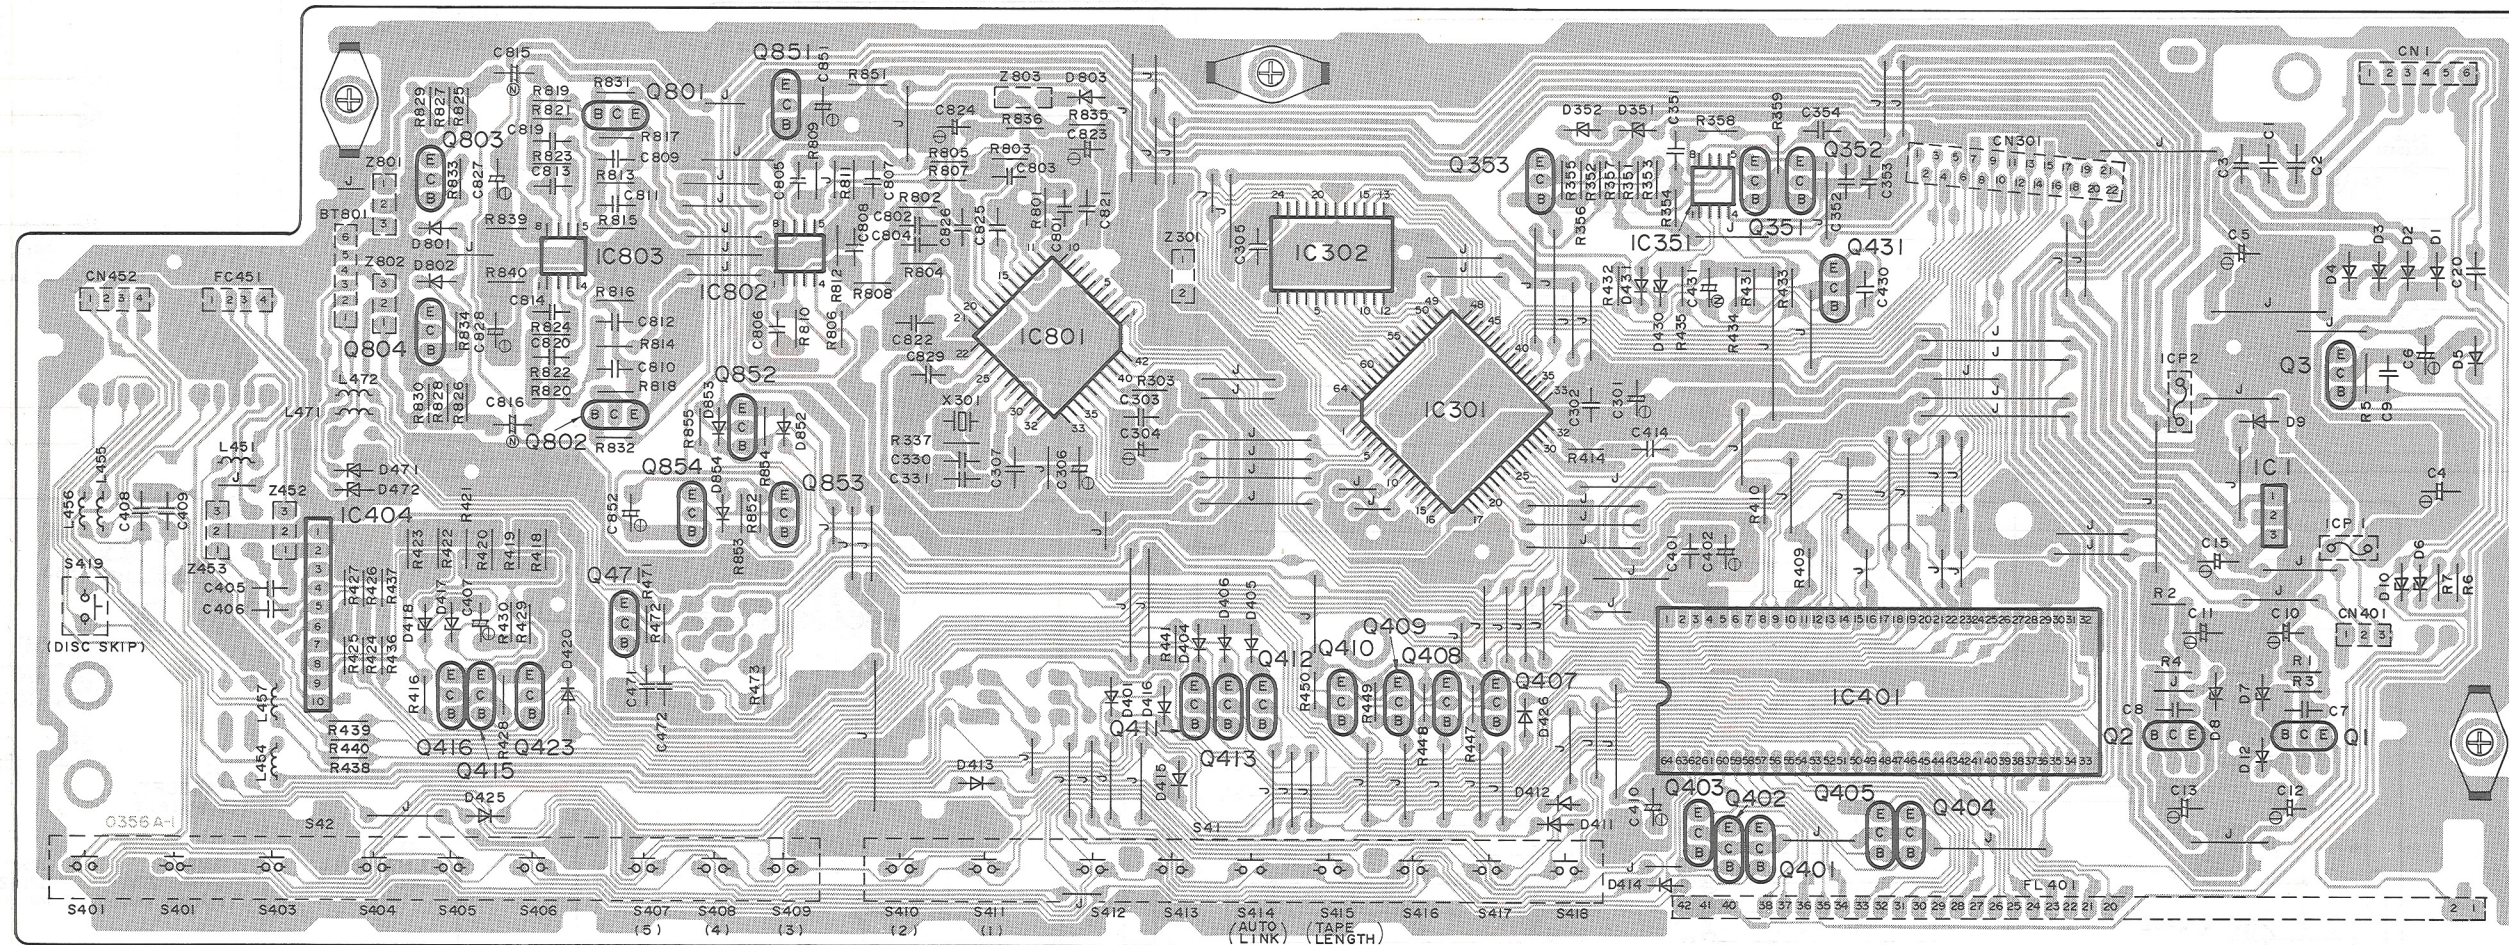


**B** MAIN P.C.B.


PLAY ► PAUSE ■ STOP ■ SKIP ► SKIP ◀ PROGRAM/CONTINUE DISK SEARCH ► SEARCH ◀ SYNCHRO EDIT TIME MODE REPEAT RANDOM

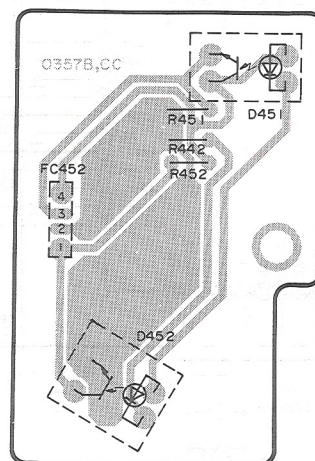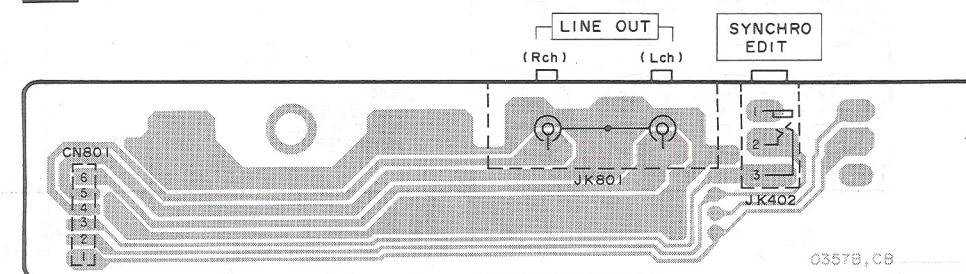**E** SENSOR P.C.B.**G** LINE OUT/SYNCHRO EDIT JACK P.C.B.




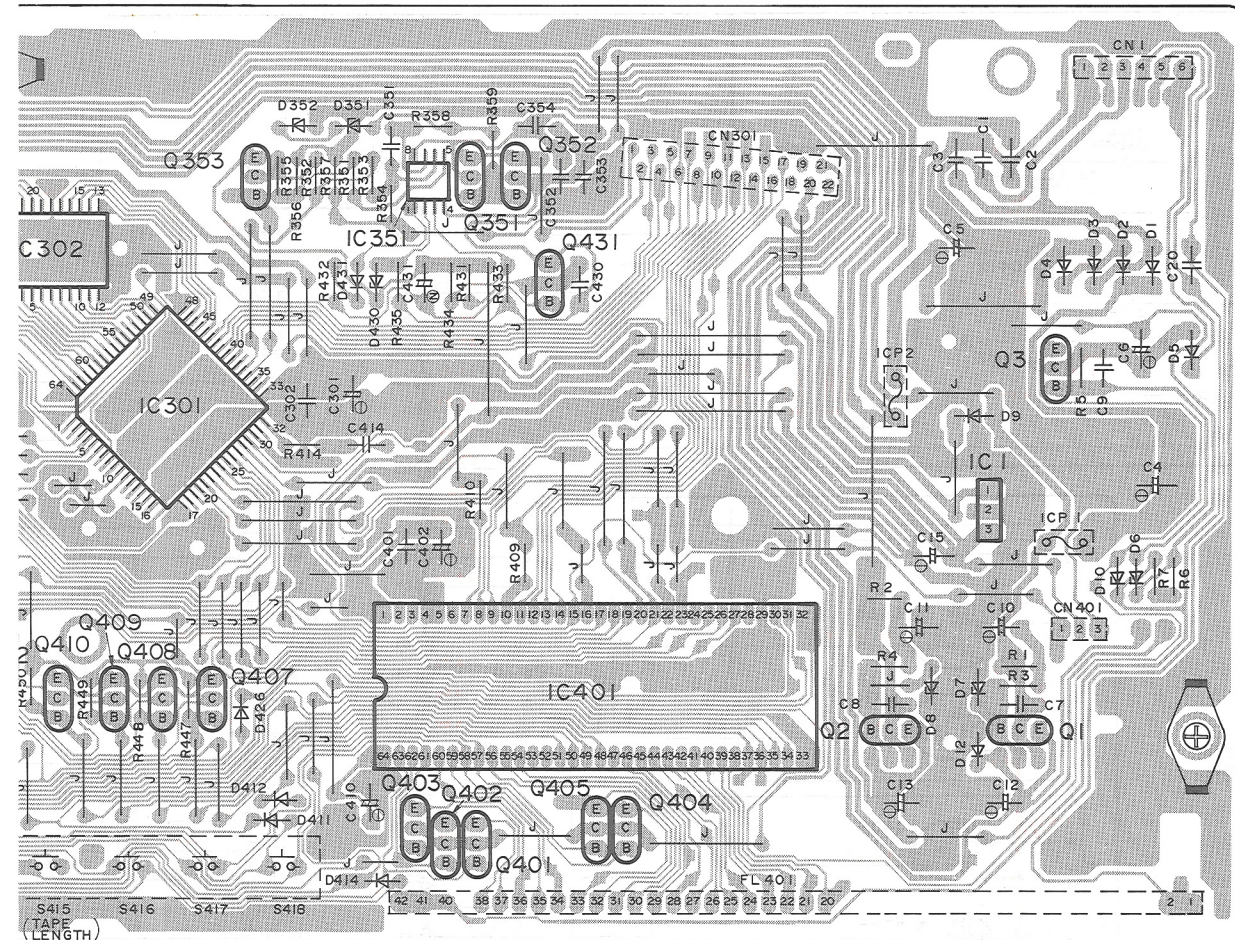


**G** LINE OUT/SYNCHRO EDIT JACK P.C.B.

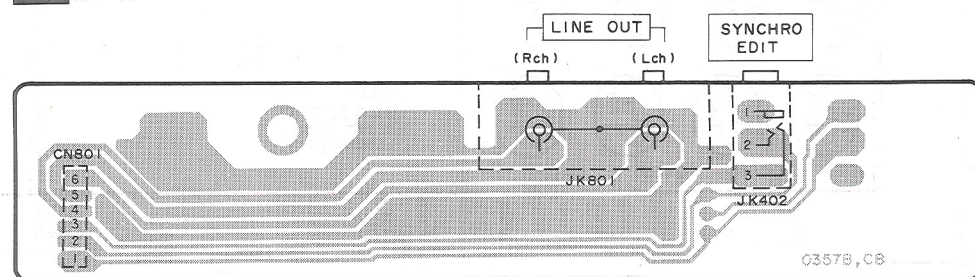

**F** POWER SUPPLY P.C.B. FOR (E,EB,GN) AREAS.

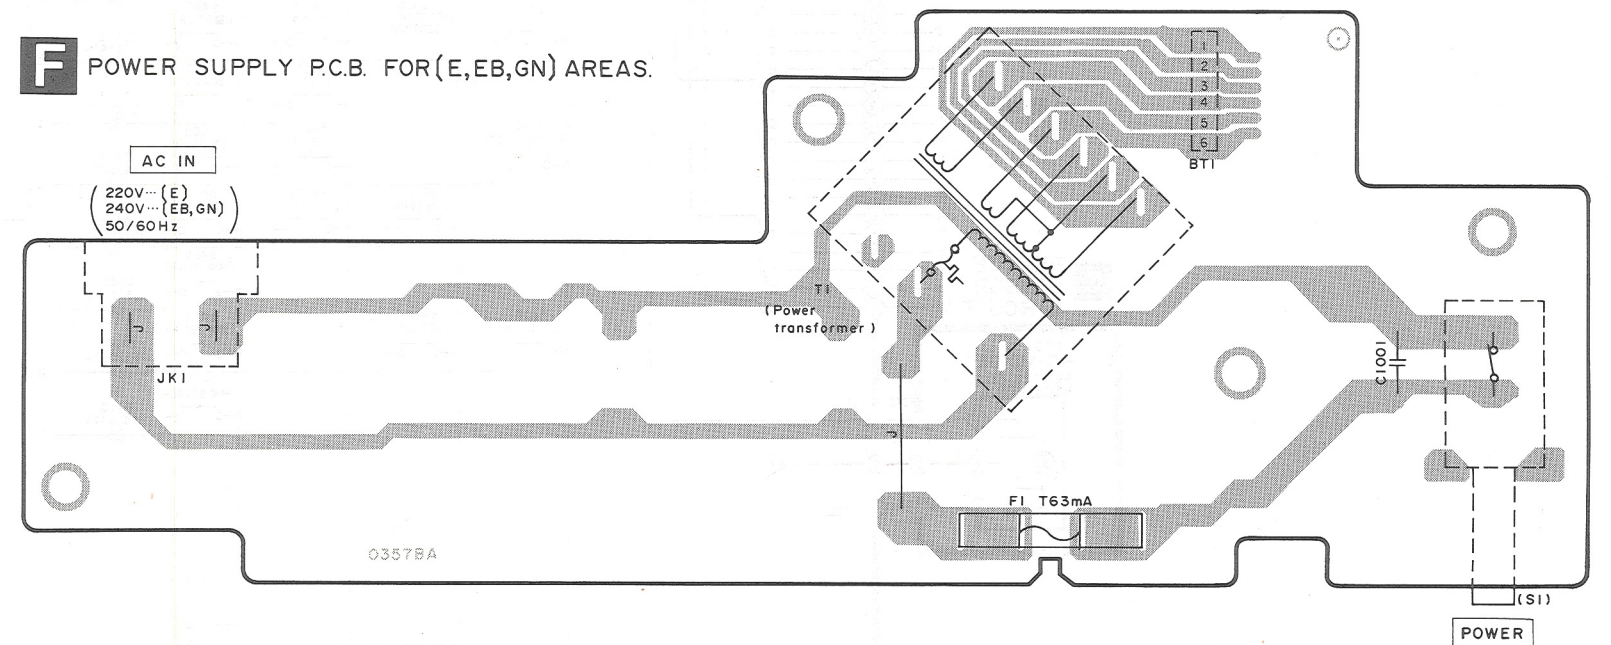


**F** POWER SUPPLY P.C.B. FOR (GC,PX) AREAS.

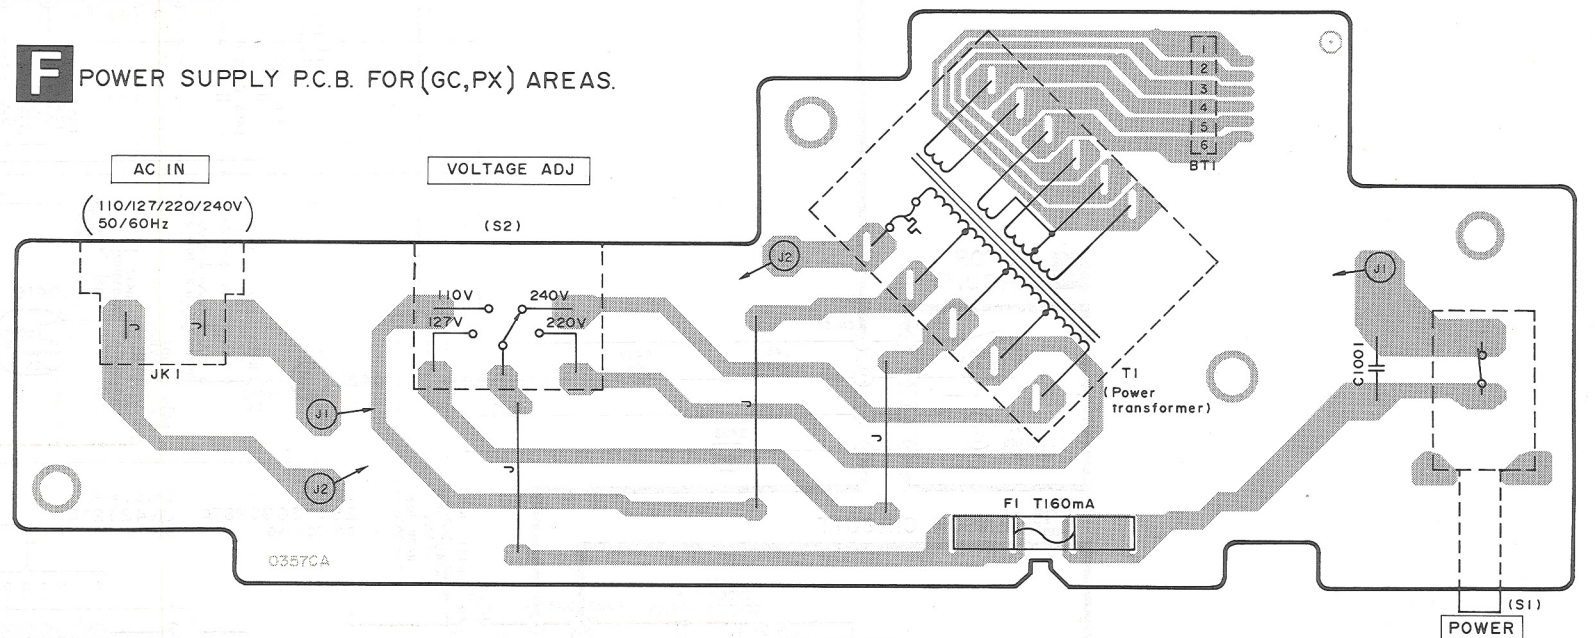



# WIRING CONNECTION DIAGRAM

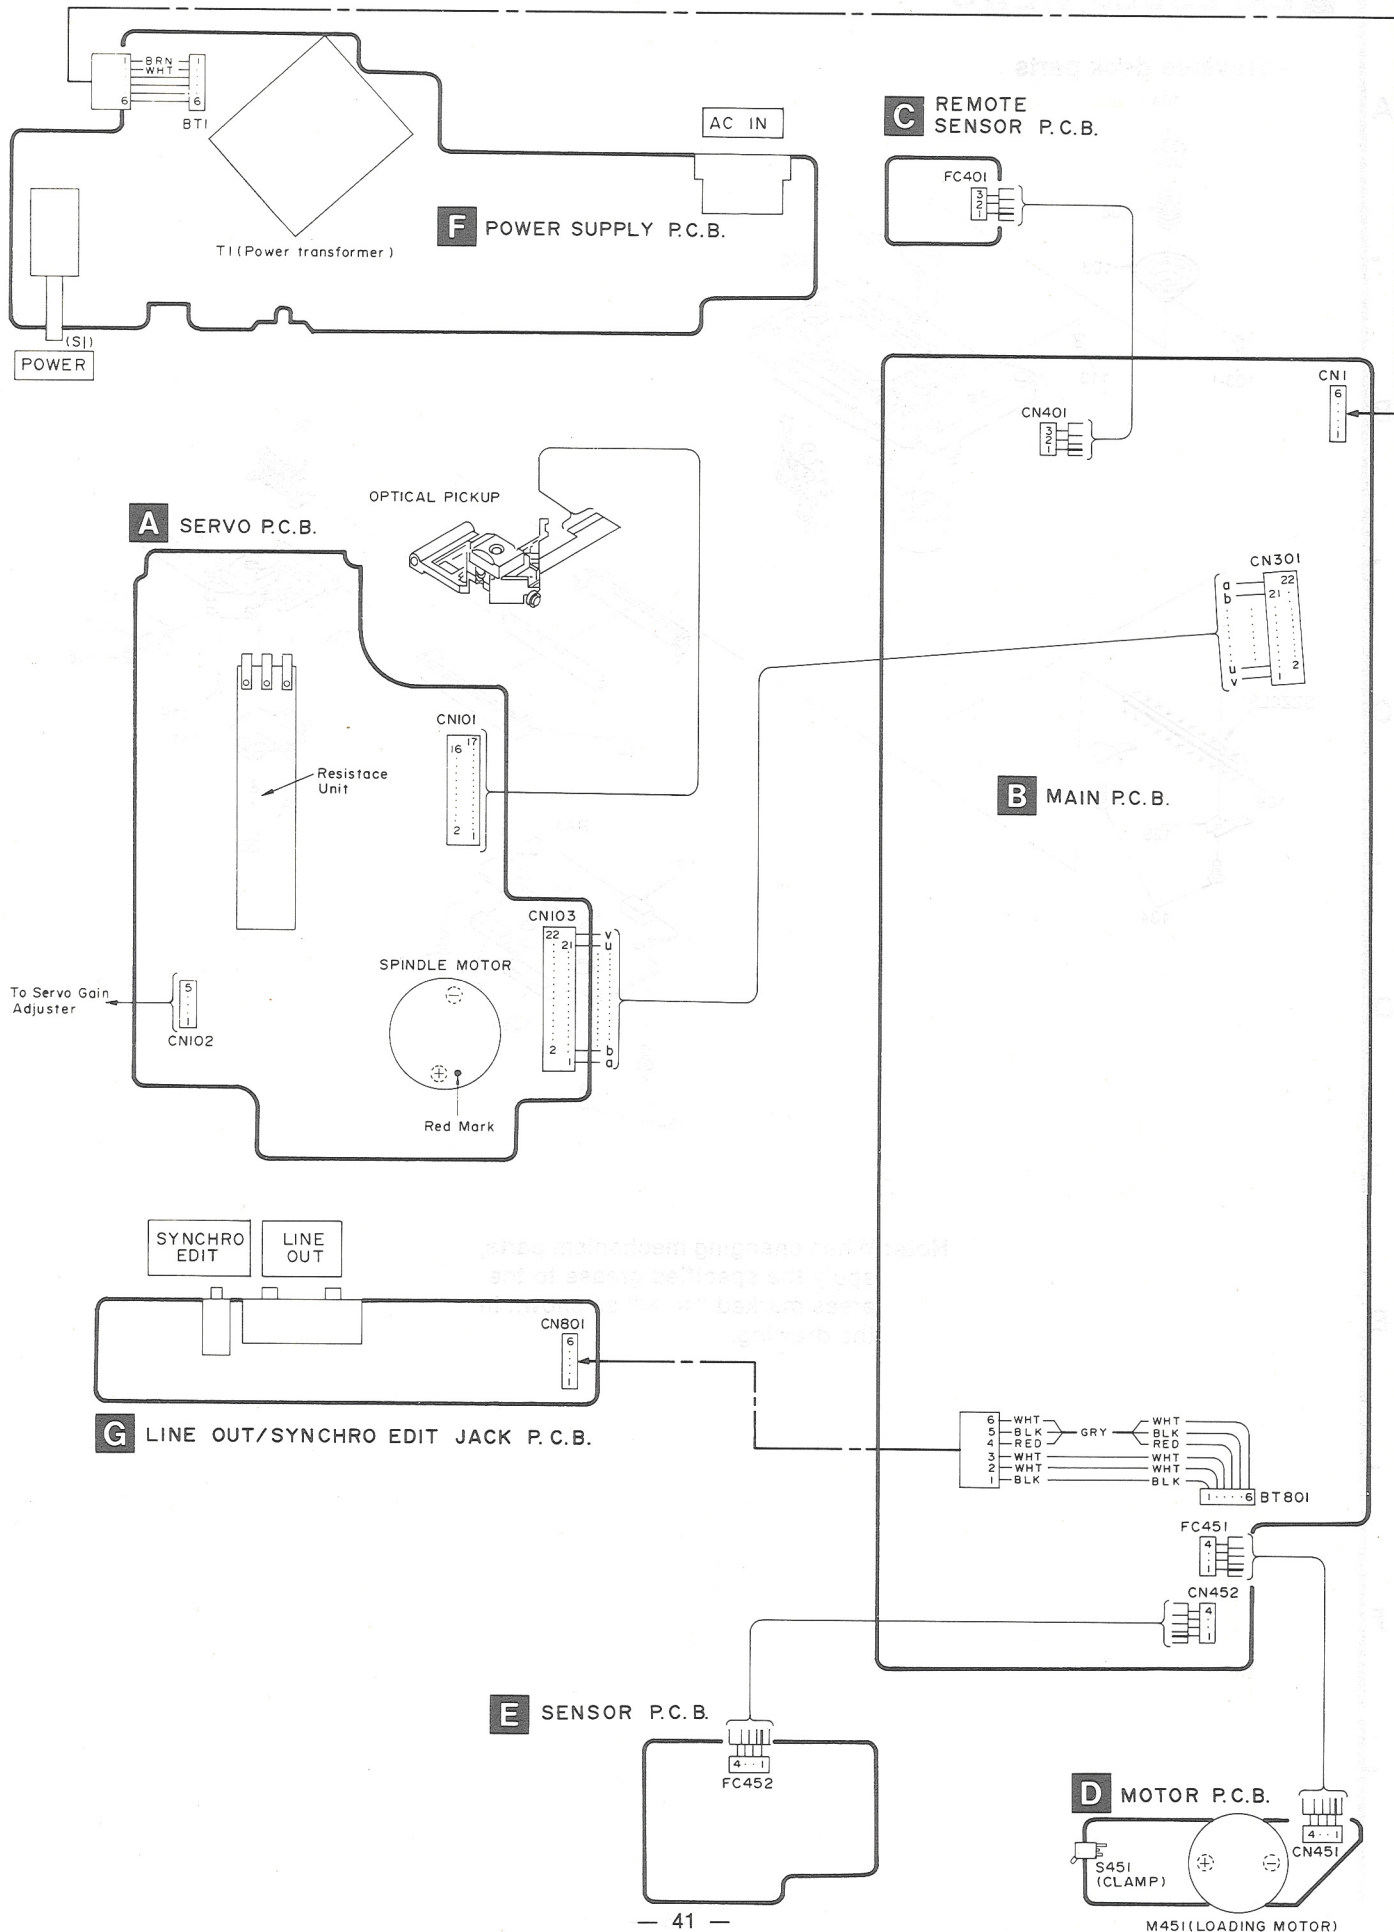



REPLACEMENT PARTS LIST

Notes : \* Important safety notice:  
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.  
\* The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)  
Parts without these indications can be used for all areas.  
\* Warning: This product uses a laser diode. Refer to caution statements on page 3.  
\* ACHTUNG:  
Die Lasereinheit nicht zerlegen.  
Die Lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

| Ref. No.  | Part No.     | Part Name & Description      | Remarks | Ref. No.  | Part No.     | Part Name & Description  | Remarks       |
|-----------|--------------|------------------------------|---------|-----------|--------------|--------------------------|---------------|
|           |              | INTEGRATED CIRCUIT(S)        |         | D351, 352 | MA4051MTA    | DIODE                    |               |
|           |              |                              |         | D404-406  | 1SS254TA     | DIODE                    |               |
|           |              |                              |         | D411-416  | 1SS254TA     | DIODE                    |               |
| IC1       | LM2940T5     | IC, REGULATOR                |         | D417      | MA4030MTA    | DIODE                    |               |
| IC301     | MN6625       | IC, DIGITAL SIGNAL PROCESSOR |         | D418      | MA4033TA     | DIODE                    |               |
| IC302     | LH5116N3     | IC, 16K RAM                  |         | D420      | 1SS254TA     | DIODE                    |               |
| IC351     | SVIBA4558F   | IC, MOTOR DRIVE&RESET        |         | D425, 426 | 1SS254TA     | DIODE                    |               |
| IC401     | MN187124PKD4 | IC, SYSTEM CONTROL           |         | D430      | MA4033TA     | DIODE                    |               |
| IC404     | BA6247N      | IC, MOTOR DRIVE              |         | D431      | 1SS254TA     | DIODE                    |               |
| IC601     | HC-MD10E     | IC, REMOTE CONTROL RECEIVER  |         | D451, 452 | SVDGP1S53    | PHOTO COUPLER            |               |
| IC801     | MN6474       | IC, DIP&D/A CONVERTER        |         | D471, 472 | MA4091-M     | DIODE                    |               |
| IC802     | LM833M63     | IC, DIFFERENTIAL AMP         |         | D801-803  | 1SS254TA     | DIODE                    |               |
| IC803     | SVIBA4558F   | IC, L. P. F.                 |         | D852-854  | 1SS254TA     | DIODE                    |               |
|           |              | IC PROTECTOR(S)              |         |           |              | COMPONENT COMBINATION(S) |               |
| ICP1, 2   | SRUN15       | IC PROTECTOR                 |         | Z301      | EXCELD35V    | COMBINATION PART         |               |
|           |              | TRANSISTOR(S)                |         | Z452, 453 | DSS36431B102 | COMBINATION PART         |               |
|           |              |                              |         | Z801, 802 | DSS36431B102 | COMBINATION PART         |               |
|           |              |                              |         | Z803      | EXCELD35V    | COMBINATION PART         |               |
| Q1        | 2SD1862QRTV6 | TRANSISTOR                   |         |           |              | COIL(S)                  |               |
| Q2        | 2SB1240-P    | TRANSISTOR                   |         |           |              |                          |               |
| Q3        | 2SB1238QSTV6 | TRANSISTOR                   |         |           |              |                          |               |
| Q351      | 2SD1862QRTV6 | TRANSISTOR                   |         | L451      | RLQZP3R3KT-Y | COIL                     |               |
| Q352      | 2SB1240-P    | TRANSISTOR                   |         | L454-457  | RLQZP3R3KT-Y | COIL                     |               |
| Q353      | UN4112       | TRANSISTOR                   |         | L471, 472 | RLQZP3R3KT-Y | COIL                     |               |
| Q401-405  | UN4212TA     | TRANSISTOR                   |         |           |              | TRANSFORMER(S)           |               |
| Q407-410  | UN4112       | TRANSISTOR                   |         |           |              |                          |               |
| Q411-413  | 2SA1309A-R   | TRANSISTOR                   |         |           |              |                          |               |
| Q415, 416 | UN4212TA     | TRANSISTOR                   |         | T1        | RTP1K4E007-V | POWER TRANSFORMER        | Δ (E)         |
| Q423      | 2SA1309A-R   | TRANSISTOR                   |         | T1        | RTP1K4B006-V | POWER TRANSFORMER        | Δ (EB, GN)    |
| Q431      | UN4212TA     | TRANSISTOR                   |         | T1        | RTP1K4G002-V | POWER TRANSFORMER        | Δ (GC, PX)    |
| Q471      | UN4212TA     | TRANSISTOR                   |         |           |              | FUSE(S)                  |               |
| Q801, 802 | 2SC3311A-Q   | TRANSISTOR                   |         |           |              |                          |               |
| Q803, 804 | 2SD1450RTA   | TRANSISTOR                   |         |           |              |                          |               |
| Q851, 852 | UN4112       | TRANSISTOR                   |         | F1        | XBA2C006TB0  | FUSE, 250V T63mA         | Δ (E, EB, GN) |
| Q853      | UN4212TA     | TRANSISTOR                   |         | F1        | XBA2C016TB0  | FUSE, 250V, T160mA       | Δ (GC, PX)    |
| Q854      | DTA114ESTP   | TRANSISTOR                   |         |           |              | OSCILLATOR(S)            |               |
|           |              | DIODE(S)                     |         |           |              |                          |               |
|           |              |                              |         | X301      | SVQ49U338S   | OSCILLATOR               |               |
| D1-5      | SVD1SR35200A | DIODE                        | Δ       |           |              | DISPLAY TUBE             |               |
| D6        | MA4270       | DIODE                        |         |           |              |                          |               |
| D7, 8     | MA4068M      | DIODE                        |         |           |              |                          |               |
| D9        | SVD1SR35200A | DIODE                        |         | FL401     | RL0049-F     | DISPLAY TUBE             |               |
| D10       | MA4062MTA    | DIODE                        |         |           |              |                          |               |
| D12       | MA723TA      | DIODE                        |         |           |              | SWITCH(ES)               |               |

| Ref. No. | Part No.     | Part Name & Description  | Remarks           | Ref. No. | Part No.     | Part Name & Description     | Remarks |
|----------|--------------|--------------------------|-------------------|----------|--------------|-----------------------------|---------|
|          |              |                          |                   | VR103    | EVND3AA00B14 | V. R, TRACKING OFFSET ADJ.  |         |
| S1       | ESB8249V     | SW, POWER                | Δ                 | VR104    | EVND3AA00B14 | V. R, FOCUS GAIN ADJ.       |         |
| S2       | SSR187-1     | SW, VOLTAGE SELECTOR     | Δ (GC, PX)        | VR105    | EVND3AA00B14 | V. R, FOCUS OFFSET ADJ.     |         |
| S419     | EVQ21405R    | SW, DISK SKIP            |                   | VR106    | EVND3AA00B24 | V. R, TRACKING BALANCE ADJ. |         |
| S451     | SSPD12       | SW, CLAMP                |                   |          |              | MAGNET RESISTOR ELEMENTS    |         |
| SW41     | RMN0067      | SWITCH BLOCK(9) S410-418 |                   |          |              |                             |         |
| SW42     | RMN0068      | SWITCH BLOCK(9) S401-409 |                   |          |              |                             |         |
|          |              | CABLE(S)                 |                   | RA1      | EWS7M0A00Q53 | RESISTANCE UNIT             |         |
|          |              |                          |                   |          |              |                             |         |
| BT1      | REX0165      | FLAT CABLE               |                   |          |              |                             |         |
| BT801    | REX0194      | FLAT CABLE               |                   |          |              |                             |         |
|          |              | CONNECTOR(S)             |                   |          |              |                             |         |
|          |              |                          |                   |          |              |                             |         |
| CN1      | EMCS0660MT6  | CONNECTOR(6P)            |                   |          |              |                             |         |
| CN301    | SJSD2221     | CONNECTOR(22P)           |                   |          |              |                             |         |
| CN401    | SJSD0305     | CONNECTOR(3P)            |                   |          |              |                             |         |
| CN451    | RJS4T7ZA     | CONNECTOR(4P)            |                   |          |              |                             |         |
| CN452    | SJSD0405     | CONNECTOR(4P)            |                   |          |              |                             |         |
| CN801    | RJP6G28ZA    | CONNECTOR(6P)            |                   |          |              |                             |         |
| FC401    | REZ0222      | FLAT CABLE               |                   |          |              |                             |         |
| FC451    | REX0029-1    | FLAT CABLE               |                   |          |              |                             |         |
| FC452    | REZ0011      | FLAT CABLE               |                   |          |              |                             |         |
|          |              | HOLDER                   |                   |          |              |                             |         |
|          |              |                          |                   |          |              |                             |         |
| K401     | RMN0014-1    | FL HOLDER                |                   |          |              |                             |         |
|          |              | JACKS                    |                   |          |              |                             |         |
|          |              |                          |                   |          |              |                             |         |
| JK1      | SJS9236      | AC INLET                 | Δ (E, EB, GC, PX) |          |              |                             |         |
| JK1      | SJSD16       | AC INLET                 | Δ (GN)            |          |              |                             |         |
| JK402    | RJJ33T01     | SYNCHRO EDIT             |                   |          |              |                             |         |
| JK801    | RJH3201N     | LINE OUT                 |                   |          |              |                             |         |
|          |              | <SERVO P. C. B>          |                   |          |              |                             |         |
|          |              | INTEGRATED CIRCUITS      |                   |          |              |                             |         |
| IC101    | AN8373S      | IC, SERVO AMP            |                   |          |              |                             |         |
| IC102    | AN8374S      | IC, SERVO PROCESSOR      |                   |          |              |                             |         |
| IC103    | AN8377N      | IC, B. T. L. DRIVE       |                   |          |              |                             |         |
|          |              | TRANSISTORS              |                   |          |              |                             |         |
|          |              |                          |                   |          |              |                             |         |
| Q101     | 2SA1547QSTV2 | TRANSISTOR               |                   |          |              |                             |         |
| Q102     | 2SB1240 -P   | TRANSISTOR               |                   |          |              |                             |         |
|          |              | VARIABLE RESISTORS       |                   |          |              |                             |         |
|          |              |                          |                   |          |              |                             |         |
| VR101    | EVND3AA00B14 | V. R, BEST EYE ADJ.      |                   |          |              |                             |         |
| VR102    | EVND3AA00B14 | V. R, TRACKING GAIN ADJ. |                   |          |              |                             |         |



| Ref.No. | Part No.      | Part Name & Description      | Remarks  |
|---------|---------------|------------------------------|----------|
|         |               | CABINET AND CHASSIS          |          |
| 1       | RKC0002       | HINGE                        |          |
| 2       | REZ0218       | FLAT CABLE (22P)             |          |
| 3       | RGK0060       | FOOT                         |          |
| 4       | RFKK LPC25E-K | CABINET ASS'Y                | (E)      |
| 4       | RFKK LPC25EBK | CABINET ASS'Y                | (EB, GN) |
| 4       | RFKK LPC25GCK | CABINET ASS'Y                | (GC)     |
| 4       | RFKK LPC25PKK | CABINET ASS'Y                | (PX)     |
| 5       | RGQ0012A      | CLAMP COVER                  |          |
| 6       | RGT0001       | ROTARY TRAY                  |          |
| 7       | RGU0030       | BUTTON, POWER                |          |
| 8       | RGU0073       | BUTTON, SKIP                 |          |
| 9       | RGU0388A-1    | BUTTON, MAIN                 |          |
| 10      | RGU0389A      | BUTTON, SUB                  |          |
| 11      | RKQ0007       | VOLUME COVER                 |          |
| 12      | RKQ0008       | TRAY HOLDER                  |          |
| 13      | RMA0062       | EARTH PLATE                  |          |
| 14      | RMA0305-1     | HOLDER, MAIN BUTTON          |          |
| 15      | RMA0306       | HOLDER, SUB BUTTON           |          |
| 16      | RMC0079       | EARTH PLATE                  |          |
| 17      | RME0027       | LOCK LEVER SPRING            |          |
| 18      | RME0028       | SET LEVER SPRING             |          |
| 19      | RML0048-2     | LOCK LEVER                   |          |
| 20      | RMM0015       | POWER BUTTON ROD             |          |
| 21      | RMA0059       | CLAMP PLATE                  |          |
| 22      | RMR0098-1     | CLAMPER                      |          |
| 23      | SOMD8         | MAGNET                       |          |
| 24      | SOYD2         | YOKE                         |          |
| 25      | RXL0008-1     | SET LEVER ASS'Y              |          |
| 26      | RKU0004-4     | BOTTOM BOARD                 |          |
| 27      | RSC0031-1     | SHIELD PLATE                 |          |
| 28      | SHG3020       | FOOT RUBBER                  |          |
| 29      | SHRD170       | COVER, REMOTE CONTROL SENSOR |          |
| 30      | RYF0082       | DUST COVER                   |          |
| 31      | RMG0146       | RUBBER CUSHION               |          |
| 32      | RMS0228       | GUIDE SHAFT                  |          |
| 33      | RMB0037       | GUIDE SPRING                 |          |
| 34      | RMG0091       | CUSHION RUBBER               |          |
| 35      | RMK0098       | GUIDE PLATE                  |          |
| 36      | RMR0079-1     | TRAVERSE SPACER              |          |
| 37      | RMS0229       | ROLLER SHAFT                 |          |
| 38      | SHGD153-1     | FLOATING RUBBER              |          |
| 39      | SUSD136-3     | FLOATING SPRING A            |          |
| 40      | SUSD137-1     | FLOATING SPRING B            |          |
| 41      | SUSD145-1     | FLOATING SPRING C            |          |
| 42      | XUC3FY        | E. RING                      |          |
| 43      | RFKPLPC362PK  | MOTOR ASS'Y (M451)           |          |
| 44      | RDG0035-1     | MAIN GEAR                    |          |
| 45      | RDG0037       | DRIVE GEAR                   |          |
| 46      | RDG0130       | PULLEY GEAR                  |          |


| Ref.No. | Part No.     | Part Name & Description | Remarks |
|---------|--------------|-------------------------|---------|
| 47      | RDK0009      | ELEVATOR CAM            |         |
| 48      | RMCO007      | CONTROL SPRING          |         |
| 49      | RMQ0155      | GUIDE SHAFT BASE        |         |
| 50      | RXK0086      | MECH. CHASSIS ASS'Y     |         |
| 51      | RXL0009      | MAIN ARM ASS'Y          |         |
| 51-1    | RDG0036      | COMPONENT GEAR          |         |
| 51-2    | RMB0036-1    | SPRING                  |         |
| 51-3    | RXL0010      | MAIN ARM                |         |
| 51-4    | SHWD27       | WASHER                  |         |
| 52      | RMK0029-2    | SW INSTALLATION HOLDER  |         |
| 53      | RML0044-1    | SW LEVER                |         |
| 54      | SMBD6        | BELT                    |         |
| 55      | SJT388       | FUSE HOLDER             |         |
|         |              | SCREWS                  |         |
| N1      | XTB3+8JFZ    | SCREW                   |         |
| N2      | XTB3+10JFZ   | SCREW                   |         |
| N3      | XTB3+14J     | SCREW                   |         |
| N4      | XTB3+8G      | SCREW                   |         |
| N5      | XTW3+8T      | SCREW                   |         |
| N6      | XYN3+F8      | SCREW                   |         |
| N7      | RHD30004     | SCREW                   |         |
| N8      | RHD30005     | SCREW                   |         |
| N9      | XYN26+C4     | SCREW                   |         |
|         |              | CABINET <TRVERSE DECK>  |         |
| 102     | SISD22-1     | TRAVERSE BASE           |         |
| 103     | SDOD28-1E    | TURNTABLE               |         |
| 103-1   | XXE26D5      | SCREW                   |         |
| 104     | SDOD29-2     | RING                    |         |
| 106     | SRQA010N04   | SPRING                  |         |
| 107     | SORD37       | ROLLER                  |         |
| 108     | SORD38-E     | COIL                    |         |
| 109     | SUXD123-1    | GUIDE SHAFT             |         |
| 110     | SOAD70A      | OPTICAL PICKUP          | △       |
| 111     | SHRD176-E    | COIL HOLDER             |         |
| 113     | SHGD148      | STOPPER                 |         |
| 114     | SOYD21-E     | YOKE                    |         |
| 115     | SOYD22       | YOKE                    |         |
| 116     | SHRD177-1    | LOCK UNIT               |         |
| 117     | SHWD33       | WASHER                  |         |
| 118     | SHWD34       | WASHER                  |         |
| 119     | SNSD31       | SCREW                   |         |
| 120     | XTN2+5G      | SCREW                   |         |
| 121     | XYN2+C8      | SCREW                   |         |
| 129     | SUWD112      | GUIDE SHAFT HOLDER      |         |
| 134     | XTB3+10G     | SCREW                   |         |
| 149     | SJGDRF310T-2 | SPINDLE MOTOR           |         |
| 157     | SJSD1722M    | SOCKET (17P)            |         |
| 158     | SJSD2222M    | SOCKET (22P)            |         |

| Ref.No. | Part No.     | Part Name & Description     | Remarks         |
|---------|--------------|-----------------------------|-----------------|
| 161     | EMCS0552MP   | CONNECTOR (5P)              |                 |
|         |              | PACKING MATERIAL            |                 |
| P1      | RPG0624      | PACKING CASE                | (E, EB, GC, GN) |
| P1      | RPG0491      | PACKING CASE                | (PX)            |
| P2      | RPNO338A     | PAD (FRONT)                 |                 |
| P3      | RPNO338B     | PAD (BACK)                  |                 |
| P5      | RPQ0017-3    | CLAMPER                     |                 |
| P6      | SPB1061      | PROTECTION BAG (F. B. )     |                 |
| P7      | RPF0024      | PROTECTION BAG (DUST COVER) |                 |
| P8      | XZB26X17C03  | PROTECTION BAG (CORD)       |                 |
| P9      | XZB60X60A01  | PROTECTION BAG (UNIT)       |                 |
|         |              | ACCESSORIES                 |                 |
| A1      | RFKSLPC25E-K | INST. MANUAL ASS'Y          | (E)             |
| A1      | RQT0665-B    | INSTRUCTION MANUAL          | (EB)            |
| A1      | RQT0666-G    | INSTRUCTION MANUAL          | (GC, GN)        |
| A1      | RQT0502-P    | INSTRUCTION MANUAL          | (PX)            |
| A2      | RQA0013      | WARRANTY CARD               | (E, EB, GC)     |
| A2      | SQX7186      | WARRANTY CARD               | (GN)            |
| A2      | SQX7071-1    | WARRANTY CARD               | (PX)            |
| A3      | SJA187       | POWER CORD                  | △ (E)           |
| A3      | SJA193       | POWER CORD                  | △ (EB)          |
| A3      | RJA0004      | POWER CORD                  | △ (GC, PX)      |
| A3      | SJA173       | POWER CORD                  | △ (GN)          |
| A4      | SJP2249-3    | STEREO CONNECTION CABLE     |                 |
| A5      | EUR64789B    | REMOTE CONTROL TRANSMITTER  |                 |
| A6      | UR64EC804    | BATTERY COVER               |                 |
| A7      | RQCA0024     | CAUTION CARD                |                 |
| A8      | RYF0082      | DUST COVER                  |                 |
| A9      | SJP9215      | AC PLUG ADAPTOR             | △ (GC, PX)      |



# EXPLODED VIEWS

## • Traverse deck parts

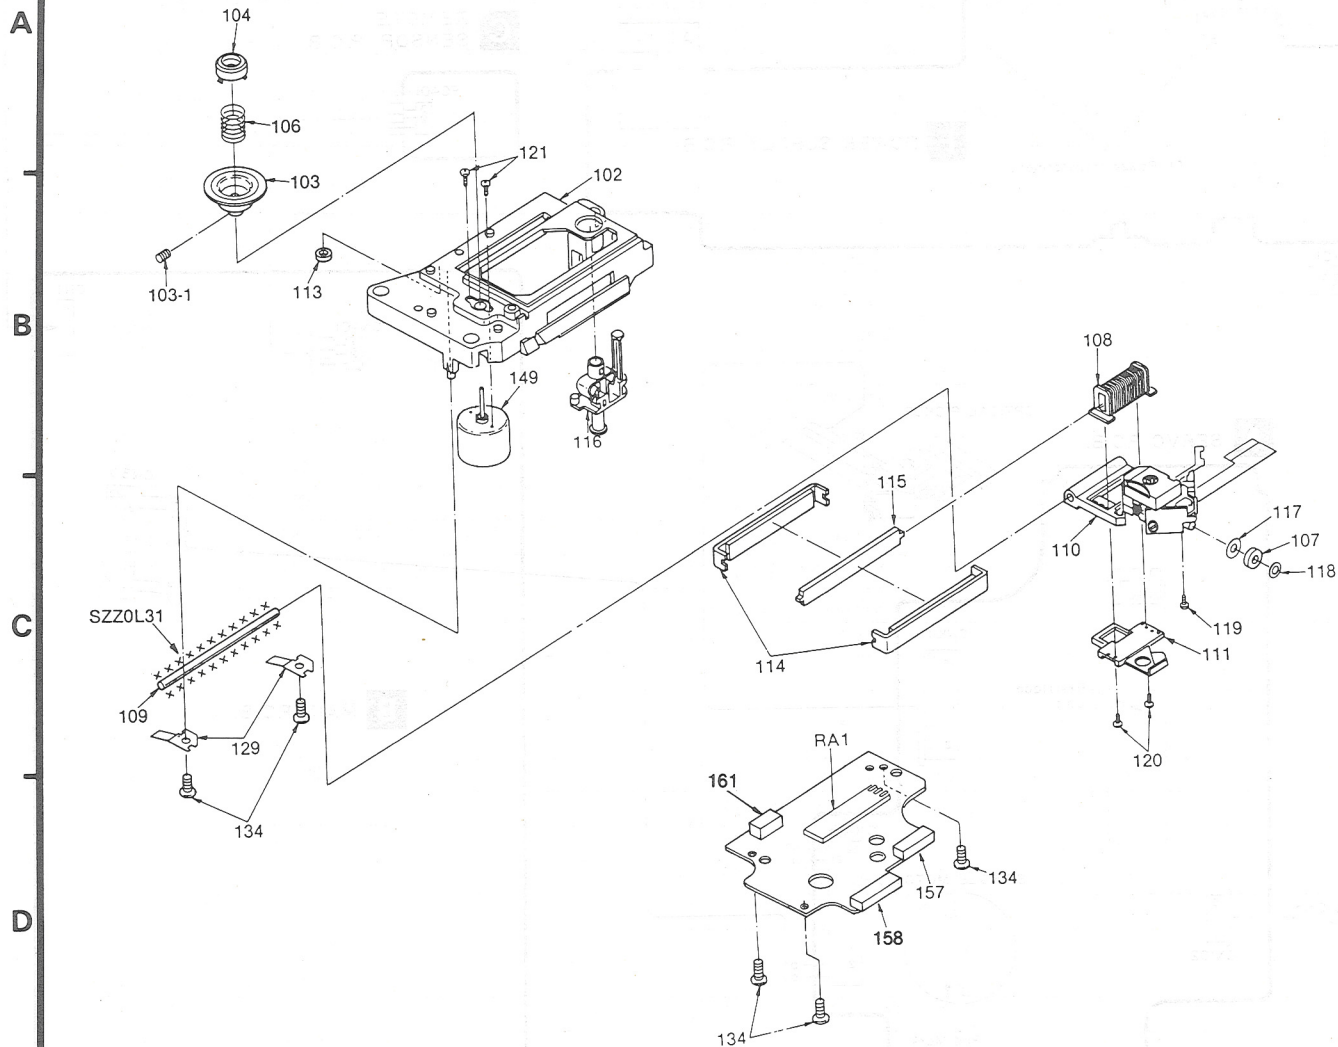

**Note:** When changing mechanism parts, apply the specified grease to the areas marked "x x" as shown in the drawing.



[illegible]



## RESISTORS & CAPACITORS


Notes : \* Capacity value are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)  
\* Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM) , 1M=1,000k (OHM)

| Ref. No.  | Part No.    | Values & Remarks | Ref. No.  | Part No.     | Values & Remarks | Ref. No.  | Part No.     | Values & Remarks |
|-----------|-------------|------------------|-----------|--------------|------------------|-----------|--------------|------------------|
|           |             | RESISTORS        |           |              |                  |           |              |                  |
| R1, 2     | ERDS2TJ151  | 1/4W 150         | R827, 828 | ERDS2TJ473   | 1/4W 47K         | C821, 822 | ECFR1E104ZF5 | 25V 0.1U         |
| R3, 4     | ERDS2TJ470  | 1/4W 47          | R829, 830 | ERDS2TJ471   | 1/4W 470         | C823, 824 | ECEA0JU331B  | 6.3V 330U        |
| R5        | ERDS2TJ222  | 1/4W 2.2K        | R831-834  | ERDS2TJ102   | 1/4W 1K          | C825, 826 | ECFR1E104ZF5 | 25V 0.1U         |
| R6        | ERDS2TJ472  | 1/4W 4.7K        | R835, 836 | ERDS2TJ331   | 1/4W 330         | C827, 828 | ECEA1AK101   | 10V 100U         |
| R7        | ERDS2TJ392T | 1/4W 3.9K        | R839, 840 | ERDS2TJ221   | 1/4W 220         | C829      | ECFR1E104ZF5 | 25V 0.1U         |
| R303      | ERDS2TJ561  | 1/4W 560         | R851      | ERDS2TJ472   | 1/4W 4.7K        | C851      | ECEA1CK100B  | 16V 10U          |
| R337      | ERDS2TJ472  | 1/4W 4.7K        | R852      | ERDS2TJ102   | 1/4W 1K          | C852      | ECEA0JU102   | 6.3V 1000U       |
| R351      | ERDS2TJ103  | 1/4W 10K         | R853      | ERDS2TJ471   | 1/4W 470         | C1001     | ECKWKC103PF2 | 400V 0.01U Δ     |
| R352      | ERDS2TJ154  | 1/4W 150K        | R854      | ERDS2TJ472   | 1/4W 4.7K        |           |              | <SERVO P.C.B>    |
| R353      | ERDS2TJ123  | 1/4W 12K         | R855      | ERDS2TJ102   | 1/4W 1K          |           |              |                  |
| R354      | ERDS2TJ154  | 1/4W 150K        |           |              | CAPACITORS       |           |              | RESISTORS        |
| R355, 356 | ERDS2TJ333  | 1/4W 33K         | C1-3      | ECKT1H223ZF  | 50V 0.022U       | R101      | ERDS2TJ471   | 1/4 470          |
| R357      | ERDS2TJ8R2T | 1/4W 8.2         | C4        | ECEA1CU332   | 16V 3300U        | R102      | ERJ6GEYJ120V | 1/10 12          |
| R358, 359 | ERDS2TJ101  | 1/4W 100         | C5        | ECEA1CU222   | 16V 2200U        | R103      | ERJ6GEYJ122  | 1/10 1.2K        |
| R409, 410 | ERDS2TJ472  | 1/4W 4.7K        | C6        | ECEA1JU470BV | 63V 47U          | R104      | ERJ6GEYJ471  | 1/10 470         |
| R414      | ERDS2TJ562  | 1/4W 5.6K        | C7-9      | ECBT1E223ZF  | 25V 0.022U       | R105, 106 | RRJ6GCJ102TE | 1/6 1K           |
| R416      | ERDS2TJ103  | 1/4W 10K         | C10, 11   | ECEA1AU471   | 10V 470U         | R108      | ERJ6GEYJ224V | 1/10 220K        |
| R418-423  | ERDS2TJ2R7T | 1/4W 2.7         | C12, 13   | ECEA1AK101   | 10V 100U         | R110      | ERDS2TJ222   | 1/4 2.2K         |
| R424, 425 | ERDS2TJ223  | 1/4W 22K         | C15       | ECEA0JK221B  | 6.3V 220U        | R111      | ERJ6GEYJ154V | 1/10 150K        |
| R426, 427 | ERDS2TJ123  | 1/4W 12K         | C20       | ECFR1E104ZF5 | 25V 0.1U         | R113      | ERJ6GEYJ472V | 1/10 4.7K        |
| R428      | ERDS2TJ103  | 1/4W 10K         | C301      | ECEA0JK101   | 6.3V 100U        | R114      | ERJ6GEYJ683V | 1/10 68K         |
| R429      | ERDS2TJ471  | 1/4W 470         | C302      | ECFR1E104ZF5 | 25V 0.1U         | R116      | ERJ6GEYJ332V | 1/10 3.3K        |
| R430      | ERDS2TJ102  | 1/4W 1K          | C303      | ECBT1H6R8K5  | 50V 6.8P         | R117      | ERJ6GEYJ123  | 1/10 12K         |
| R431      | ERDS2TJ472  | 1/4W 4.7K        | C304      | ECEA0JU331B  | 6.3V 330U        | R118      | ERJ6GEYJ333V | 1/10 33K         |
| R432      | ERDS2TJ101  | 1/4W 100         | C305      | ECFR1E104ZF5 | 25V 0.1U         | R119      | RRJ6GCJ223TE | 1/6 22K          |
| R433      | ERDS2TJ153  | 1/4W 15K         | C306      | ECEA0JK101   | 6.3V 100U        | R122      | ERDS2TJ104   | 1/4 100K         |
| R434      | ERDS2TJ393  | 1/4W 39K         | C307      | ECFR1E104ZF5 | 25V 0.1U         | R123      | ERJ6GEYJ470V | 1/10 47          |
| R435      | ERDS2TJ102  | 1/4W 1K          | C330, 331 | ECBT1H5R6K5  | 50V 5.6P         | R124      | RRJ6GCJ103TE | 1/6 10K          |
| R436      | ERDS2TJ223  | 1/4W 22K         | C351-353  | ECBT1H102KB5 | 50V 1000P        | R125      | RRJ6GCJ222TE | 1/6 2.2K         |
| R437      | ERDS2TJ123  | 1/4W 12K         | C354      | ECBT1E103ZF  | 25V 0.01U        | R127      | ERDS2TJ681   | 1/4 680          |
| R438-441  | ERDS2TJ103  | 1/4W 10K         | C401      | ECFR1E104ZF5 | 25V 0.1U         | R128      | RRJ6GCJ103TE | 1/6 10K          |
| R442      | ERDS2TJ221  | 1/4W 220         | C402      | ECEA0JK470   | 6.3V 47U         |           |              | CAPACITORS       |
| R447-450  | ERDS2TJ472  | 1/4W 4.7K        | C405, 406 | ECBT1E223ZF  | 25V 0.022U       | C101      | ECEA1CKS220I | 16V 22U          |
| R451, 452 | ERDS2TJ473  | 1/4W 47K         | C407      | ECEA0JK101   | 6.3V 100U        | C102      | ECEA1HKS010I | 50V 1U           |
| R471, 472 | ERDS2TJ102  | 1/4W 1K          | C408, 409 | ECFR1E104ZF5 | 25V 0.1U         | C103      | ECEA1CKS220I | 16V 22U          |
| R473      | ERDS2TJ273  | 1/4W 27K         | C410      | ECEA1HK010B  | 50V 1U           | C106      | RCUV1E104ZF  | 25V 0.1U         |
| R801-804  | ERDS2TJ103  | 1/4W 10K         | C414      | ECBT1E223ZF  | 25V 0.022U       | C107      | ECEA0GKS101I | 4V 100U          |
| R805-808  | ERDS2TJ273  | 1/4W 27K         | C430      | ECFR1E104ZF5 | 25V 0.1U         | C108      | ECEA0JKS470I | 6.3V 47U         |
| R809-812  | ERDS2TJ473  | 1/4W 47K         | C431      | ECEA1HK010B  | 50V 1U           | C109      | ECEA1HKS010I | 50V 1U           |
| R813, 814 | ERDS2TJ102  | 1/4W 1K          | C471, 472 | ECBT1E103ZF  | 25V 0.01U        | C110      | RCUV1H681KB  | 50V 680P         |
| R815, 816 | ERDS2TJ104  | 1/4W 100K        | C801-804  | ECBT1H680J5  | 50V 68P          | C111      | ECUV1C224KR  | 16V 0.22U        |
| R817, 818 | ERDS2TJ391  | 1/4W 390         | C805-808  | ECBT1H470J5  | 50V 47P          | C112      | RCUV1H331KB  | 50V 330P         |
| R819, 820 | ERDS2TJ103  | 1/4W 10K         | C809, 810 | ECQM1H333JZ  | 50V 0.033U       | C113      | ECEA1HSN010I | 50V 1U           |
| R821, 822 | ERDS2TJ123  | 1/4W 12K         | C811, 812 | ECQM1H102KF3 | 50V 1000P        | C114      | RCUV1E333KB  | 25V 0.033U       |
| R823, 824 | ERDS2TJ562  | 1/4W 5.6K        | C813, 814 | ECBT1H101KB5 | 50V 100P         | C115      | ECEA1HSN010I | 50V 1U           |
| R825, 826 | ERDS2TJ471  | 1/4W 470         | C815, 816 | ECEA1AKN220B | 10V 22U          |           |              |                  |
|           |             |                  | C819, 820 | ECBT1H471KB5 | 50V 470P         |           |              |                  |


| Ref. No.  | Part No.     | Values & Remarks | Ref. No.  | Part No.     | Values & Remarks | Ref. No. | Part No.     | Values & Remarks |
|-----------|--------------|------------------|-----------|--------------|------------------|----------|--------------|------------------|
| C116      | RCUV1E333KB  | 25V 0.033U       | C128      | ECEA1CKA101I | 16V 100U         | C141-144 | RCUV1H470KC  | 50V 47U          |
| C117      | ECBT1H102KB5 | 50V 0.001U       | C132      | ECUV1E104KB  | 25V 0.1U         | C145     | ECEA0JKF101I | 6.3V 100U        |
| C119, 120 | ECEA1CKN4R7I | 16V 4.7U         | C133      | RCUV1H330KC  | 50V 33P          | C146     | RCUV1H181KC  | 50V 180P         |
| C122      | ECEA0JKS220I | 6.3V 22U         | C134, 135 | ECUV1C224KR  | 16V 0.22U        | C147     | RCUV1H472KB  | 50V 0.0047U      |
| C123      | RCUV1E104ZF  | 25V 0.1U         | C136      | ECEA0GKS101I | 4V 100U          | C148     | ECEA1ESN4R7I | 25V 4.7U         |
| C124      | ECUV1E823KB  | 25V 0.082U       | C138      | RCUV1E104ZF  | 25V 0.1U         | C149     | RCUV1E104ZF  | 25V 0.1U         |
| C125      | ECUV1C224KR  | 16V 0.22U        | C139      | RCUV1H470KC  | 50V 47P          | C150     | RCUV1E103KB  | 25V 0.01U        |
| C127      | ECEA0JKF101I | 6.3V 100U        | C140      | RCUV1E103KB  | 25V 0.01U        |          |              |                  |

## PACKING

(Parts list on page 45.)


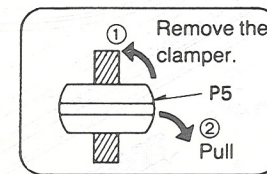


Soft cloth or similar material  
(to prevent scratches)

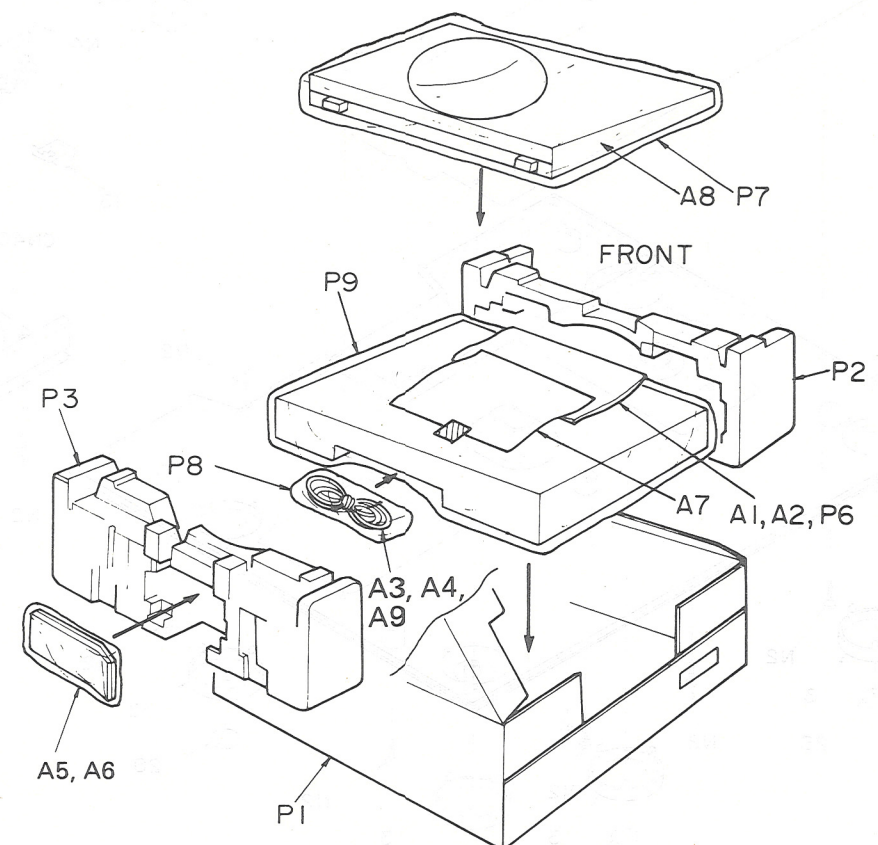



■ TROUBLESHOOTING FLOW CHART

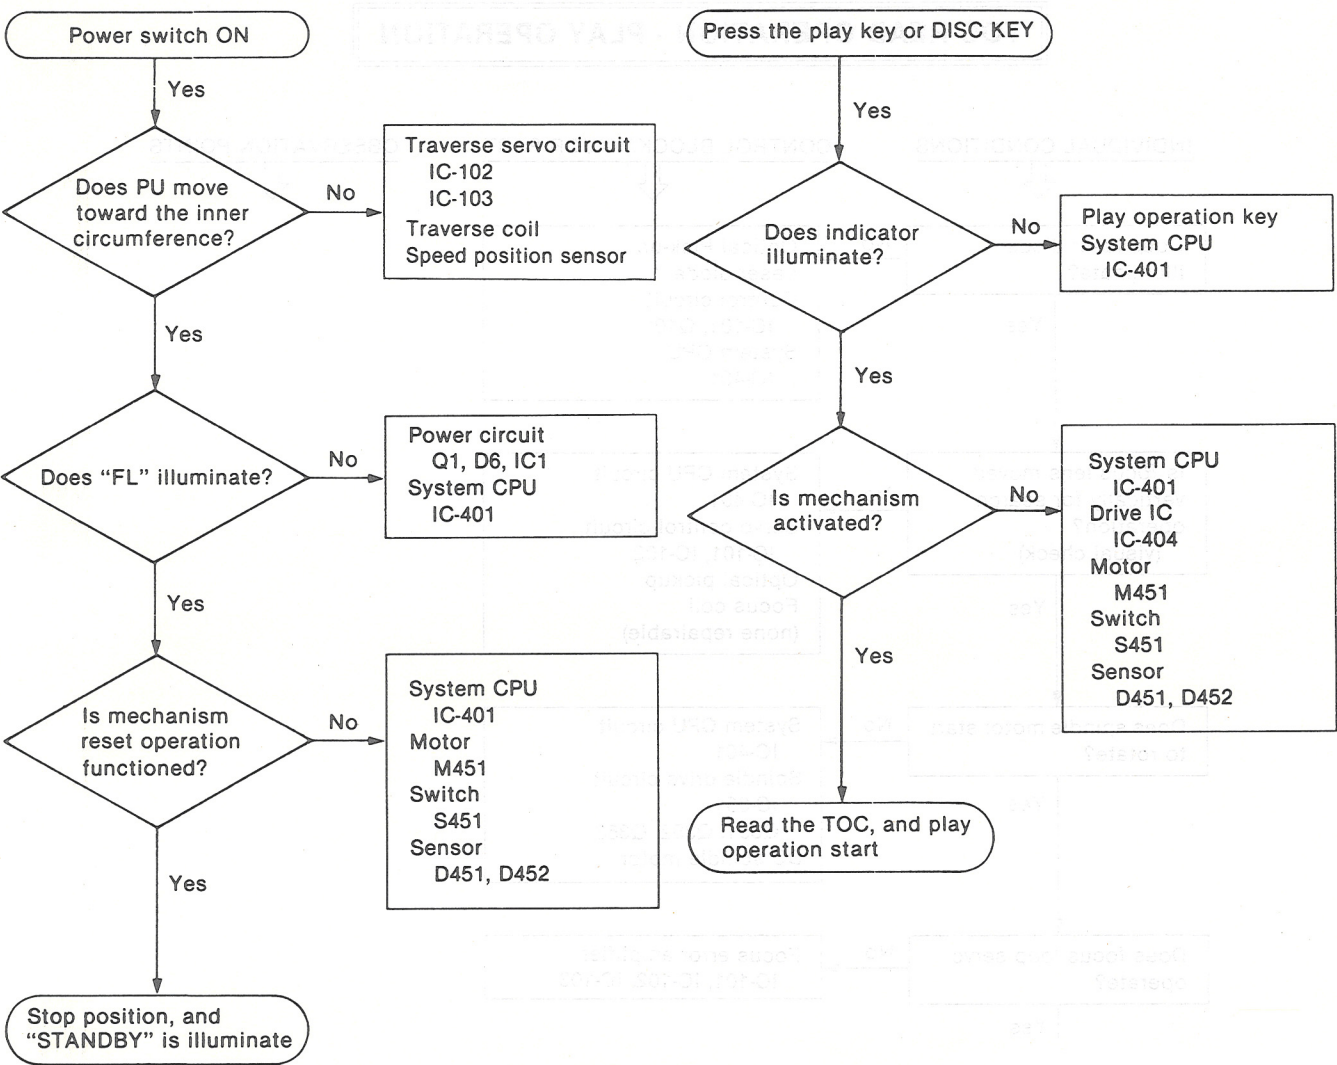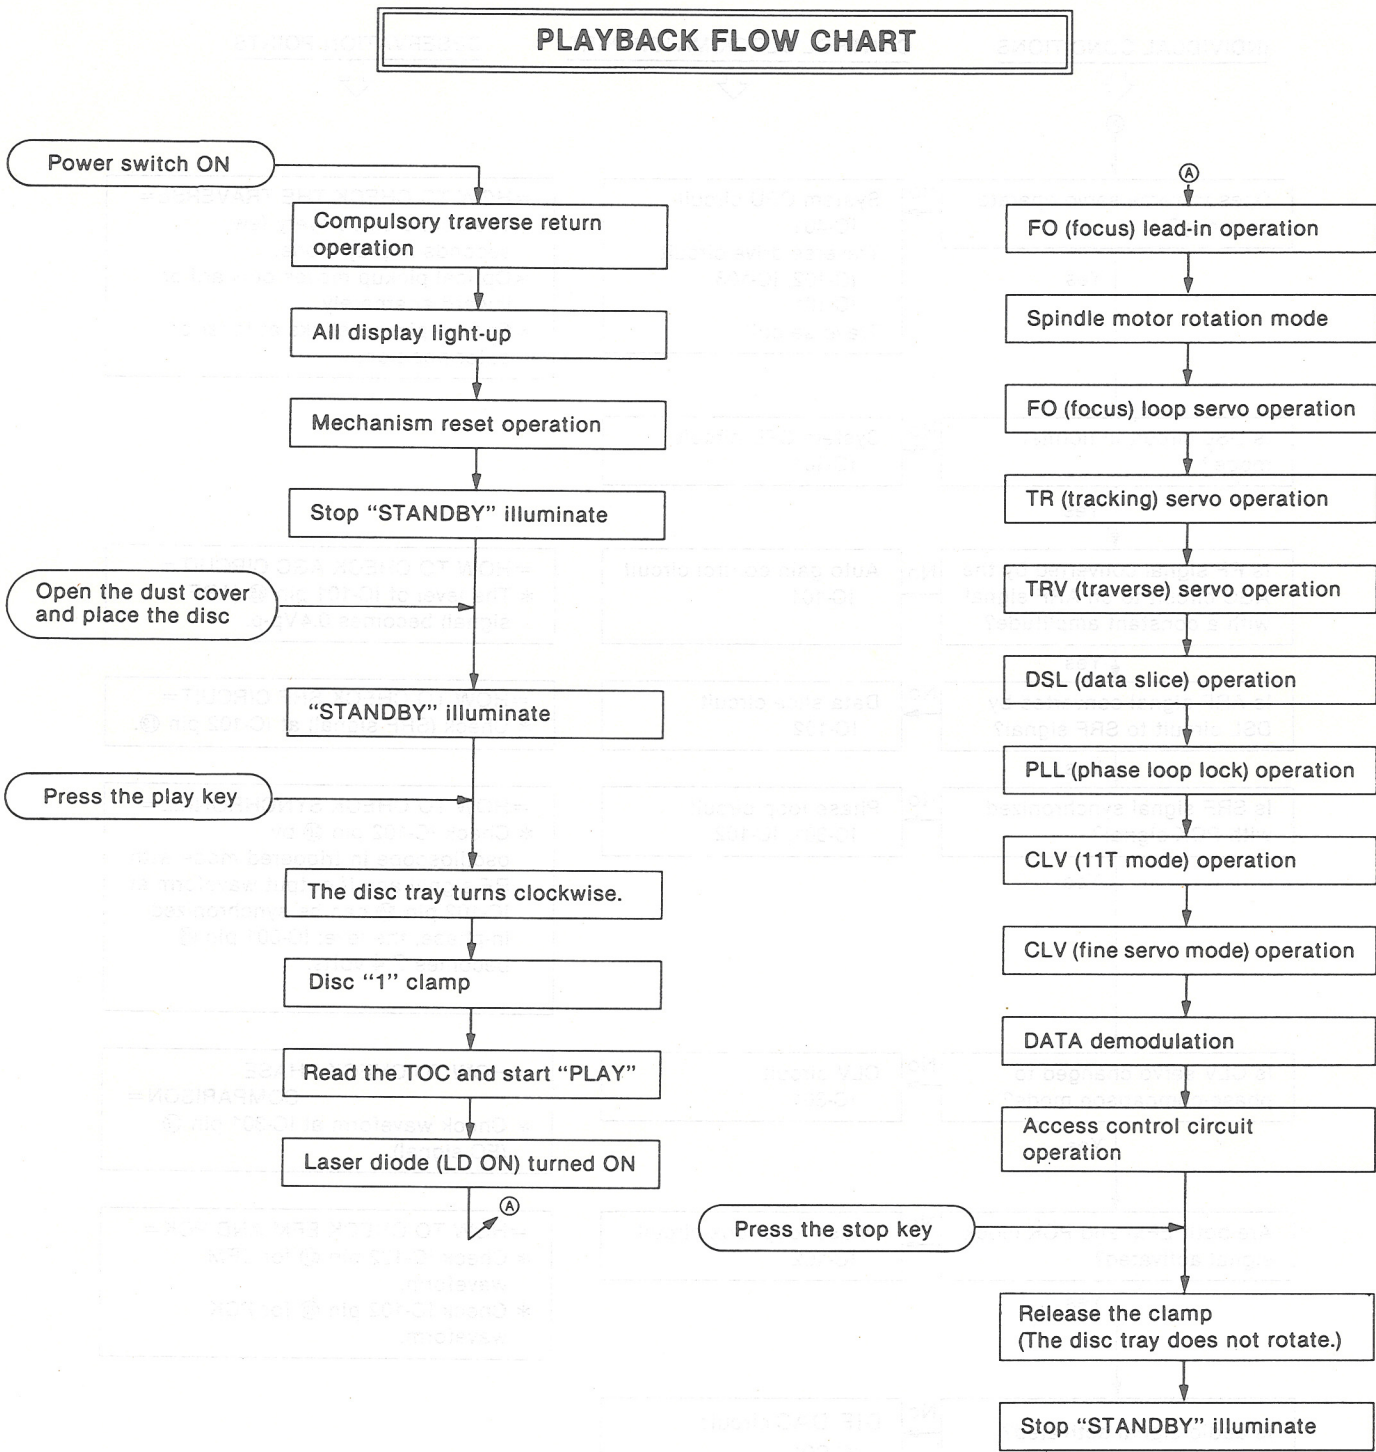



# TOC READ OPERATION - PLAY OPERATION

